DN-13005/DN-13015

2 USB 2.0 Hi-Speed Ports MFP Server

User`s Manual

Version 1.24

Table of Contents

DN-13005/DN-13015 1

CHAPTER1 INTRODUCTION **4**

1.1 About this Manual *4*
1.2 Support Services *4*

CHAPTER2 PRODUCT OVERVIEW **4**

2.1 Package Contents *4*
2.2 Product CD *4*
2.2.1 Start-up Procedures for Windows *5*
2.3 Physical Description *6*
2.4 Installation Methods *6*
2.4.1 Installation and Integration *6*
2.4.2 Configuration and Management *7*
2.5 Features and Benefits *7*

CHAPTER3 BASIC INSTALLATION **8**

3.1 Connecting the Hardware *8*
3.2 Wireless connection *8*
3.2.1 Preliminary *8*
3.2.2 Ethernet Address *8*
3.2.3 Set Wireless Configuration Using Server's Web Pages *12*
3.3 Assigning an IP Address to the Server *16*
3.3.1 Preliminary *16*
3.3.2 Ethernet Address *17*
3.3.3 IP Address *17*
3.3.4 Methods for Setting the IP Address *17*
3.3.5 Host Names and Host Name Rules *17*
3.3.6 Setting the IP Address Using DHCP *17*
3.3.7 Setting the IP Address Using the Control Center *18*
3.3.8 Setting the IP Address Using the Server's Web Pages *19*
3.4 Naming Your USB Devices *21*
3.4.1 Printer Names *21*
3.4.2 Storage Names *23*
3.4.3 Scanner Names *23*

CHAPTER4 ADDING PRINTERS IN WINDOWS **24**

4.1 Overview of Installation Methods *24*
4.2 Connecting the Server *24*
4.2.1 The Server and Windows PC on Same LAN *25*
4.2.2 The Server and Windows PC on Different LANs *25*
4.3 Setting up Local Windows Printer Driver *25*
4.4 Adding Network Printers in Windows *26*
4.4.1 Using Standard Windows Methods for LPR Printing Protocol *26*
4.4.2 Using Control Center for LPR Printing *30*
4.4.3 Using Standard Windows Method for Raw TCP Printing *31*
4.4.4 Using Control Center for Raw TCP/JetDirect Printing *33*
4.4.5 Using Standard Windows Methods for SMB/CIFS Printing *34*
4.4.6 Using Control Center for SMB/CIFS Printing *35*
4.4.7 Using Standard Windows Method for IPP Printing *37*

CHAPTER5 ADDING PRINTERS IN UNIX/LINUX 39

5.1 Configuring Host File 39
5.2 Printing by LPD/LPR 39
5.3 Using the Server on BSD UNIX/Linux 39
5.4 Using the Server on RedHat Linux (Fedora Core) 40

CHAPTER6 FILE SERVER FUNCTION 47

6.1 Preliminary 47
6.2 Storage Names 47
6.3 Connecting USB Mass Storage to the Server 47
6.4 Supported Codepages 48
6.5 Adding Your USB Mass Storages to Network with Security 50
6.5.1 Setting up File Server Using Control Center 50
6.5.2 Setting up File Server Using Web Pages 52
6.5.3 Use Shared Storages by SMB/CIFS Method for Windows 53
6.5.4 Use Shared Storage by FTP Methods for Windows 54

CHAPTER7 SCAN SERVER FUNCTION 56

7.1 Connecting HP All-in-one MFP to the Server 56
7.2 Using the Shared Scanner in Windows 56
7.2.1 Using Control Center 56
7.2.2 Using Windows Applications 58
7.3 Using the Shared Scanner in Linux 59
7.3.1 Using XSane in Redhat Linux 59

CHAPTER8 CONTROL CENTER 61

8.1 Installing Control Center 61
8.2 Using Control Center 61
8.2.1 Use Tools of Control Center 61
8.2.2 Display Server's Status 62
8.2.3 Set up Server's Configuration 62

CHAPTER9 SERVER'S WEB PAGES 69

9.1 Introduction 69
9.2 Using Server's Web Pages 69
9.2.1 Display Server Status 69
9.2.2 Set up Server Configuration 70

CHAPTER10 EMAIL ALERTING 76

CHAPTER11 SNMP 76

CHAPTER12 TROUBLESHOOTING 77

12.1 LED Indicators 77

CHAPTER13 RESTORE FACTORY DEFAULTS 78

13.1 Using Server's Web Pages 78
13.2 Using Control Center 79
13.3 Using Init Button 79
13.4 Default Parameters List 79

CHAPTER14 UPGRADE NEW FIRMWARE 81

CHAPTER15 INIT BUTTON 85

Chapter1 Introduction

Thank you for purchasing this Digitus DN-13005/13015 USB MFP Server (in the following referred to as “Server”). This server is designed to connect your AIO/MFPs (All-In-One/Multifunction Peripheral), printers, USB mass storages (hard drives, flash drives, and memory card readers), and scanners, to your network, allowing all network users access to these shared USB devices resources.

1.1 About this Manual

This manual provides introductory information as well as detailed instructions on how to set up and manage Digitus DN-13005/13015 in various network environments. Compared with Digitus DN-13005, DN-13015 has an additional wireless module (802.11b/g). Except for the wireless-related configuration and operations, all other configuration and operations are almost the same for Digitus DN-13005 and DN-13015. Unless explicitly specified, all instructions apply to both Digitus DN-13005 and DN-13015.
To fully benefit from this document, you should be familiar with basic networking principles. The instructions described in this manual are based on the settings in a new Server. To reload the Factory Parameters, you can reset this Server back to Factory Default, which will restore most of the settings. For details, please refer to the chapter “Restore Factory Defaults”.

1.2 Support Services

Should you require any technical assistance, please contact your product reseller. Or you can visit our website at http://www.digotus.info for latest product information.
This manual is subject to changes without prior notice.

Chapter2 Product Overview

2.1 Package Contents

Verify that nothing is missing from the package by using the checking list below. Please contact your dealer if anything is missing or damaged. All packing materials are recyclable. Please confirm the items in the package below:

- This Server (DN-13005 or DN-13015)
- CD (Control Center and User’s Manual and Quick Installation Guide)
- Power Adaptor

2.2 Product CD

This CD provides an easy-to-use Control Center software for Windows PC, the User’s Manual and Quick Installation Guide.

2.2.1 Start-up Procedures for Windows

If your computer is configured to auto start CDs, this CD will start automatically when inserted. You can also navigate to the CD and start the autorun.exe file from within the Windows file manager.

2.3 Physical Description

1. **Power Adaptor Connector:** DC IN 5V/2A adaptor
2. **Init Button**: print the configuration page and initialize this Server
3. **Ethernet Connector:** a twisted pair category 5 cable
4. **Wireless Station (only for DN-13015):** IEEE 802.11 b/g wireless station with antenna inside
5. **USB Host Ports:** USB 1.1/2.0 low, full, and Hi-Speed compliant
6. **Indicators**
   - *Power Indicator* is lit while power is applied. If it is not lit, or if it blinks, there is a problem with this Server or power adapter.
   - *Link Status* (only for DN-13005) is lit while network is applied. If it is not lit, it indicates that this server does not connect to the network.
   - *Status Indicator* (only for DN-13005) blinks to indicate network activity.
   - *LAN Indicator* (only for DN-13015) blinks to indicate wired network activity. If it is lit, it indicates the wired network is applied. If it is not lit, it indicates that the server does not connect to the wired network.
   - *WLAN Indicator* (only for DN-13015) blinks to indicate wireless network activity. If it is lit, it indicates the wireless network is applied. If it is not lit, it indicates that the server does not connect to the wireless network.
   - *USB1 Indicator* is lit while a USB device connects to USB1 Port of this Server. If it is not lit, or if it blinks, there is a problem with the USB device or this Server.
   - *USB2 Indicator* is lit while a USB device connects to USB2 Port of this Server. If it is not lit, or if it blinks, there is a problem with the USB device or this Server.

2.4 Installation Methods

2.4.1 Installation and Integration

Please refer to the table below to select the appropriate installation method. The Control Center tool is available on the CD or from Digitus's website.

Function	OS	Method	Description
Print Server	Windows	Standard Windows Add Printer Wizard	Installation of LPR, Raw TCP (JetDirect), Local Port Using SMB, and IPP
		Control Center Tool	Installation of LPR, Raw TCP, Local Port Using SMB
	Apple MAC OS x	Printer Setup Tool	LPR, Raw TCP (JetDirect) SMB, IPP
	Unix/Linux	Edit /etc/printcap File	Using vi or other editors to edit the *printcap* file
		RedHat Linux Printer System Manager	Using X-Windows Interface to operate

File Server	Windows	None	Don't need installation
	Apple MAC OS X	None	
	Unix/Linux	Samba	Use smbclient in Samba
Scan Server	Windows	MFP Server Control Center tool	Installation of SANE Client and SANE-Twain Driver
	Apple MAC OS X	Download and install SANE	Use terminal
	Unix/Linux	Download and install SANE Frontends	Use SANE Applications such as XSANE

2.4.2 Configuration and Management

This Server can be configured and managed from its internal web pages or from *Control Center*, a user software. These web pages or PC tools offer you a management tool suitable for all supported network environments.

2.5 Features and Benefits

This Server provides the following features and benefits:

1. ***Reliability:*** The MFP server provides high performance and reliability combined with low power consumption.

2. ***Flexibility:*** The MFP server supports print/File/Scan sharing in all major computer systems and environments.

3. ***Easy to Install:*** The MFP server installs, operates and is managed in a reliable and easy fashion.

4. ***Security:*** You can assign administrator name and password to restrict login.

5. ***Monitoring:*** The MFP server's web pages and user software allow you to continuously monitor MFP status.

6. ***Future Proof:*** The firmware stored in the MFP server Flash memory can be upgraded over the network. This allows you to quickly update and enhance its operational features when new MFP server software becomes available.

Chapter3 Basic Installation

3.1 Connecting the Hardware

1. Make sure that your USB devices are switched off and that the MFP server's Power Adapter is disconnected.

2. Connect the USB devices to the USB ports using the USB cables.

3. Connect the MFP server to the network using a twisted pair category 5 cable, 10baseT or 100baseTX.

4. Turn on the USB devices and make sure it is ready for use.

5. Connect the Power Adapter to the server. The power indicator will light up and USB1 and USB2 indicators will flash in turn. When the Link indicator lights up, the server is correctly connected to the network. When USB1 and USB2 indicators do not flash, the server starts to work normally.

6. If you connected USB HP printers to server, please press the Init button for 3 seconds on the server once to print a page of server configuration report.

3.2 Wireless connection

This section only applies to DN-13015.

3.2.1 Preliminary

- Before you can access wireless network, wireless parameters should be set correctly. You **have to** setup the first wireless parameter set through LAN (wired) connection.
- Wireless access can be set as 1. Infrastructure (station) mode, which need an access point to route network messages, or 2. Ad-hoc mode, which connect nearby wireless PC/devices with the same SSID (Service Set ID).
- Wireless access can be secured by WEP64, WEP128, or WPA-PSK/TKIP.
- In infrastructure mode, if network administrator wants to change any security related parameters, DN-13015 **should be** changed first, and then access point. If parameters mismatch causes wireless access is not allowed, you **have to** modify those parameters through LAN connection.
- In infrastructure mode, the maximal transfer rate is 54 MBits depending on access point's capability. In ad-hoc mode, only 802.11b (the maximal transfer rate is 11 MBits) is allowed by specification.

3.2.2 Ethernet Address

1. Install MFP Server Control Center. MFP Server Control Center is available in the DN-13015 USB MFP Server Product CD.
2. Start MFP Server Control Center and Auto-searching MFP server window will appear.

If the wireless parameters are not correct or not set yet, you have to use LAN to access MFP Server Control Center.

3. If the tool finds MFP servers in your local area network, then you have to select a MFP server from the server list.

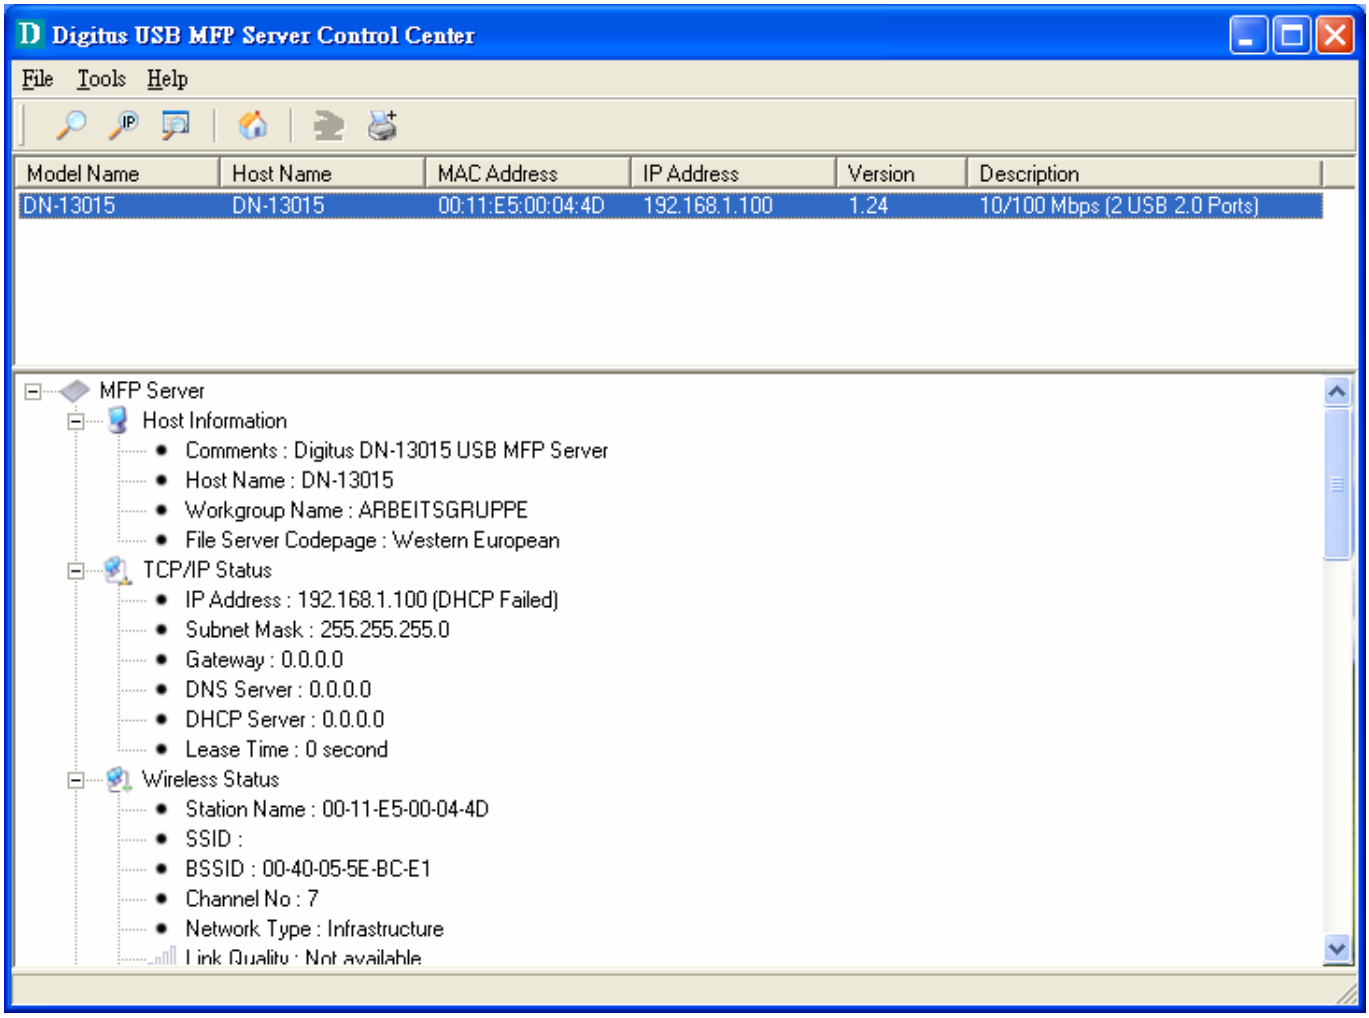

4. Double click the highlight list and type the server's administrator (default: *admin*) and password (default: *admin*).

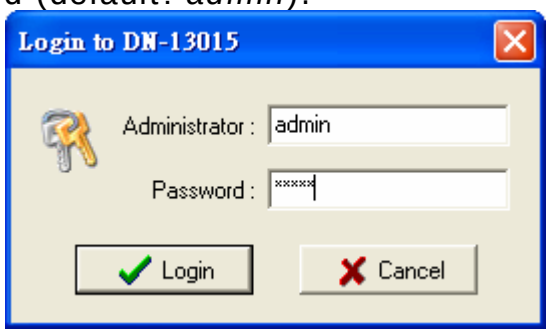

5. After you login successfully, from the Server menu, select wireless. The set Wireless dialog appears.

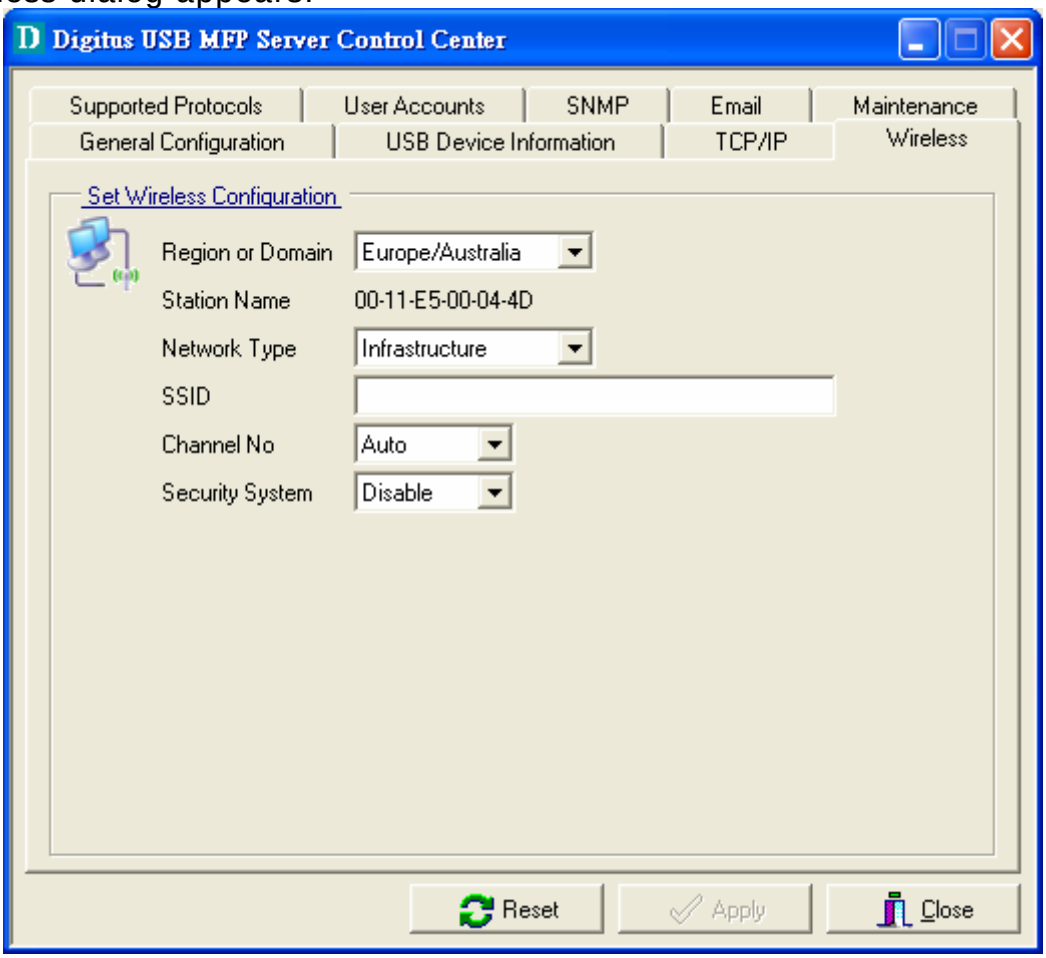

6. In order to join an existing wireless network, you have to set the correct network type (infrastructure or ad-hoc), SSID, and the correct security method with the correct key information.
7. If the wireless network is secured by WEP64 or WEP128, authentication method, key index, and WEP key must be set correctly.

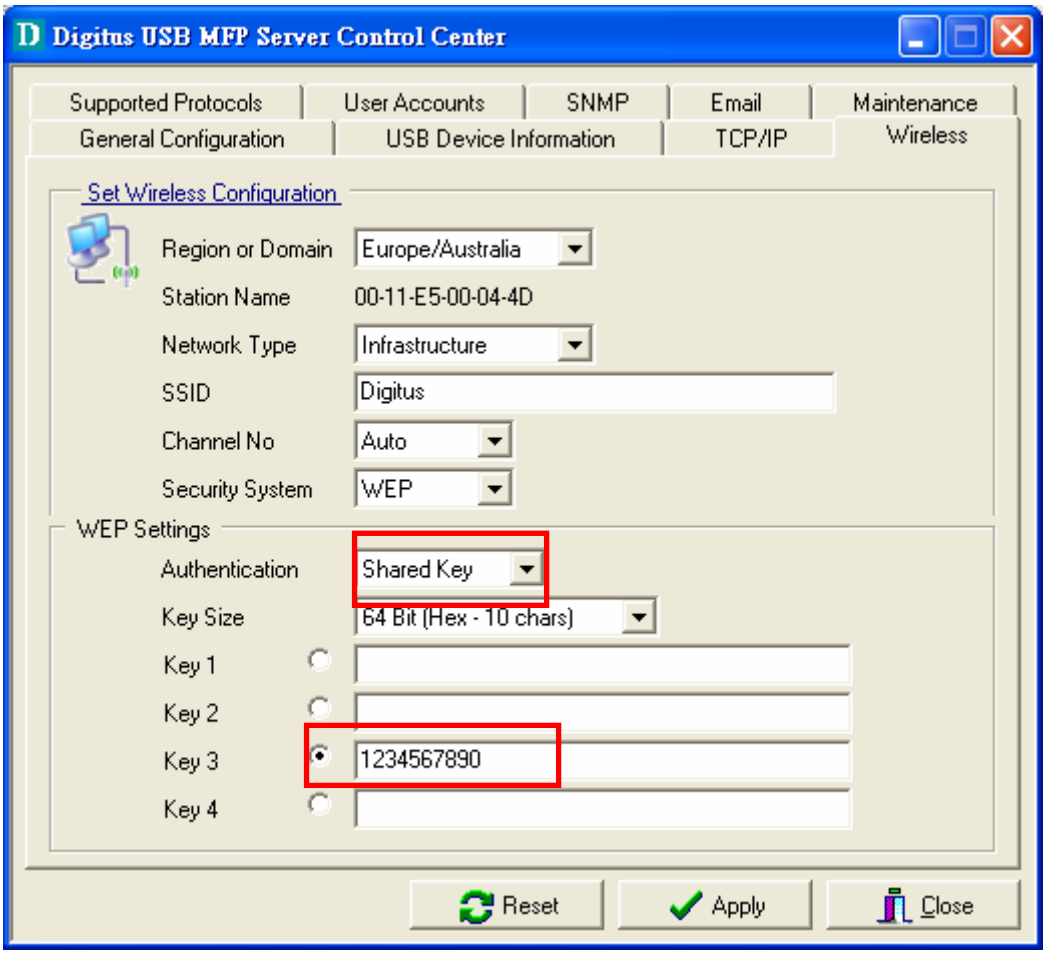

8. If the wireless network is secured by WPA-PSK/TKIP, the shared key must be set correctly.

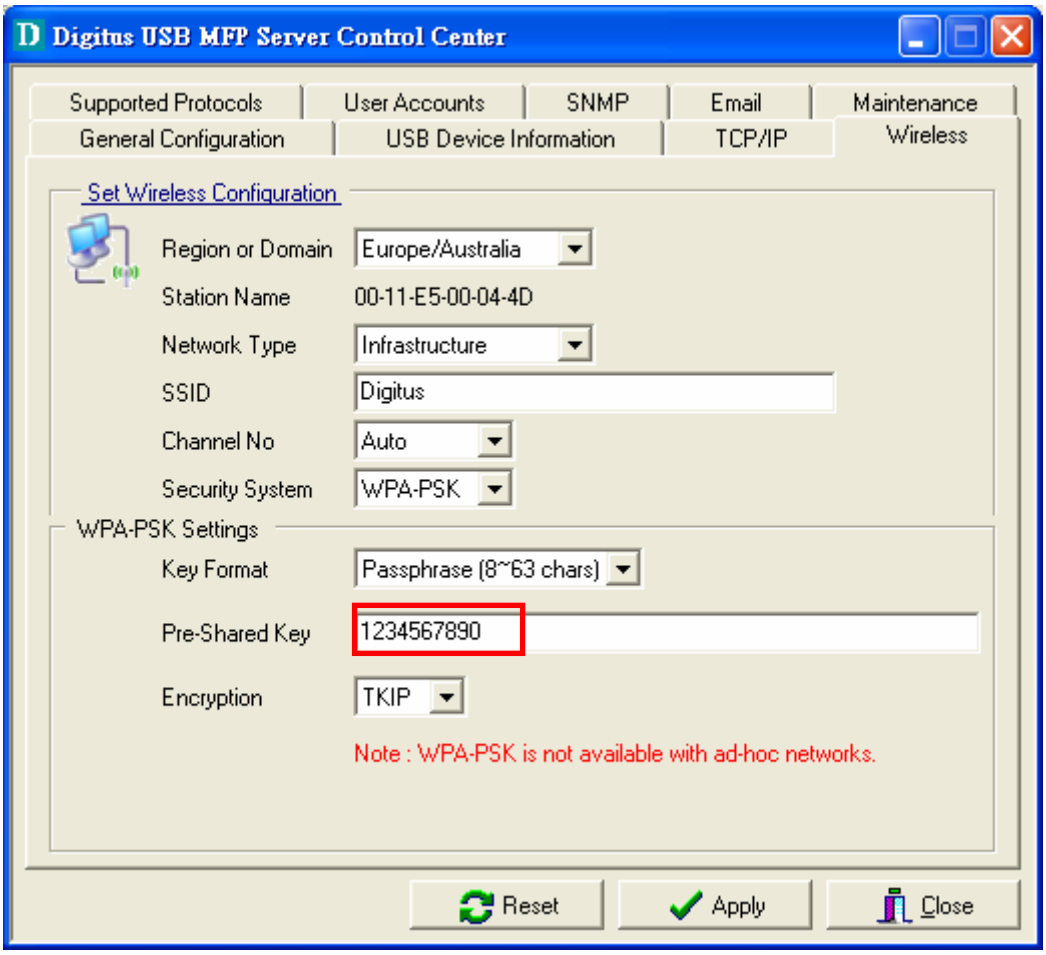

9. Click **Apply** to save your settings. And the server will reboot.
10. You have now finished the procedure of setting the wireless parameters.

✎ In infrastructure mode, DN-13015 searches all channels to join the matched wireless service set. In ad-hoc mode, DN-13015 searches all channels to join the matched wireless ad-hoc service set too, however, if none are found, DN-13015 creates that service set in the assigned channel.

✎ In ad-hoc mode, WPA-PSK/TKIP is not allowed.

3.2.3 Set Wireless Configuration Using Server's Web Pages

1. You can see the IP address of MFP server in the server list. Open IE Browser and type server's IP address or click the Home Icon of MFP Server Control Center.

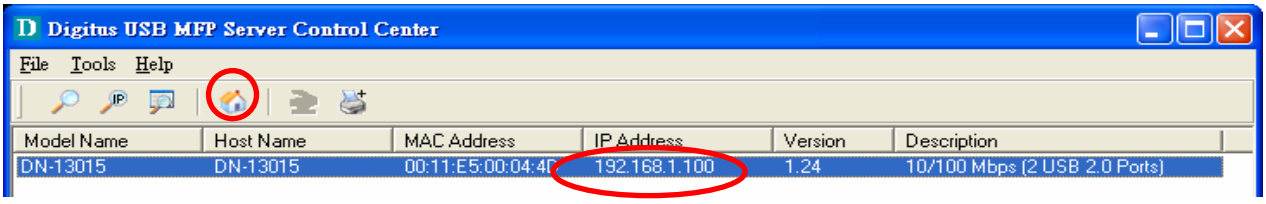

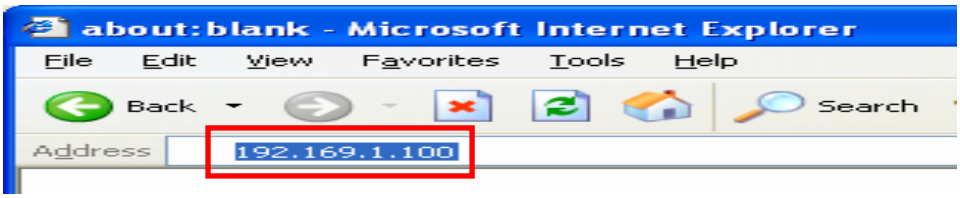

- If the wireless parameters are not correct or not set yet, you have to use LAN to access Web Pages.
- If the TCP/IP parameters of DN-13015 are not correct, you have to use MFP Server Control Center to set the TCP/IP parameters first.

2. Go to the web page and click **CONFIG** icon.

DIGITUS
HOME | STATUS | CONFIG | CONTACT US
DIGITUS
USB MFP SERVER
Welcome to the Digitus USB MFP Server web configuration.
Click STATUS to show your system status.
Click CONFIG to adjust each setting of the device.
Click CONTACT US to view the company info.

3. Login your administrator (default: *admin*) and password (default: *admin*).

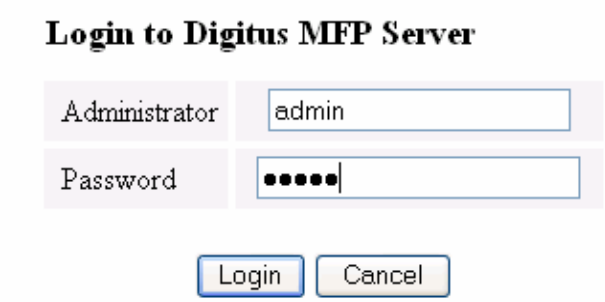

4. Click **Wireless** icon.

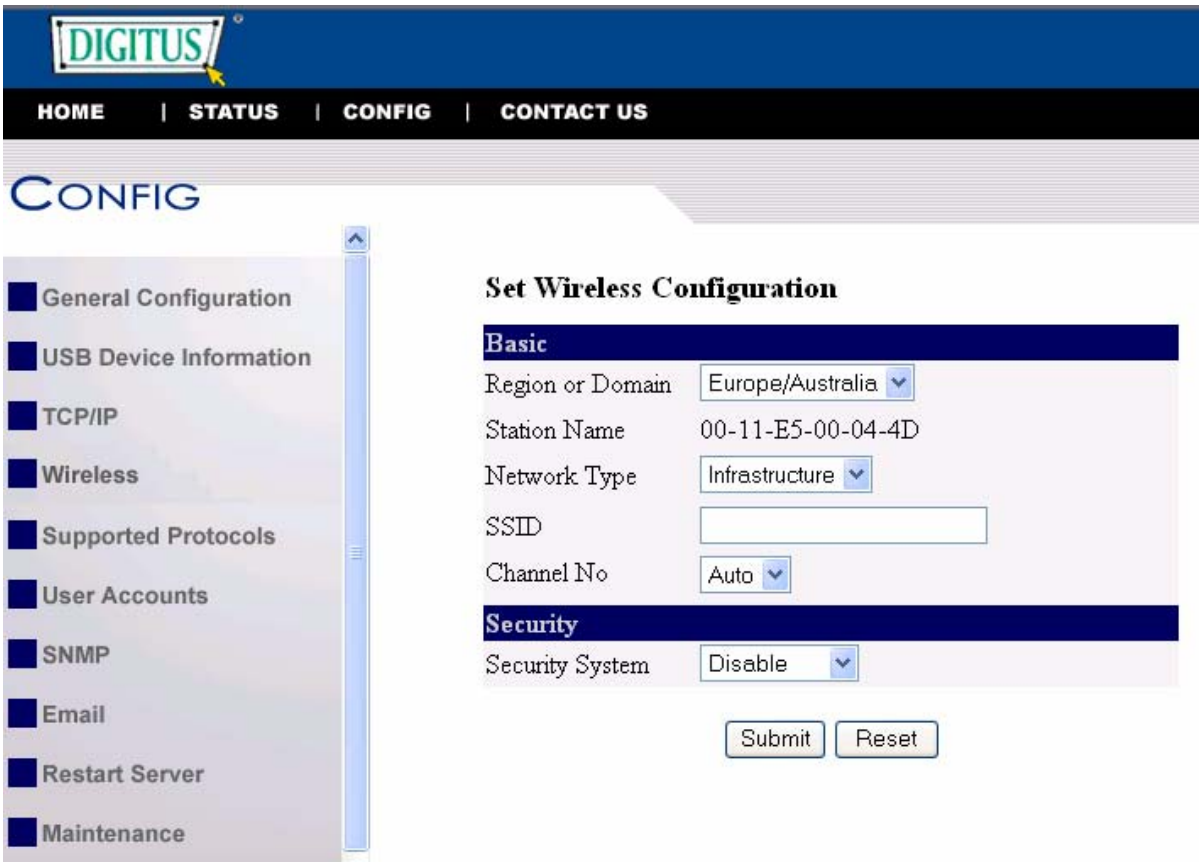

5. In order to join an existing wireless network, you have to set the correct network type (infrastructure or ad-hoc), SSID, and the correct security method with the correct key information.
6. If the wireless network is secured by WEP64 or WEP128, key index and WEP key must be set correctly.

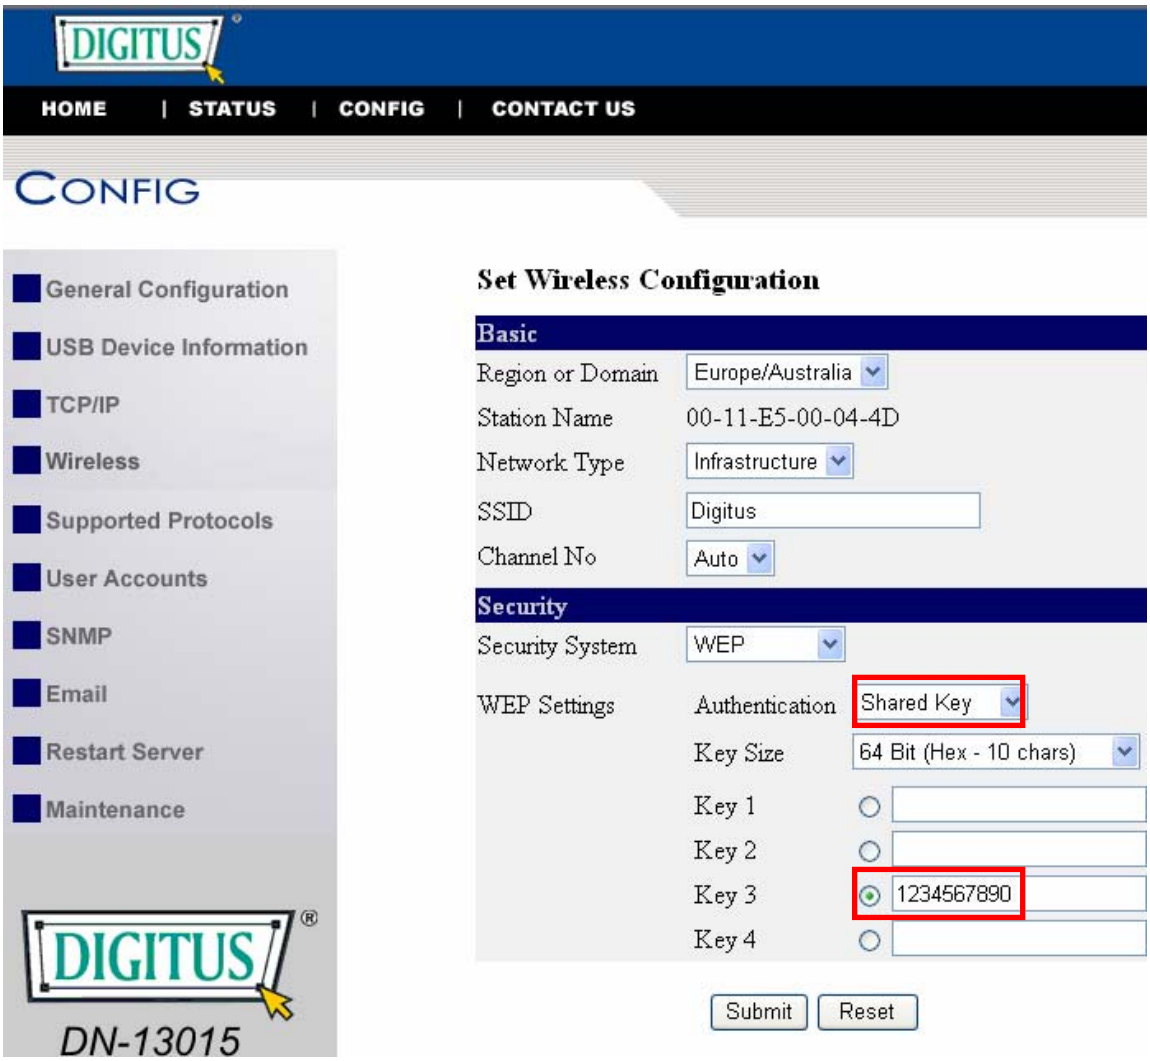

7. If the wireless network is secured by WPA-PSK/TKIP, the shared key must be set correctly.

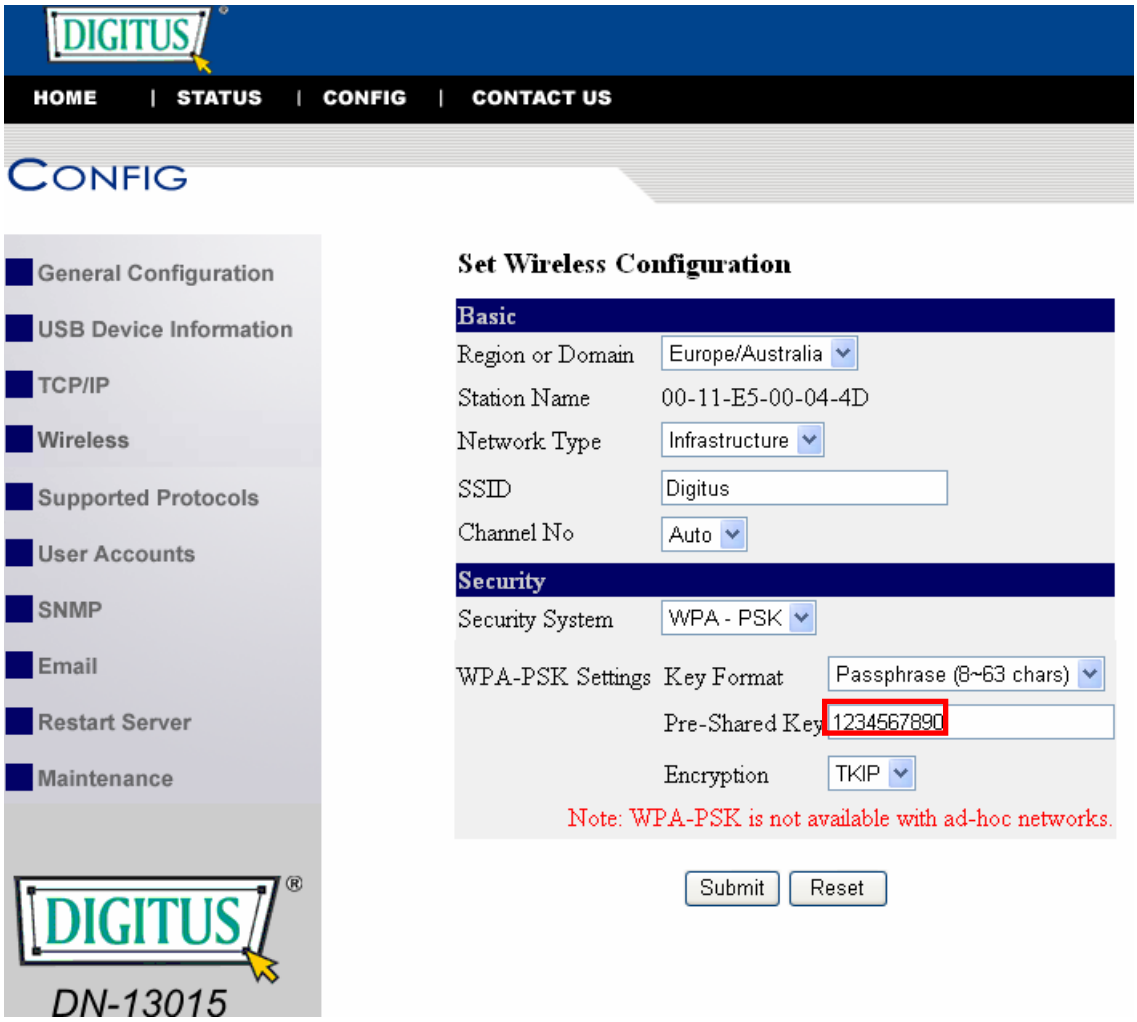

8. Click **Submit** to save your settings. And the server will reboot.
9. You have now finished the procedure of setting the wireless parameters.

✍ In infrastructure mode, DN-13015 searches all channels to join the matched wireless service set. In ad-hoc mode, DN-13015 searches all channels to join the matched wireless ad-hoc service set too, however, if none are found, DN-13015 creates that service set in the assigned channel.

✍ In ad-hoc mode, WPA-PSK/TKIP is not allowed.

After properly configuring the wireless parameters, you can remove the network cable and reboot the DN-13015. DN-13015 will then connect to your wireless network. DN-13015 will detect if a network cable is plugged-in or not. If a network cable is plugged-in, DN-13015 will always connect to the network through the network cable. Otherwise it will always connect to the network through wireless module. Once DN-13015 connects to the network, either by network cable or by wireless module, all operations of print / scan / file server are exactly the same.

3.3 Assigning an IP Address to the Server

3.3.1 Preliminary

- If you have a DHCP server on your network, your Server will receive an IP

address automatically. The IP address will then appear on the *Control Center* or on the page of configuration report that you printed earlier. If your DHCP server does not give an IP address to the Server, the Server will use the Factory IP address: 192.168.1.100.

- If you are not working in a DHCP network, you need to manually set the Server's IP address.

3.3.2 Ethernet Address

You do not need to know the Ethernet address of your Server for assigning an IP address to it. The Control Center can automatically search Servers and list their Ethernet addresses. Besides, you can find Ethernet address that is located on the backside label of the Server.

3.3.3 IP Address

Unless you are assigning an IP address using DHCP, you must obtain an unused IP address from your network administrator.

3.3.4 Methods for Setting the IP Address

You can set the IP address of your Server using one of the following methods, depending on your network operating environment:

- Automatic IP Address Assignment
- Manual IP Address Assignment

3.3.5 Host Names and Host Name Rules

The Host Name of the Server defaults to be "*DN-13005*" (for DN-13015) or "*DN-13005*" (for DN-13015). If you put two or more Servers in your local area network, to avoid using the same Host Names you have to change the Host Names by using the Control Center or the Server's web pages. If your Host Name is longer than 15 characters, the Server uses only the first 15 characters.

3.3.6 Setting the IP Address Using DHCP

Follow the instructions below to get an IP address using DHCP:

1. Edit or create a scope in the DHCP manager of the DHCP daemon. The entries included in this scope should contain the following parameters:
   - range of IP addresses
   - subnet mask
   - default router IP address
   - DNS server IP address
   - lease duration

2. Activate the scope. The Server automatically gets the DHCP parameters. If you are using DNS, you may include at least one DNS server IP address in the DHCP scope or manually set the DNS server IP address using Server's web pages or

the Control Center.

3.3.7 Setting the IP Address Using the Control Center

11. Install the Control Center. The Control Center is available on the Product CD.

12. Start the Control Center and Auto-searching Server window will appear.

13. If the tool finds multiple Servers in your local area network, then you have to select one Server from the Server List.

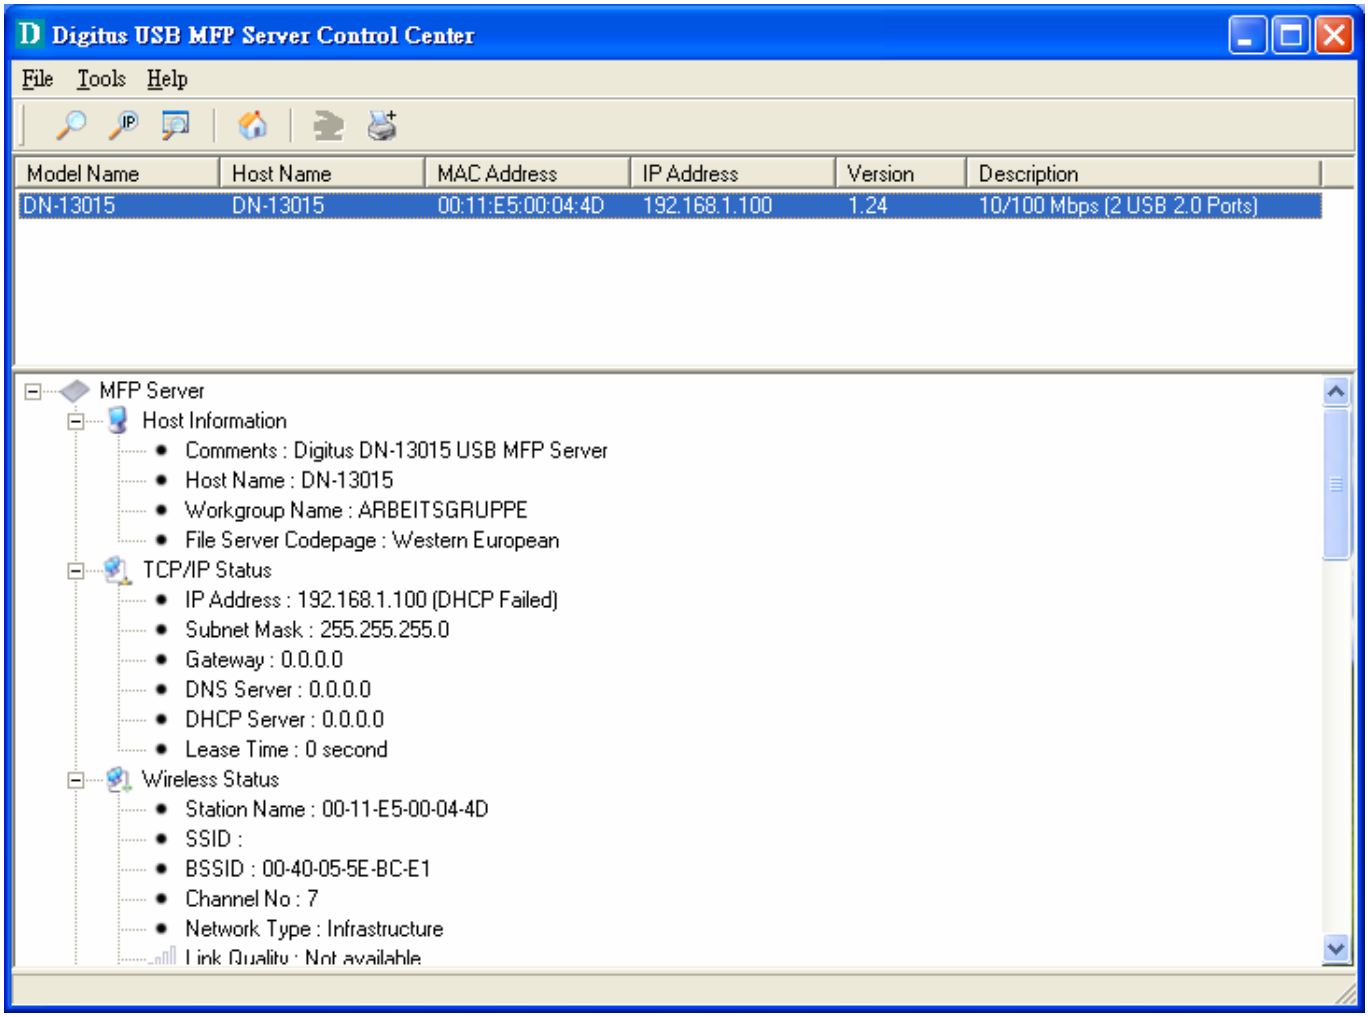

14. Double click the highlight list and enter the Server's administrator (default: *admin*) and password (default: *admin*).

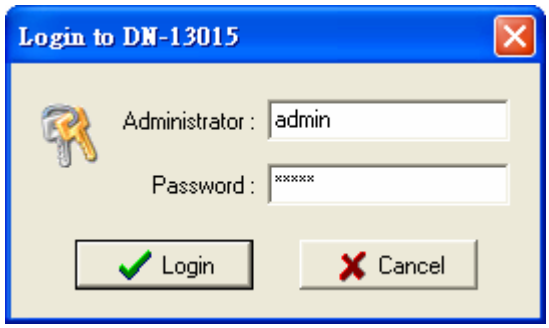

15. After you have logged in successfully, select TCP/IP from the Server's menu. The Set IP Address dialog appears.

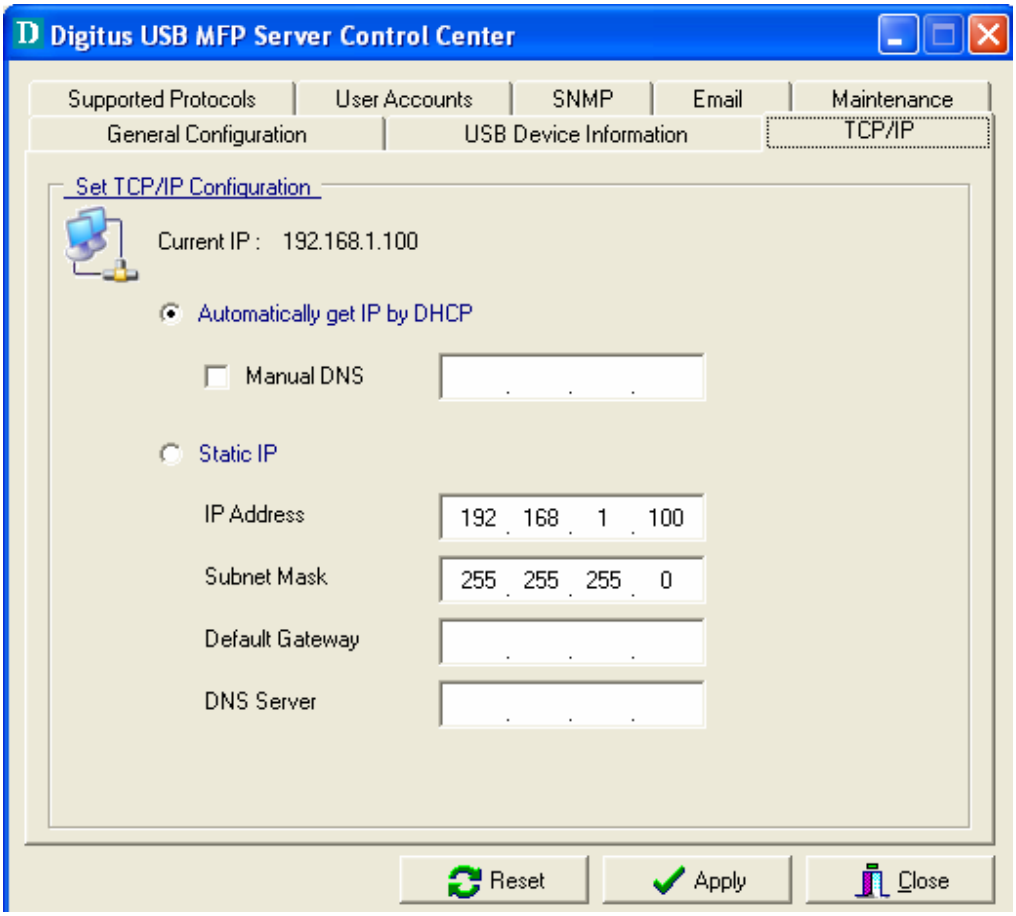

16. Click the button that corresponds to your choice of IP setting method (static or dynamic using DHCP). When assigning a static IP address you also have to define Subnet Mask and Default Gateway. If you choose **Automatically get IP by DHCP**, you can use desired DNS by clicking the **Manual DNS** button and manually assigning a DNS.

17. Click **Apply** to save your settings. And the server will reboot.

18. You have now finished the procedure of setting the IP address.

3.3.8 Setting the IP Address Using the Server's Web Pages

1. If you don't know the current IP of server, you have to do the Step1~Step4 of Set the IP Address Using MFP Server Control Center.

2. You can see the IP address of MFP server in the server list. Open IE Browser and type server's IP address or click the Home Icon of MFP Server Control Center.

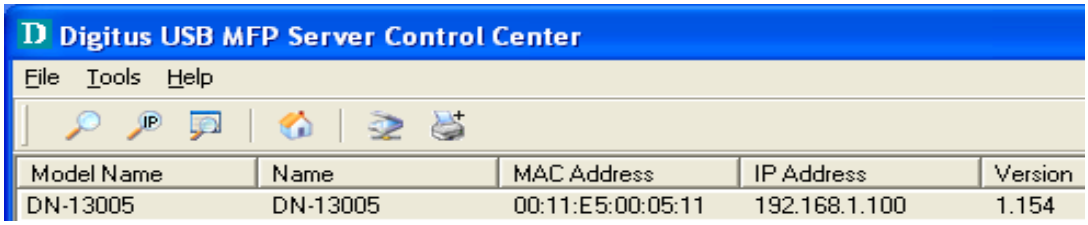

3. Go to the web page and click **CONFIG** icon.

4. Login your administrator (default: *admin*) and password (default: *admin*).

5. Click **TCP / IP** icon.

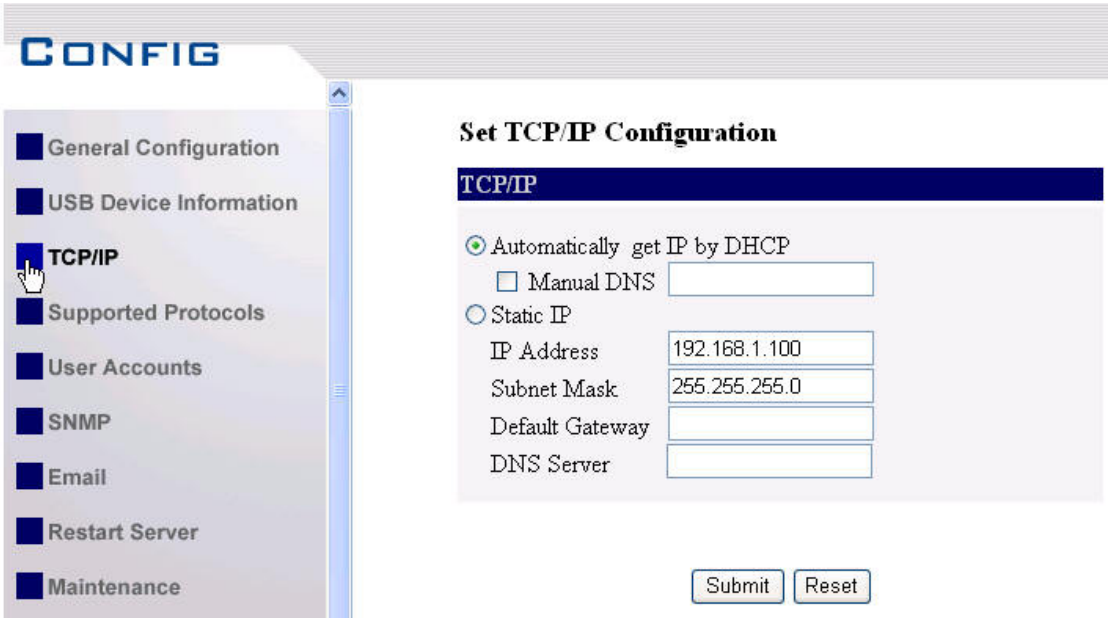

6. Click the button that corresponds to your choice of IP setting methods (static or dynamic using DHCP). When assigning a static IP address you also have to define Subnet Mask and Default Gateway.

7. Click **Submit** to save your settings. And the server will reboot. You have now finished the procedure of setting the IP address.

3.4 Naming Your USB Devices

3.4.1 Printer Names

- *Default Printer Name*

  1. The system will set the printer model names as the default printer names. The system only allows a 12 characters long USB device name. For example, the printer model name is "*psc 1300 series"* and then the default printer name will be set as "*psc 1300 ser"*.

  2. If system can not get the printer model (For ex, you use some parallel printers and use Parallel-to-USB cables to connect the printers), the default printer names are set as: *USB1_Printer* and *USB2_Printer* with respect to USB1 port and USB2 port.

- *Set Printer Name*

  You can set yourself printer names by MFP Server Control Center or server's web pages.

  A. Using MFP Server Control Center
     1. Start MFP Server Control Center and Auto-searching MFP server window will appear.

     2. If the tool finds MFP servers in your local area network, then you

have to select a MFP server from the server list.

3. Double click the highlight list and type the server's administrator (default: *admin*) and password (default: *admin*).

4. After you login successfully, from the Server menu, select USB Device Information. The Set USB Device Information dialog appears.

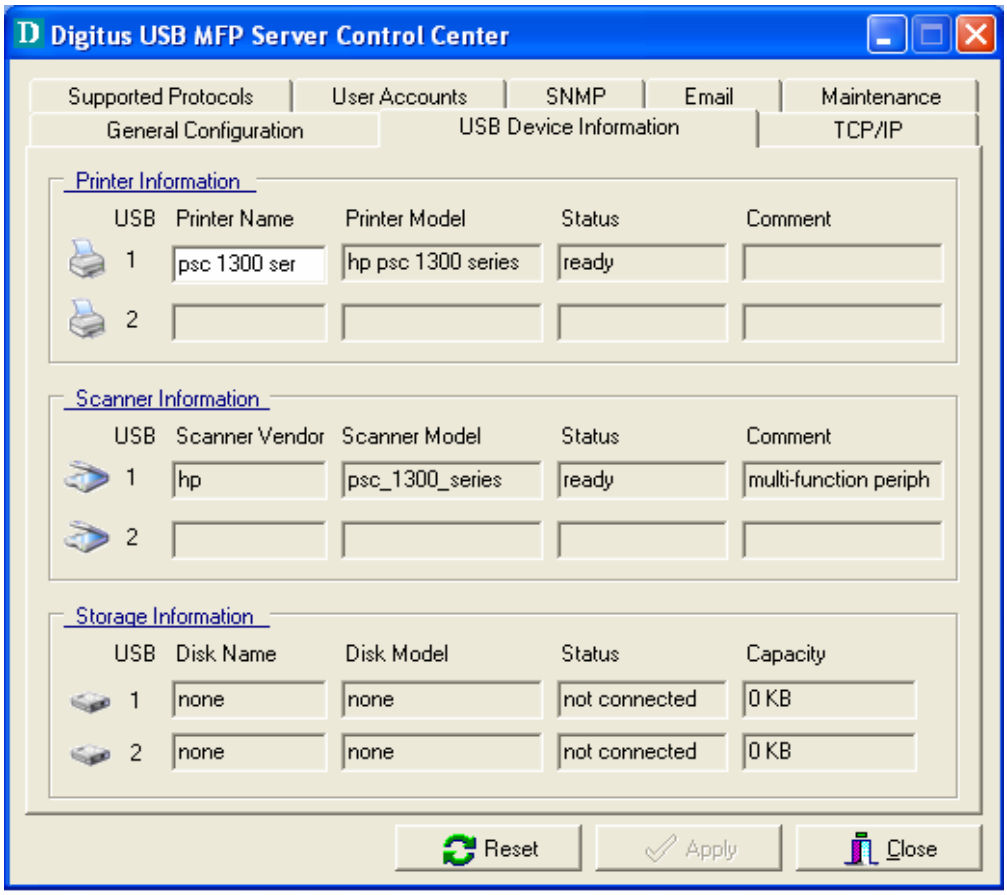

5. Set your printer names in **Printer Name** box and then click **Apply**.

B. Using Server's Web Pages

1. Go to the web page and click **CONFIG** icon.
2. Login your administrator (default: *admin*) and password (default: *admin*).
3. Click USB Device Information

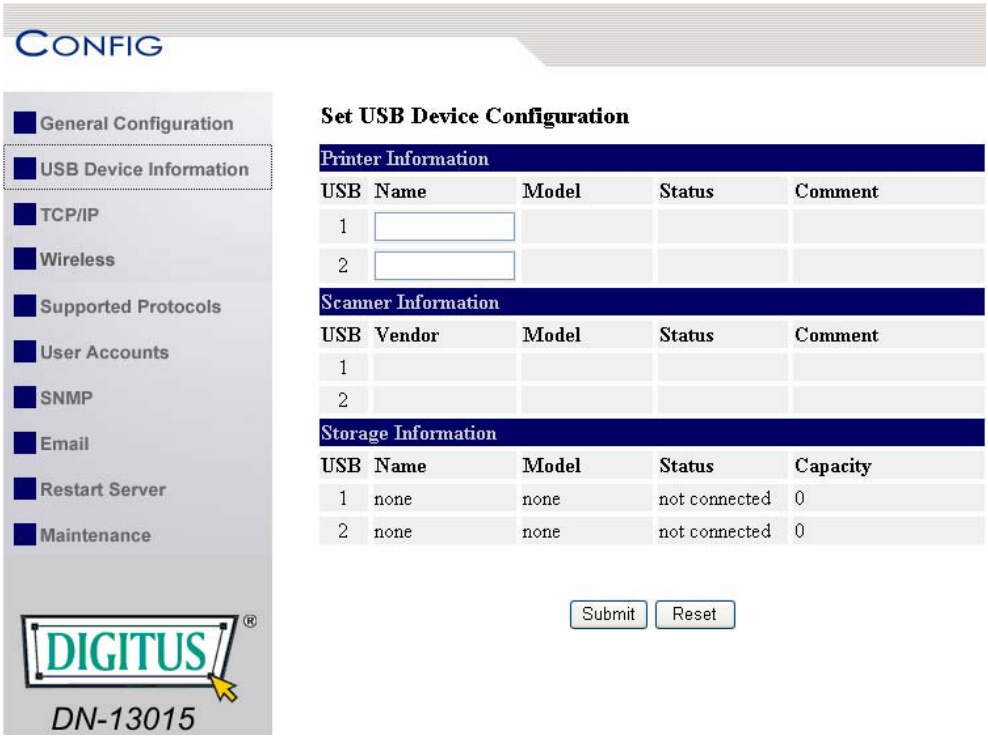

4. Set your printer names in **Printer Name** box and then click **Apply**.

3.4.2 Storage Names

The local drives of the two storages in USB1 port and USB2 port are named as USB*x*_D*x*P*x*, where USB*x* represents the USB*x* port, D*x* represents the the *x*-th Disk (in particular to card reader plugging in multiple cards) and P*x* represents the *x*-th partition.

3.4.3 Scanner Names

The name of connected scanner of HP office jet series consists of the “vender” + “model”. For example, the scanner name of HP PSC 1300 series office jet is named as “*HP PSC 1300 series*”.

Chapter4 Adding Printers in Windows

4.1 Overview of Installation Methods

This chapter describes how to add network printers to Windows PC.

Table List for Installing Network Printer

Windows Platform	Printing Protocols	Method
Windows 98, ME, 2000,XP and 2003	SMB/CIFS Printing	Standard Windows Add Printer Wizard
		MFP Server Control Center's Add Printer
	IPP Printing	Standard Windows Add Printer Wizard
Windows 2000, XP and 2003	LPR Printing	Standard Windows Add Printer Wizard
		MFP Server Control Center's Add Printer
	Raw TCP/JetDirect Printing	Standard Windows Add Printer Wizard
		MFP Server Control Center's Add Printer

Steps for Installing Network Printer

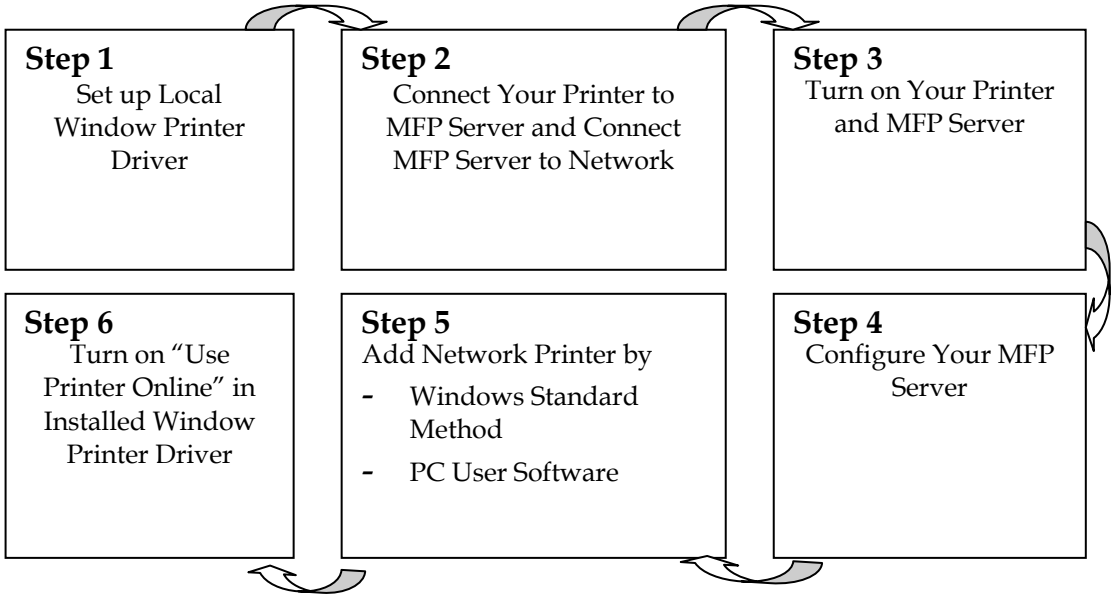
Step 1
Set up Local Window Printer Driver
Step 2
Connect Your Printer to MFP Server and Connect MFP Server to Network
Step 3
Turn on Your Printer and MFP Server
Step 4
Configure Your MFP Server
Step 5
Add Network Printer by
- Windows Standard Method
- PC User Software
Step 6
Turn on "Use Printer Online" in Installed Window Printer Driver

4.2 Connecting the Server

To configure your server correctly, you have to know your server connecting to what type of network topology.

4.2.1 The Server and Windows PC on Same LAN

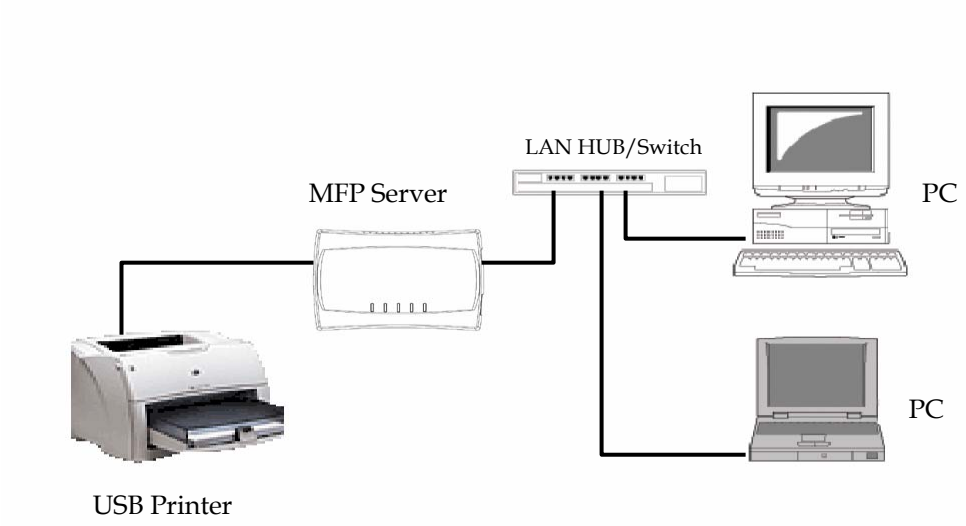

4.2.2 The Server and Windows PC on Different LANs

Example: Wired Windows PC across Internet

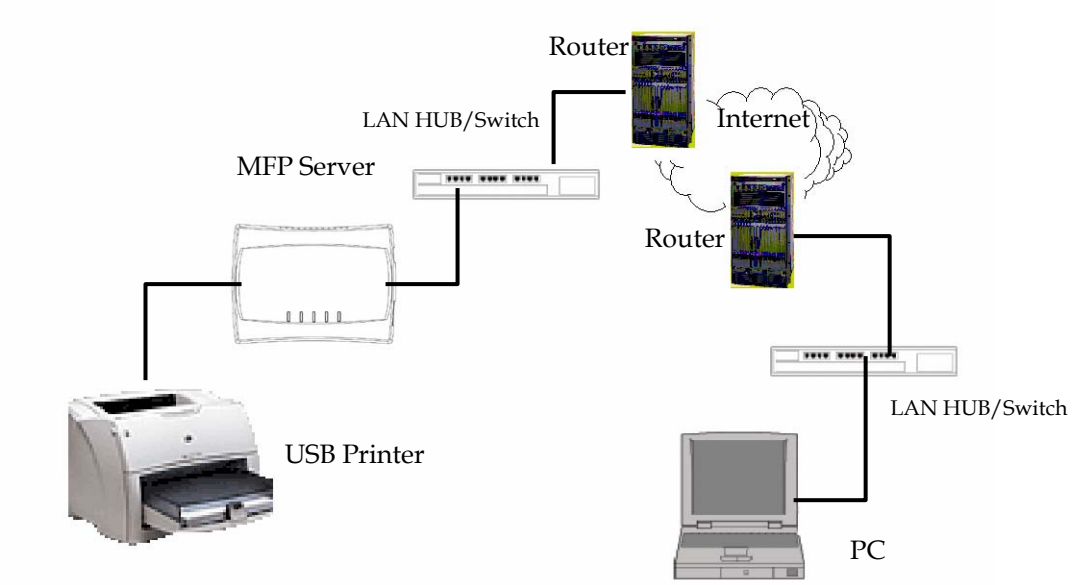

4.3 Setting up Local Windows Printer Driver

You are advised to install your Windows printer driver in advance. For most printers, you can install the printer drivers as the following procedure:

1. Click **Start**, click **Control Panel**, click **Printers and Other Hardware**, and then click **Printers and Faxes**.
2. Double click **Add Printer** to start the Add Printer Wizard, and then click **Next**.
3. Click **Local printer**, clear the **Automatically detect and install my Plug-n-Play printer** check box to avoid having to wait for the completion of another printer search, and then click Next. If you leave this option selected, Windows will attempt to find the printer itself and figure out what kind it is. If Windows does not find the printer, the wizard will continue as described in this task.
4. Select a Windows driver for your printer. Click Next.
5. Choose whether you want to share the printer with other network users. Do you want to print a test page? Select the appropriate radio button and click **Next** and **Finish**.

4.4 Adding Network Printers in Windows

Follow the instructions below to use the standard Windows Add Printer Wizard and MFP Server Control Center for adding a network printer in Windows 98 SE, ME, 2000, XP and 2003.

✍ **Note:**

1. Before adding a network printer, you are advised to install the local Windows printer driver in advance.
2. Before using network printer, you have to turn on “Use Printer Online” in installed network printer driver and then you can use the printer.

4.4.1 Using Standard Windows Methods for LPR Printing Protocol

Windows Platform: Windows 2000, XP and 2003

1. Open Printers and Faxes
2. Right-click the printer for which you want to change settings, and then click **Properties/ports**
3. Clear **Enable bidirectional support** and click **Add port**, and then click Standard TCP/IP Port from the dropdown and click **New port**.
4. The "**Add Standard TCP/IP Printer Port Wizard**" will pop up and click **Next**.

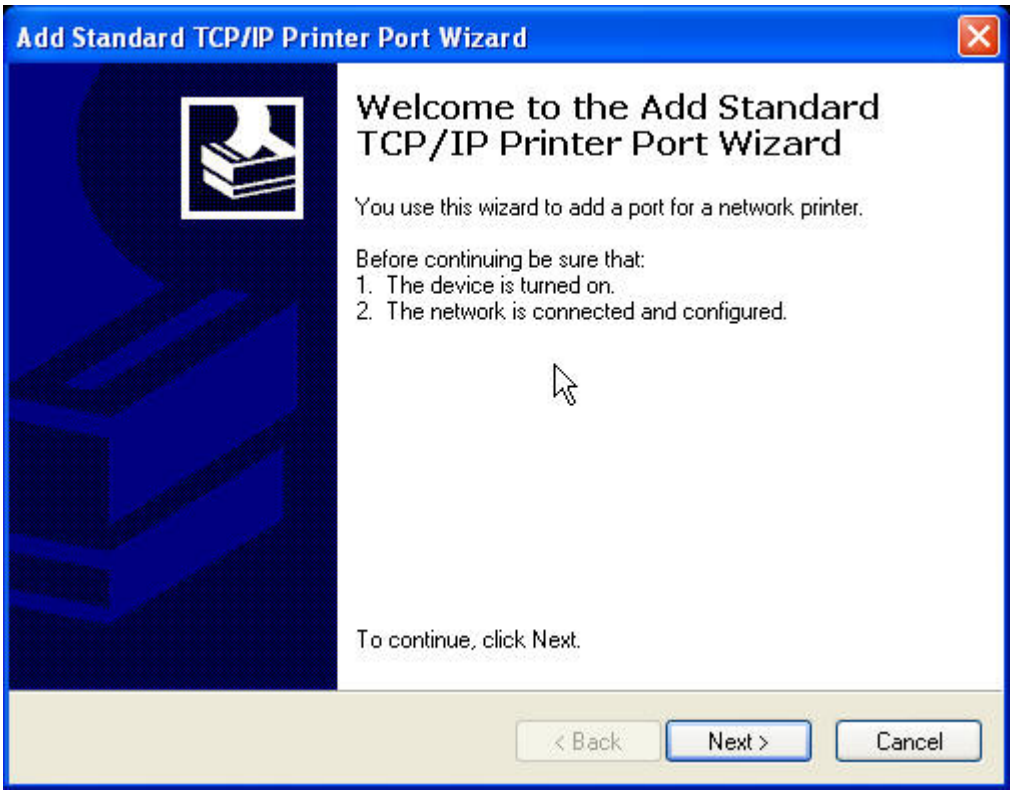
Add Standard TCP/IP Printer Port Wizard
Welcome to the Add Standard TCP/IP Printer Port Wizard
You use this wizard to add a port for a network printer.
Before continuing be sure that:
1. The device is turned on.
2. The network is connected and configured.
To continue, click Next.
< Back
Next >
Cancel

5. In the **Printer Name or IP Address** box, type Host Name of the MFP server (default: DN-13015) or IP address of MFP server. In the **Port Name** box, type your desired names or **USB1_LPR** or **USB2_LPR** for printer connected to USB1 port and USB2 port, respectively.

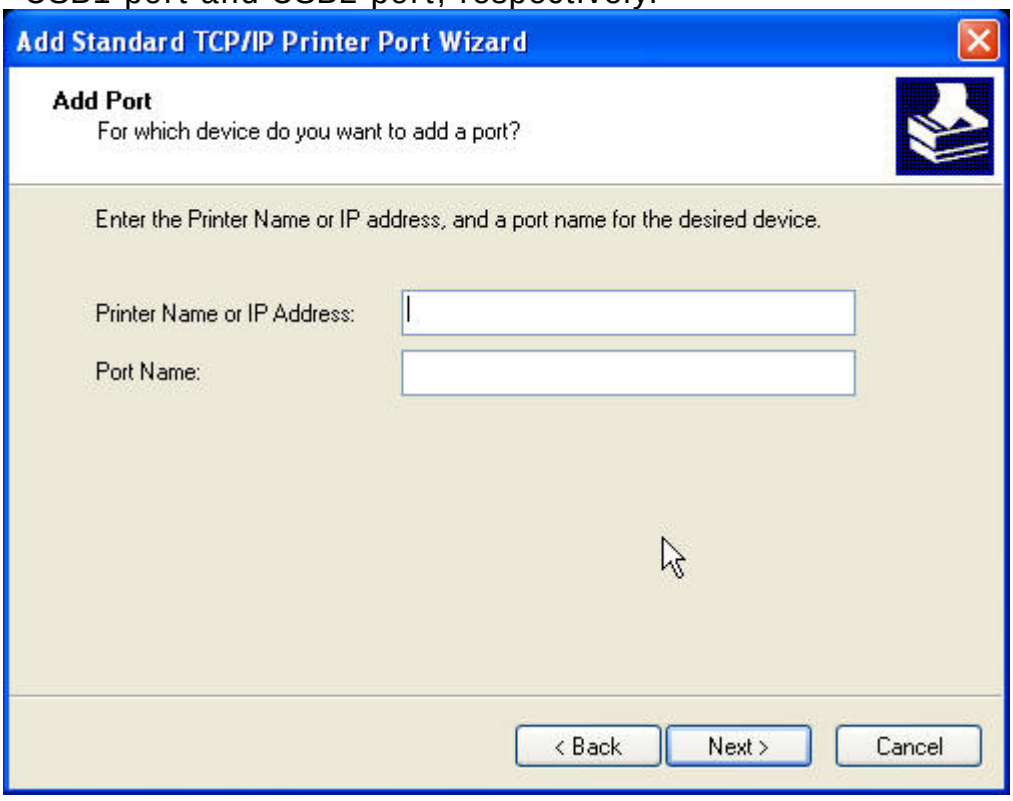
Add Standard TCP/IP Printer Port Wizard
Add Port
For which device do you want to add a port?
Enter the Printer Name or IP address, and a port name for the desired device.
Printer Name or IP Address:
Port Name:
< Back
Next >
Cancel

✍ *If your server is running on a different LAN than your Windows PC such as Internet PC, you must type server's IP address in* ***Printer Name or IP Address*** *box.*

6. Click **Next**.

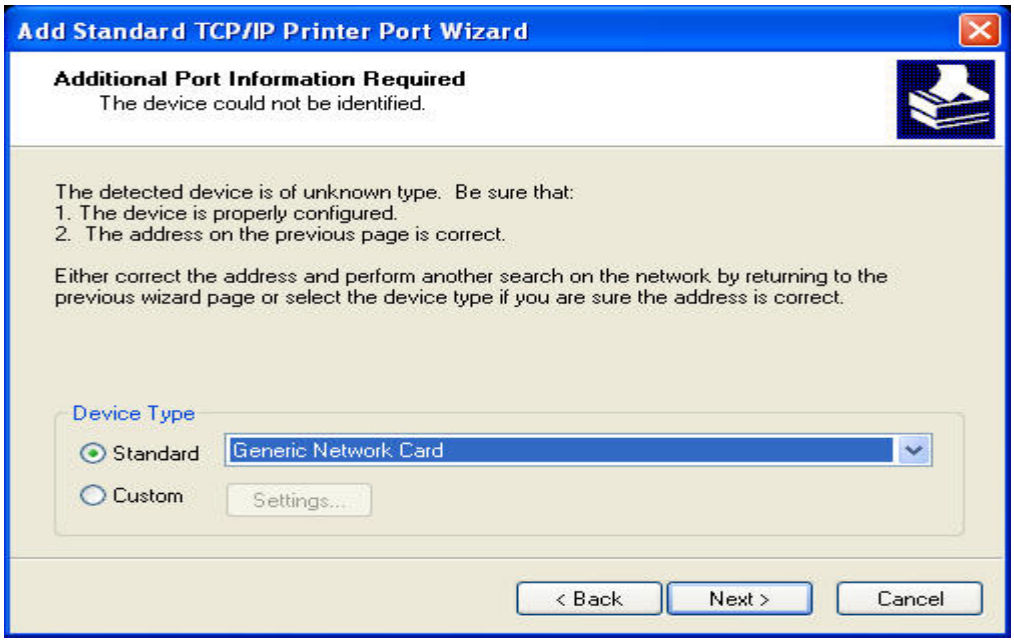
Add Standard TCP/IP Printer Port Wizard
Additional Port Information Required
The device could not be identified.
The detected device is of unknown type. Be sure that:
1. The device is properly configured.
2. The address on the previous page is correct.
Either correct the address and perform another search on the network by returning to the previous wizard page or select the device type if you are sure the address is correct.
Device Type
Standard
Generic Network Card
Custom
Settings...
< Back
Next >
Cancel

7. Click **Custom / settings**.

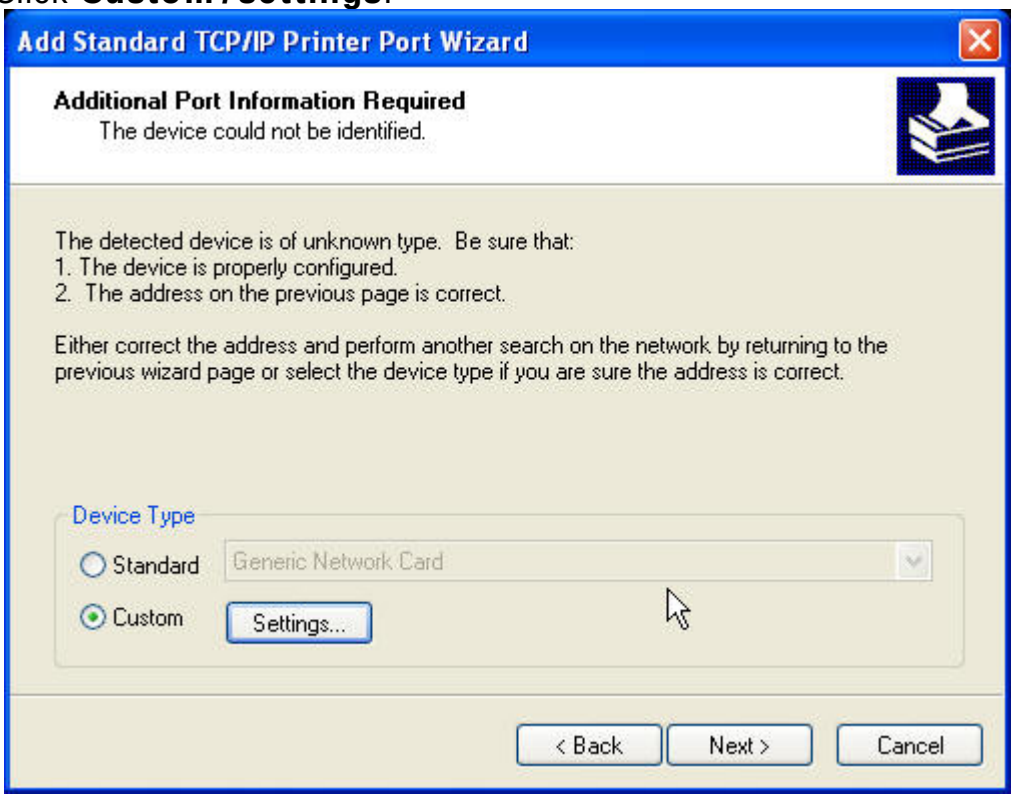
Add Standard TCP/IP Printer Port Wizard
Additional Port Information Required
The device could not be identified.
The detected device is of unknown type. Be sure that:
1. The device is properly configured.
2. The address on the previous page is correct.
Either correct the address and perform another search on the network by returning to the previous wizard page or select the device type if you are sure the address is correct.
Device Type
Standard
Generic Network Card
Custom
Settings...
< Back
Next >
Cancel

8. Click Settings and confirm that the settings are as below. The queue names are **USB1_LQ**, **USB2_LQ** for USB1 port 1 and USB2 port, respectively. Click **OK**.

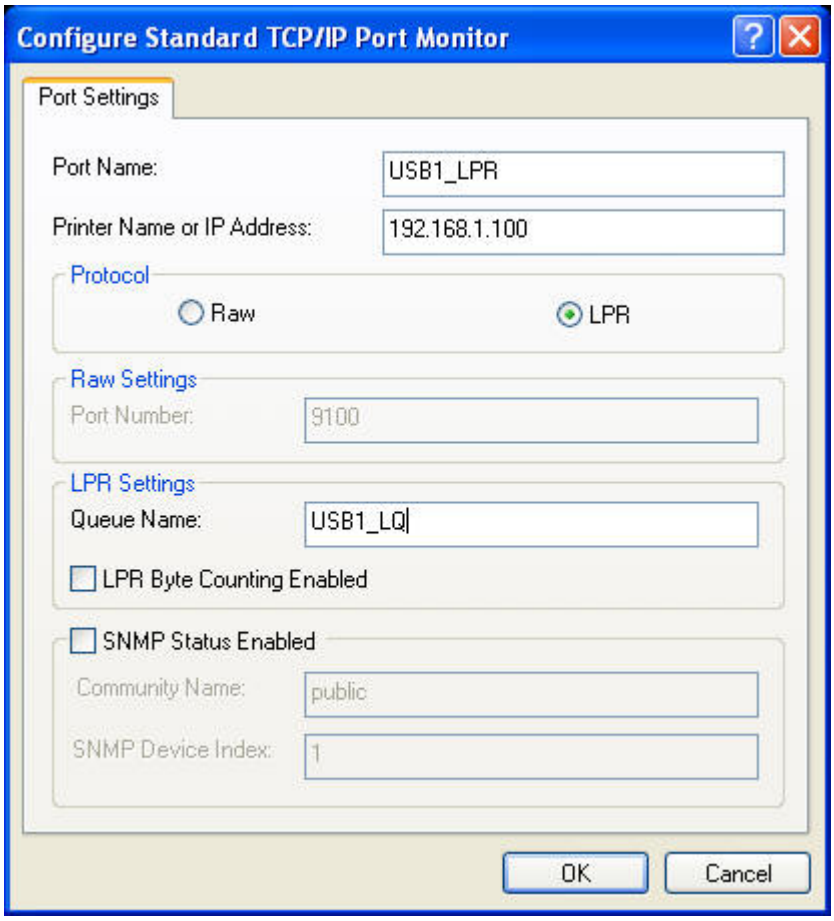

9. Click **Finish**

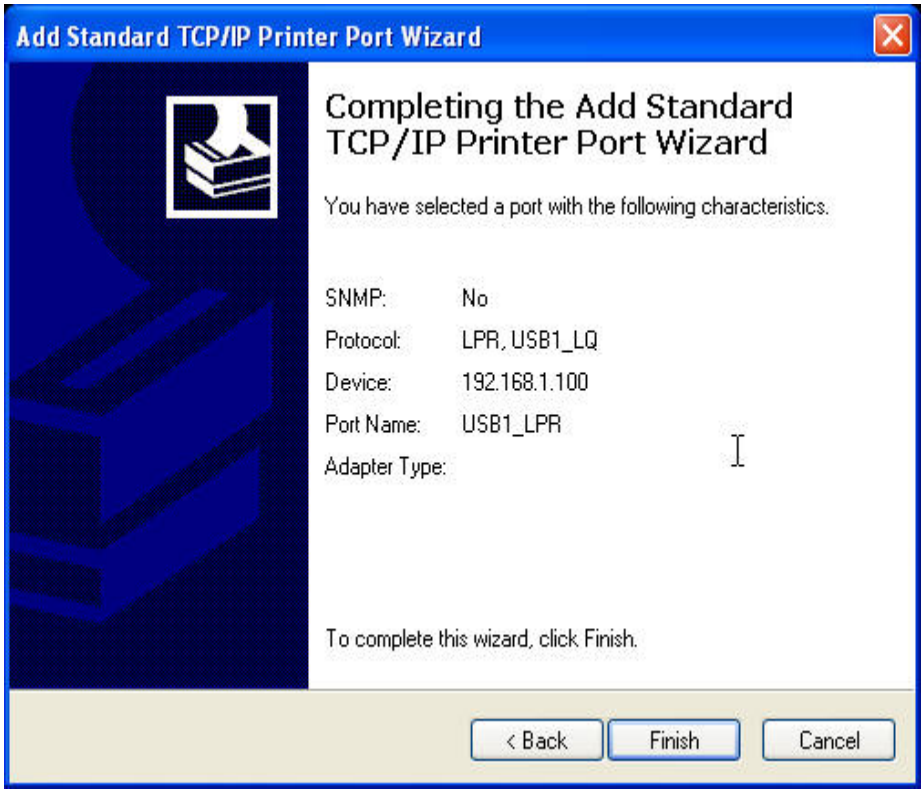

4.4.2 Using Control Center for LPR Printing

Windows Platform: Windows 2000, XP and 2003

1. Start MFP Server Control Center, select your MFP server and click **Add Printer**.

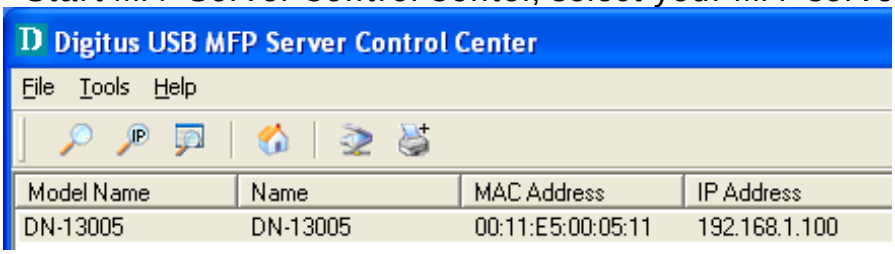

2. Select USB1 Port or USB2 Port to add the printer in **Add the printer** box, choose to use Host Name or IP address to represent MFP server in **Select IP address or Host Name in printer port** box, and select the network printing protocol of **Printing with LPR (Line Printer Remote)**.

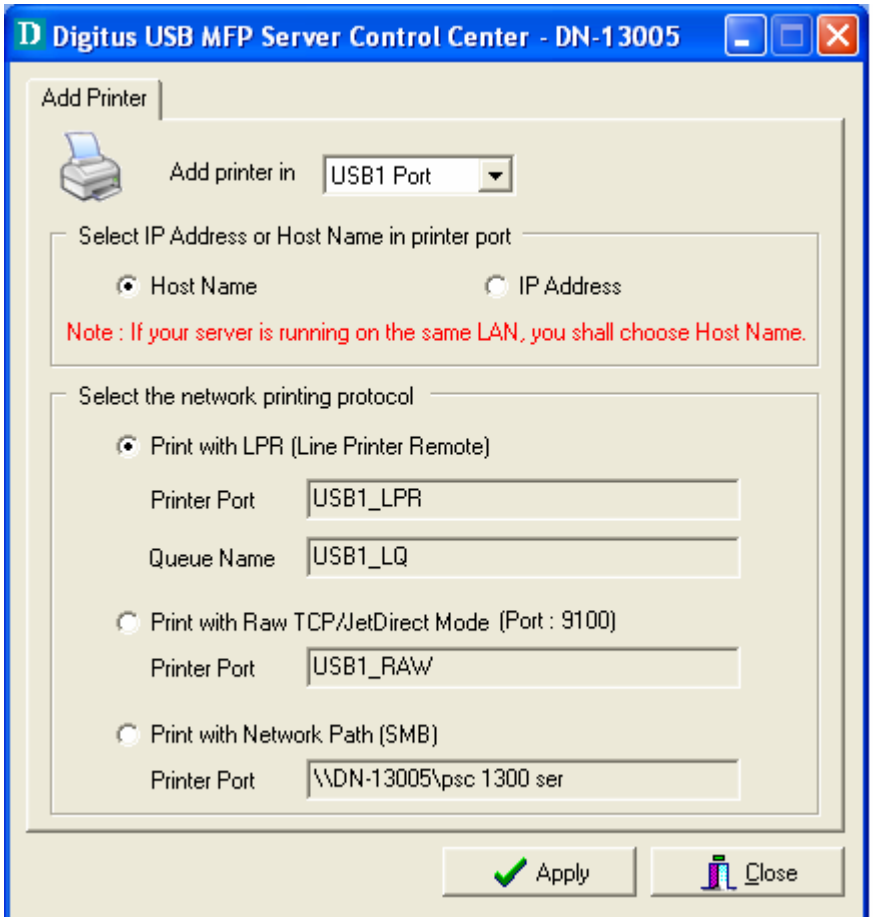

✍ *If your server is running on a different LAN than your Windows PC such as Internet PC, you must choose IP address in* **Select IP address or Host Name in printer port** *box.*

3. Click **Apply**.
4. Select the desired printer driver and click **Set Port to Printer**.

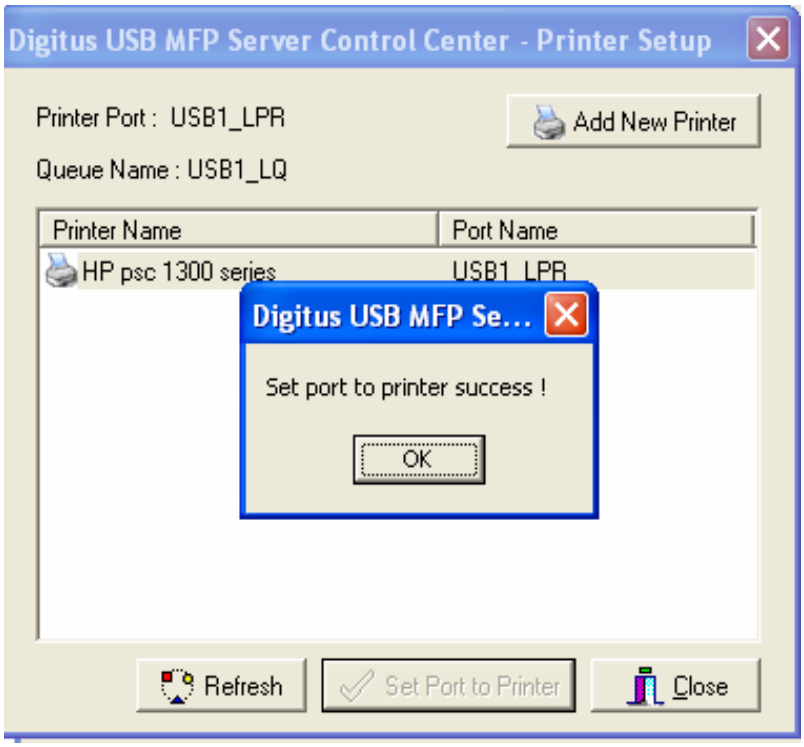

5. If you can not find any printer driver in Printer List, please install your printer driver first or click **Add New Printer** to install the printer driver.

4.4.3 Using Standard Windows Method for Raw TCP Printing

Windows Platform: Windows 2000, XP and 2003

1. Open **Printers and Faxes**
2. Right-click the printer for which you want to change settings, and then click **Properties**
3. Clear **Enable bidirectional support** and click **Add port**, and then click Standard TCP/IP Port from the dropdown and click **New port**.
4. The "**Add Standard TCP/IP Printer Port Wizard**" will pop up and click **Next**.
5. In the **Printer Name or IP Address** box, type Host Name of the MFP server (default: DN-13015) or IP address of MFP server. In the **Port Name** box, type **USB1_RAW** or **USB2_RAW** for printer connected to USB1 port and USB2 port, respectively.

   ✍ *If your server is running on a different LAN than your Windows PC such Internet PC, you must type server's IP address in **Printer Name or IP Address** box.*
6. Click **Next**.
7. Click **Custom/settings**.
8. The click Settings and confirm that the settings are as below. The default Port Number values are 9100, 9101 for USB port 1 and USB port 2, respectively. Refer to server's web pages or MFP Server Control Center tool, you can get exact values. Click **OK**.

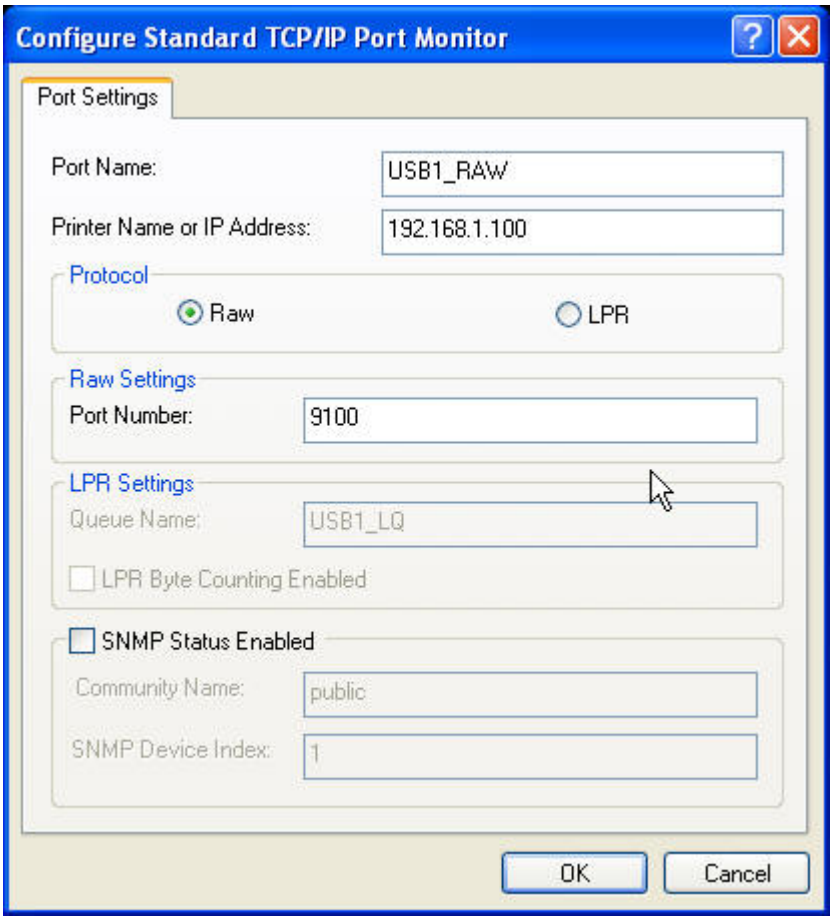

9. Click **Finish.**

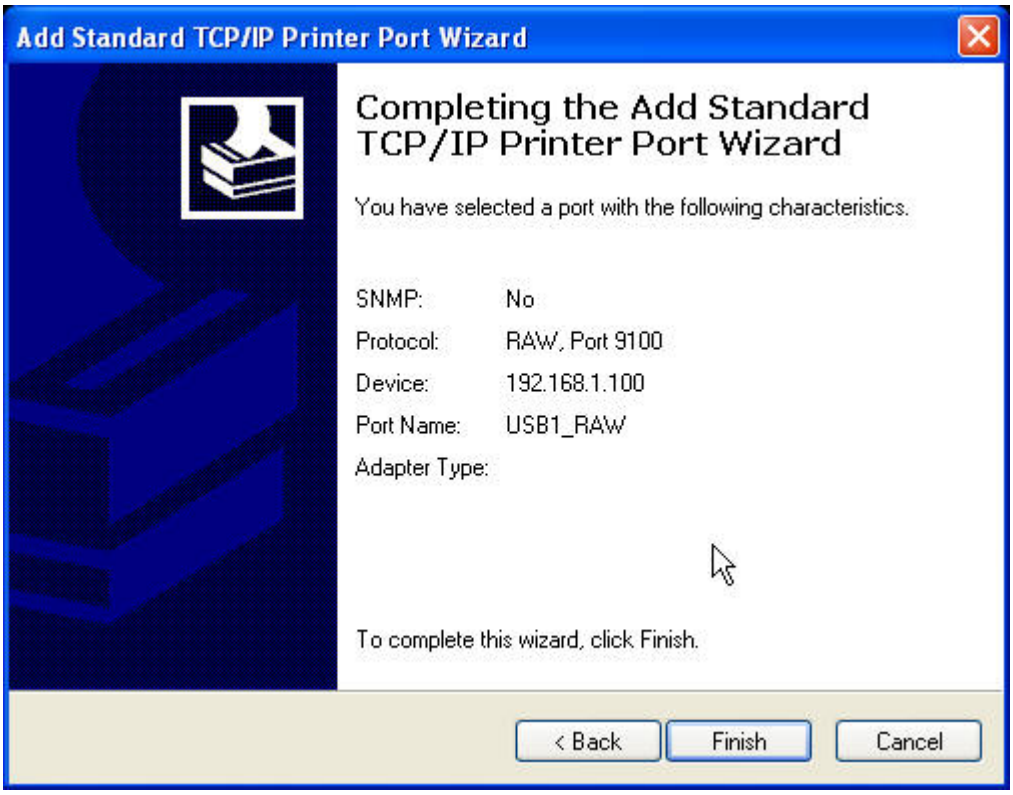

4.4.4 Using Control Center for Raw TCP/JetDirect Printing

Windows Platform: Windows 2000, XP and 2003

1. Start MFP Server Control Center, select your MFP server and click **Add Printer**.

2. Select USB1 Port or USB2 Port to add the printer in **Add the printer** box, choose to use or IP address to represent MFP server in **Select IP Address or Host Name in printer port** box, and select the network printing protocol of **Print with Raw TCP Mode**.

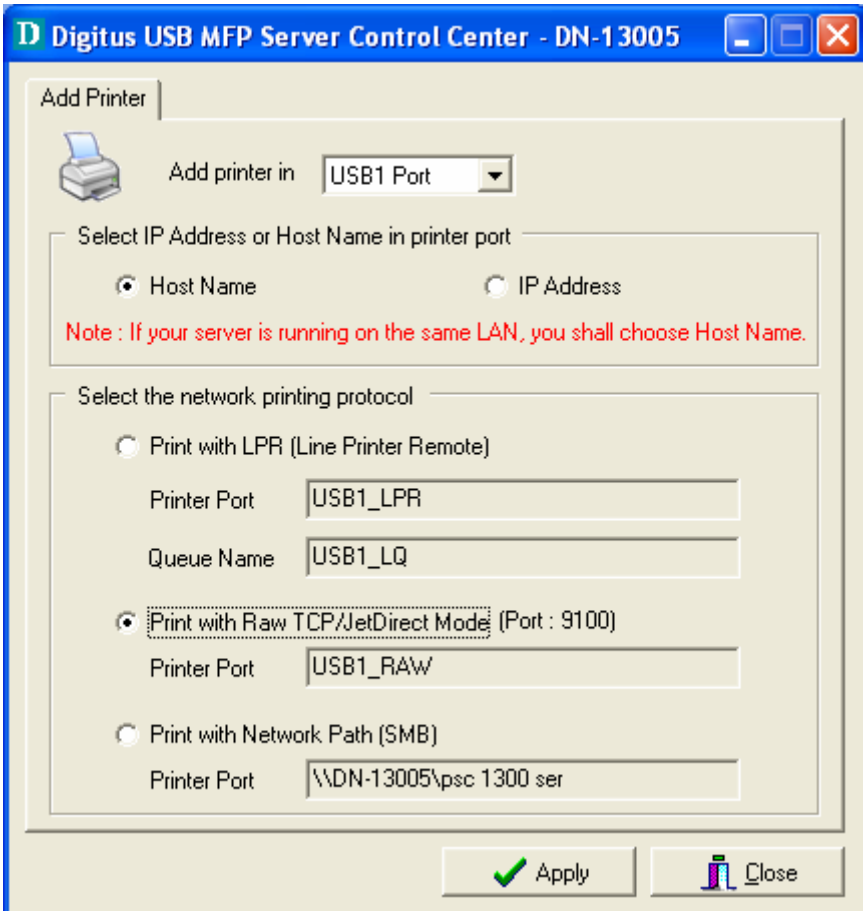

✍ *If your server is running on a different LAN than your Windows PC such as Internet PC, you must choose IP address in **Select IP Address or Host Name in printer port** box.*

3. Click **Apply**.

4. Select the desired printer driver and click **Set Port to Printer**.

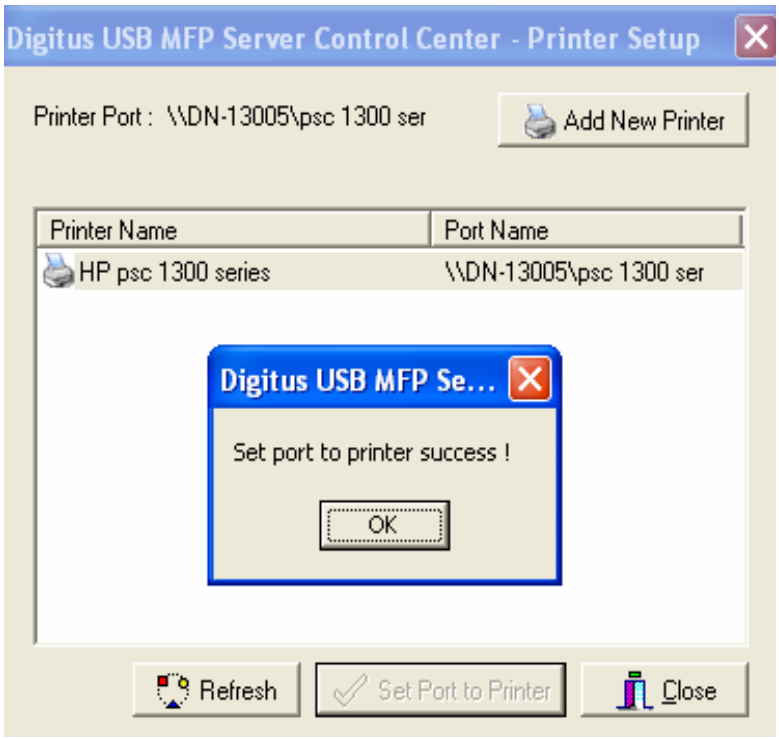

5. If you can not find any printer driver in Printer List, please install your printer driver first or click **Add New Printer** to install the printer driver.

4.4.5 Using Standard Windows Methods for SMB/CIFS Printing

- *Before using SMB/CIFS printing, you have to login the SMB/CIF Print/File server in advance and then you may use it; otherwise you have to disable SMB/CIFS Print/File Server Authentication.*
- *If you use SMB on Windows 98 SE/ME with Server Authentication, you must login to your Windows 98 SE/ME using the same user name as in server's User Account.*

Windows Platform: Windows 98SE, ME, 2000, XP and 2003

1. Open **Printers and Faxes**
2. Right-click the printer for which you want to change settings, and then click **Properties.**
3. Click the **Ports** tab.
4. Clear **Enable bidirectional support** and click **add port**, and click **Local Port**, and then click **New Port...** in the **Printer Ports** box.

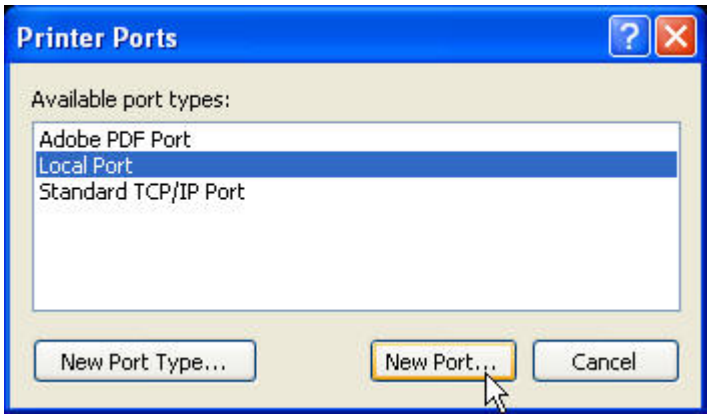

5. In the **Port Name** box, type the path to the printer in the following format: "\\ *server's Host Name*\printer name" or "\\ *server's IP address*\printer name" (Please refer to server's web pages or MFP Server Control Center tool to know exact path). For example: if you set server's Host Name as "DN-13015" and printer name (USB1 port) as psc 1300 ser, then the network path is expressed as: *\\DN-13015\psc 1300 ser*

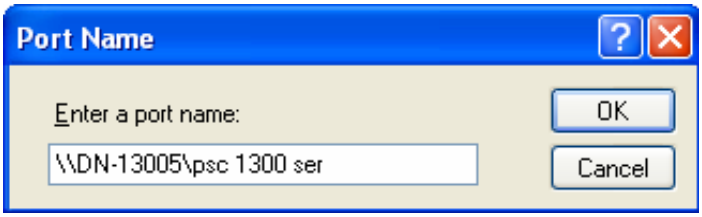

✍ *If your server is running on a different LAN than your windows PC such as Internet PC, you must type IP address in **Port Name** box.*

6. Click OK, and then select a Windows driver for your printer. If you already have the printer's driver installed, you will be asked whether to keep it or to replace it. Click Next.

7. Choose whether you want to share the printer with other network users. Do you want to print a test page? Select the appropriate radio button and click **Next** and **Finish**.

4.4.6 Using Control Center for SMB/CIFS Printing

✍ *Before using SMB/CIFS printing, you have to login the SMB/CIF Print/File server in advance and then you may use it; otherwise you have to disable SMB/CIFS Print/File Server authentication.*

✍ *If you use SMB on Windows 98 SE/ME with Server Authentication, you must login to your Windows 98 SE/ME using the same user name as in server's User Account.*

Windows Platform: Windows 98, ME, 2000, XP and 2003

1. Start MFP Server Control Center, select your MFP server and click **Add Printer**.

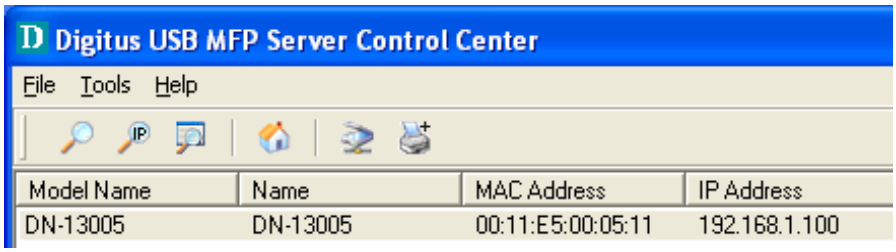

2. Select USB1 Port or USB2 Port to add the printer in **Add the printer** box, choose to use Host Name or IP address to represent MFP server in **Select IP Address or Host Name in printer port** box, and select the network printing protocol of **Printing with Network Path (SMB)**.

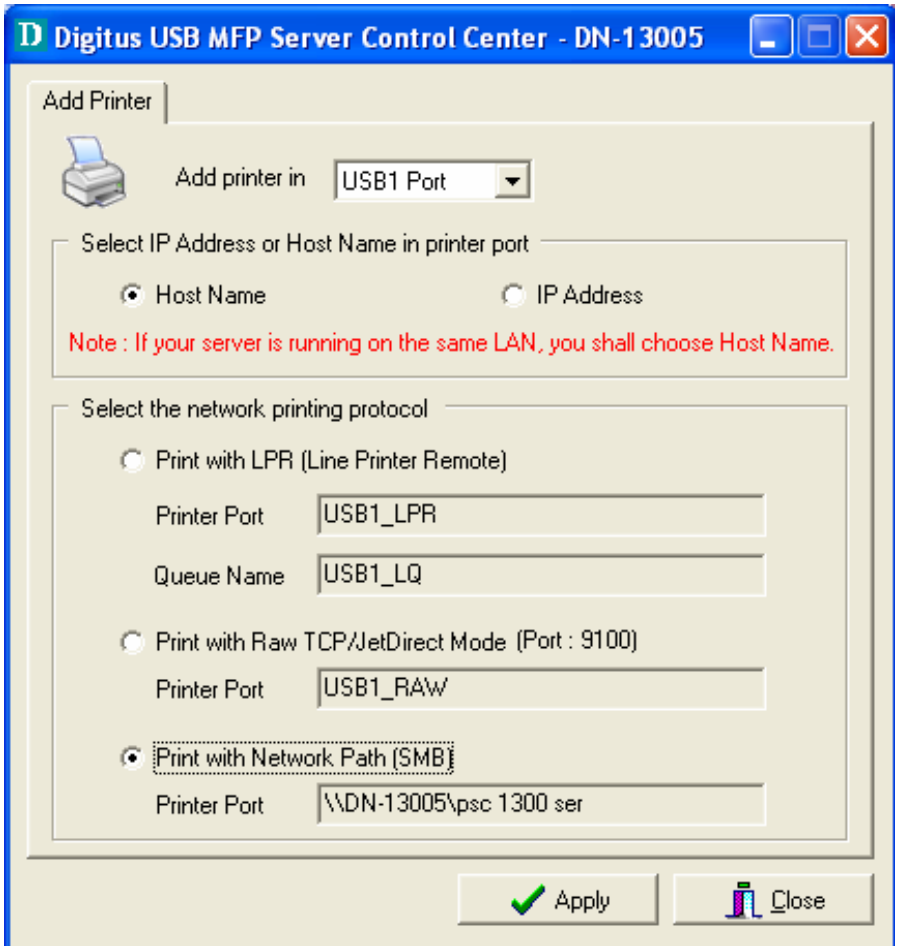

✍ *If your server is running on a different LAN than your Windows PC such as Internet PC, you must choose IP address in* **Select IP address or Host Name in printer port** *box.*

3. Click **Apply**.

4. Select the desired printer driver and click **Set Port to Printer**.

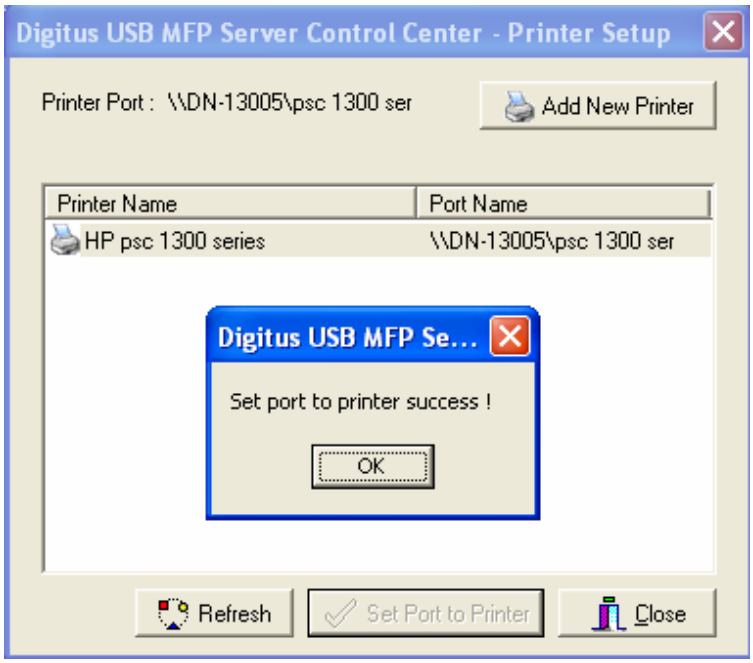

5. If you can not find any printer driver in Printer List, please install your printer driver first or click **Add New Printer** to install the printer driver.

4.4.7 Using Standard Windows Method for IPP Printing

Windows Platform: Windows 98 SE, ME, 2000, XP and 2003

1. Click Start, click **Control Panel**, click Printers and Other Hardware, and then click Printers and Faxes.

2. Double click Add Printer to start the Add Printer Wizard, and then click **Next**.

3. In this window, select **A network printer, or a printer attached to another computer** and click **Next**.

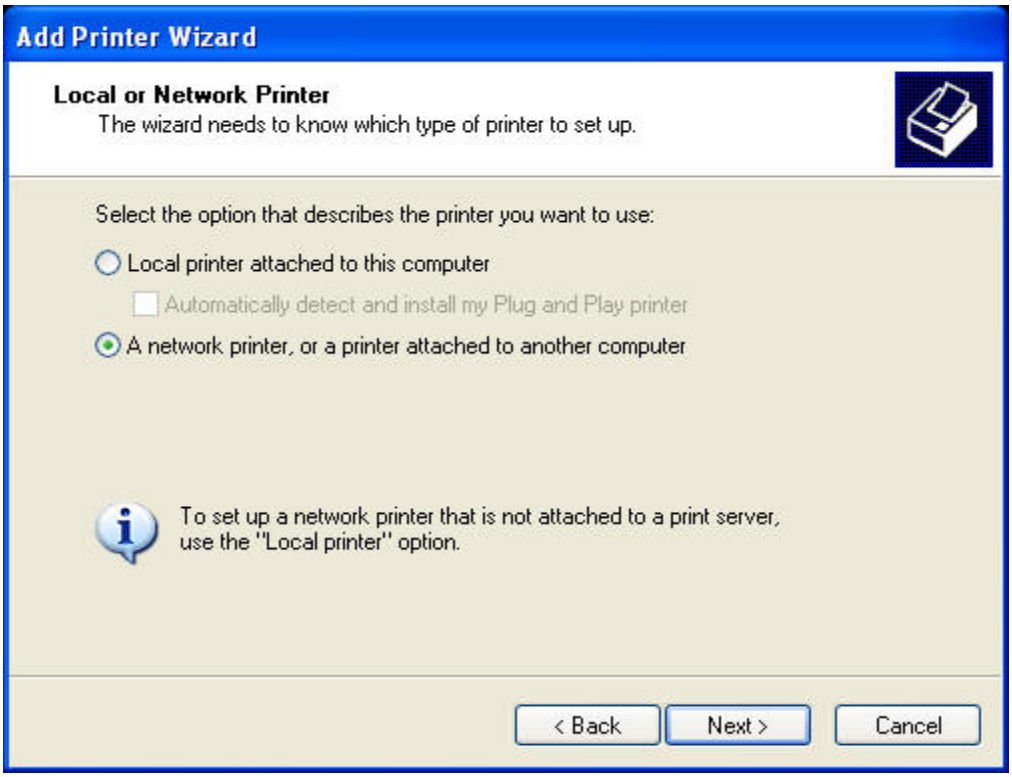
Add Printer Wizard
Local or Network Printer
The wizard needs to know which type of printer to set up.
Select the option that describes the printer you want to use:
Local printer attached to this computer
Automatically detect and install my Plug and Play printer
A network printer, or a printer attached to another computer
To set up a network printer that is not attached to a print server, use the "Local printer" option.
< Back
Next >
Cancel

4. Click the **Next** button. On the next window, select Connect to a printer on the Internet or on a home or office network. In the URL: field, enter the following to connect to MFP server: *http://sercver's Host Name /printer name* or *http:/server's IP address /printer name*
   For example, http://DN-13015/psc1300 ser

   ✍ *If your server is running on a different LAN than your windows PC such as Internet PC, you must type IP address in* ***URL: Field.***

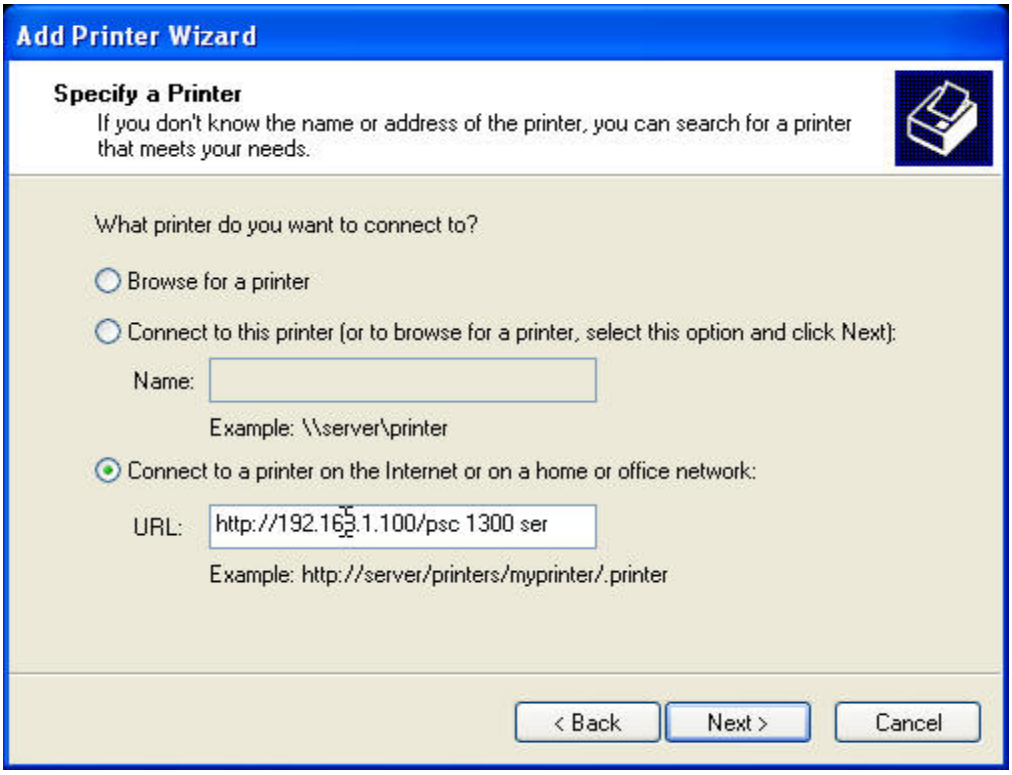
Add Printer Wizard
Specify a Printer
If you don't know the name or address of the printer, you can search for a printer that meets your needs.
What printer do you want to connect to?
Browse for a printer
Connect to this printer (or to browse for a printer, select this option and click Next):
Name:
Example: \\server\printer
Connect to a printer on the Internet or on a home or office network:
URL:
http://192.163.1.100/psc 1300 ser
Example: http://server/printers/myprinter/.printer
< Back
Next >
Cancel

5. Click **Next** and then continue Windows Add Printer Wizard.

Chapter5 Adding Printers in Unix/Linux

This chapter describes how to add network printers to Unix/Linux PC.

5.1 Configuring Host File

If using IP administration system like DNS, manually registering the Host Name and IP address may be not required. Otherwise, you have to edit hosts file and contact your network administrator.

1. Log in to Linux machine by “root”.
   # login root

2. Register Digitus DN-13015 MFP server’s Host Name and IP address to /etc/hosts file.
   To edit host file, use an editor, e.g. “vi”.
   Example: The IP address is “192.168.1.100”, Host Name is “DN-13015”
   192.168.1.1 dns # DNS Server
   192.168.1.2 mail # Mail Server
   192.168.1.100 DN-13015 # MFP-Server

3. Switch on the MFP server. Verify the network connection by using ping command.
   # ping DN-13015
   If there is no response or error is indicated, there may be problems with IP address configuration, host file editing or network status. Please contact your network administrator.

5.2 Printing by LPD/LPR

This section explains how to print using LPD protocol of TCP/IP.
For further information on “lpr” and “lp” commands, refer to your workstation manual.

LPD Protocol: LPD (Line Printer Daemon) is a protocol that enables you to execute printing to a printer on the network.

Remote-Printer Queue: Digitus DN-13015 has two remote printer queues USB1_LQ and USB2_LQ with respect to USB port 1 and UB port2.
To print files using a printer driver, use “lp” or “lpr”.

5.3 Using the Server on BSD UNIX/Linux

1. Log in to the BSD Unix machine through “root”.
   # login root

2. Register the Digitus DN-13015 MFP server to /etc/printcap file.
   Example: To register the printer of USB1 port by the printer name “Printer1”.
   Printer1:\ ---(A)

```
        :lp=:rm=DN-13015:rp=USB1_LQ:\ ---(B)
        :sd=/var/spool/lpd/Printer1:\ ---(C)
        :lf=/var/spool/lpd/Printer1/Printer1_errs: ---(D)
```

where
(A) Describes the printer name.
(B) lp: Device file name to connect printer. No name designation required on the network.
rm: Host Name for the remote printer. Type the Host Name registered to /etc/hosts file.
rp: Remote printer name. Please input the remote printer queue name.
(C) sd: Spool directory name. It must be the absolute path.
(D) lf: Error log file name. It must be the absolute path.

3. Create the spool directory and error log file registered to /etc/printcap file.
   Example: To create the spool directory “Printer1” and error log file “Printer1_errs”.
   # mkdir /var/spool/lpd/Printer1 Create the spool directory
   # touch /var/spool/lpd/Printer1/Printer1_errs Create the error log file
   # chown -R daemon /var/spool/lpd/Printer1 Change the owner to daemon
   # chgrp -R daemon /var/spool/lpd/Printer1 Change the group to daemon

4. Start Printing.

   A. Use the "lp" command.

      -# lp -d Printer1 <Print file name>
      -# lp -d Printer2 <Print file name>

   B. Use the “lpr” command.

      -# lpr -P Printer1 <print file name>
      -# lpr -P Printer2 <Print file name>

5.4 Using the Server on RedHat Linux (Fedora Core)

In the RedHat (Fedora Core) x-window user interface, do the steps as follows:

1. To start the application, select **Main Menu** button (on the Panel)-> **Applications**->**System Settings -> Printing**.

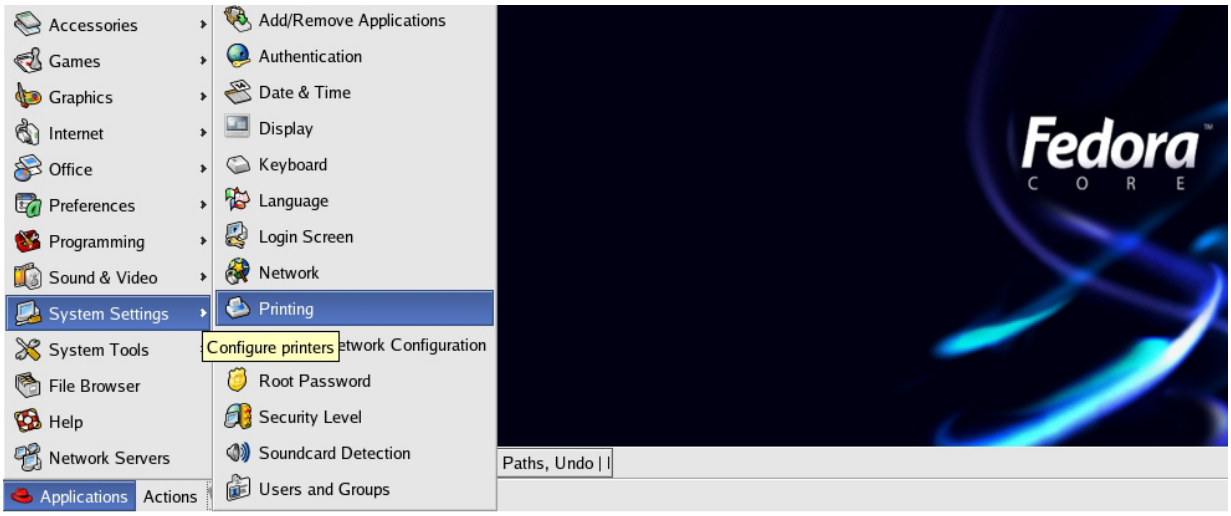

2. Click on the **New** button in the **Printer configuration** window.

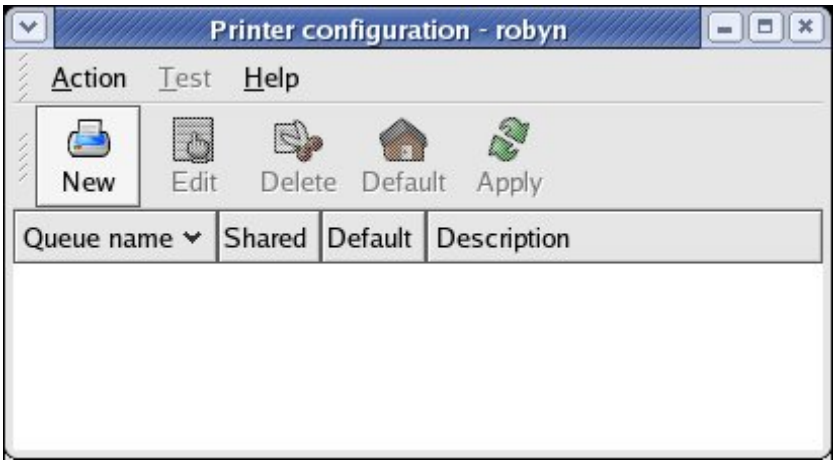

3. Click on the **Forward** button in the **Add a new print queue** window.

Add a new print queue
Add a new print queue
On the following screens, you will be asked to provide basic information for adding a new print queue. You will be able to edit the more advanced options afterwards.
Nothing will be done to your settings until you hit "Finish" on the last screen.
Help
Cancel
Back
Forward

4. Fill in your desired printer name and description (optional) in **Queue name** window and then click on the **Forward** button.

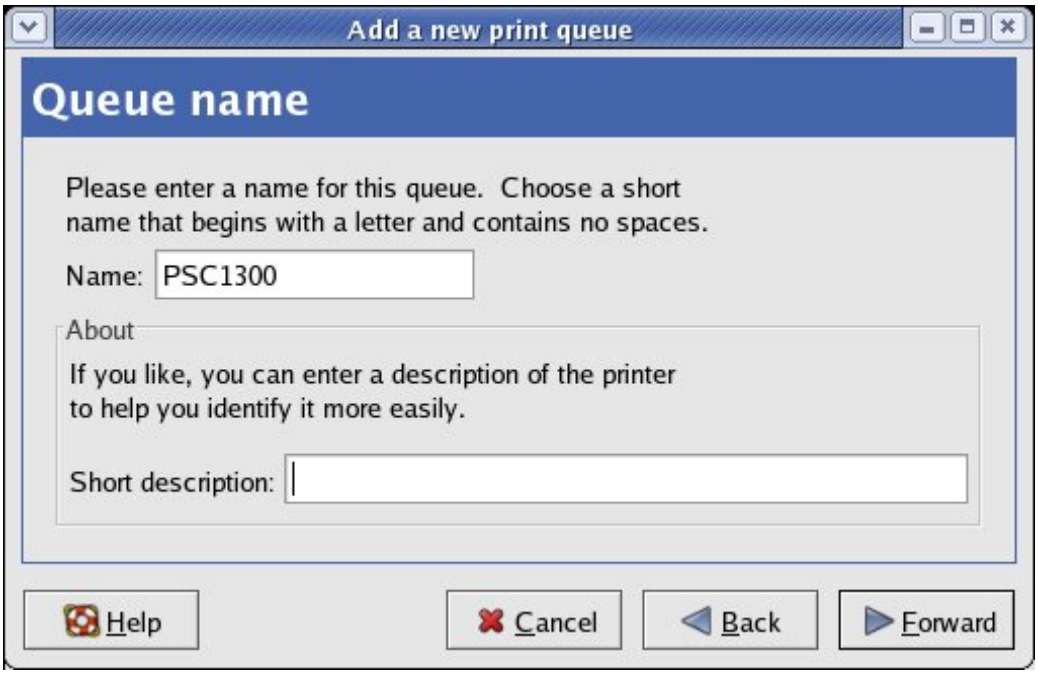
Add a new print queue
Queue name
Please enter a name for this queue. Choose a short name that begins with a letter and contains no spaces.
Name: PSC1300
About
If you like, you can enter a description of the printer to help you identify it more easily.
Short description:
Help
Cancel
Back
Forward

5. In **Queue type** window, you will now be asked to specify which Printer Queue type you are using, select the one option form **Networked Unix (LPD)**, **Networked CUPS (IPP)**, **Networked Windows (SMB)** and **Networked JetDirect** options. Click on the **Forward** button.

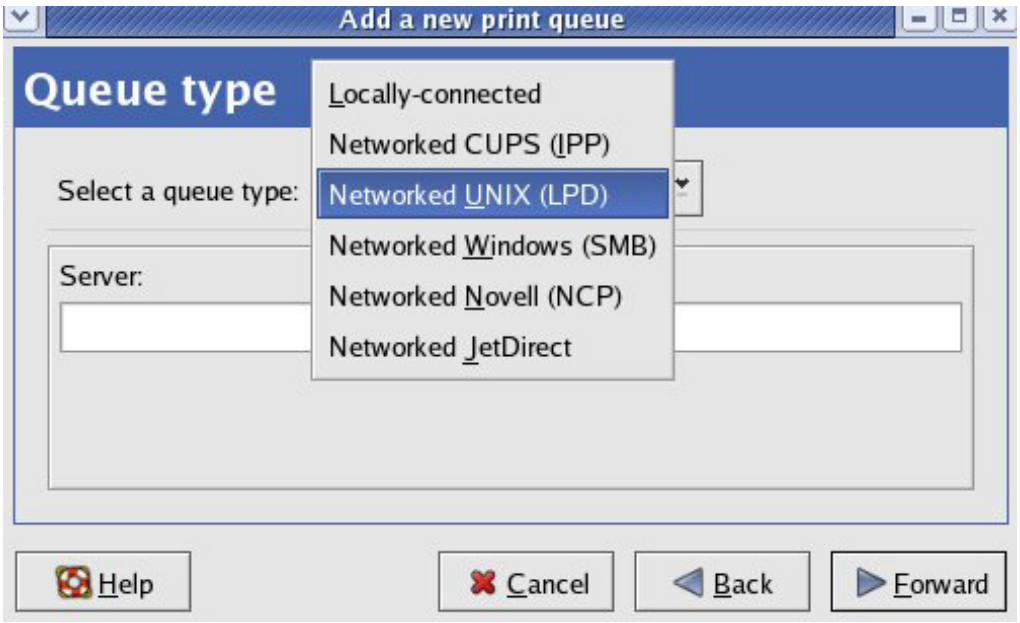

6. Fill in parameters for **Queue type** window**:**
   A. **Networked Unix (LPD)**: Fill in MFP server's IP address and queue name and then click the **Forward** button. *Example:* If your MFP server's IP

address is 192.168.1.100 and it connects HP PSC 1300 MFP via USB1 port. You can type IP in server box as 192.168.1.100 and Queue name in Queue box as USB1_LQ.

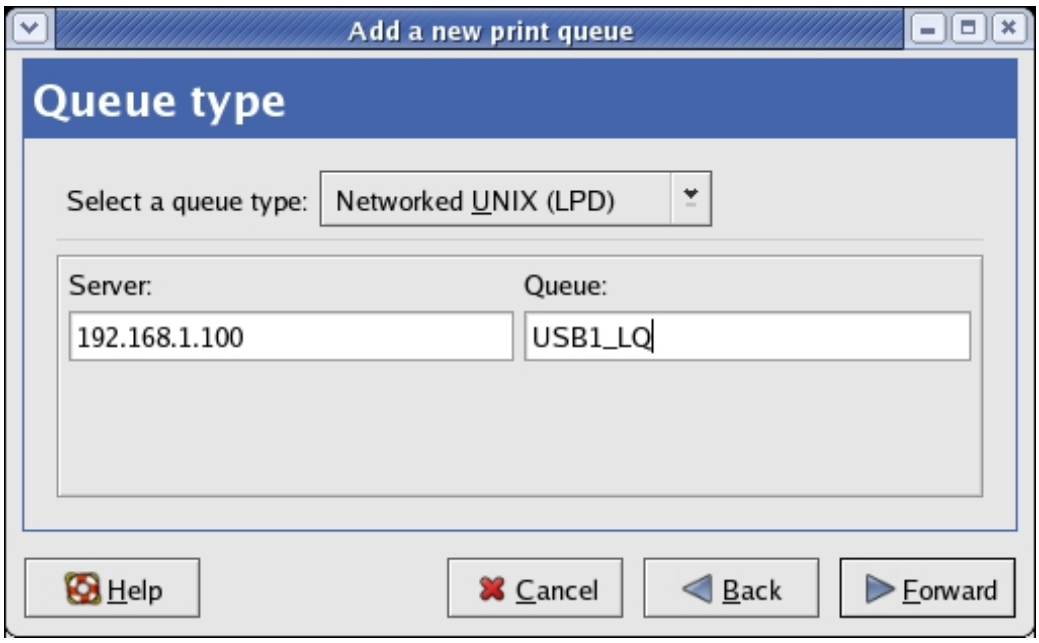

B. **Networked JetDirect**: Fill in MFP server's IP address and protocol's TCP port and then click the **Forward** button. *Example:* If your MFP server's IP address is 192.168.1.100 and it connects HP PSC 1300 MFP via USB1 port. You can type IP in server box as 192.168.1.100 and TCP Port in **Port** box as 9100.

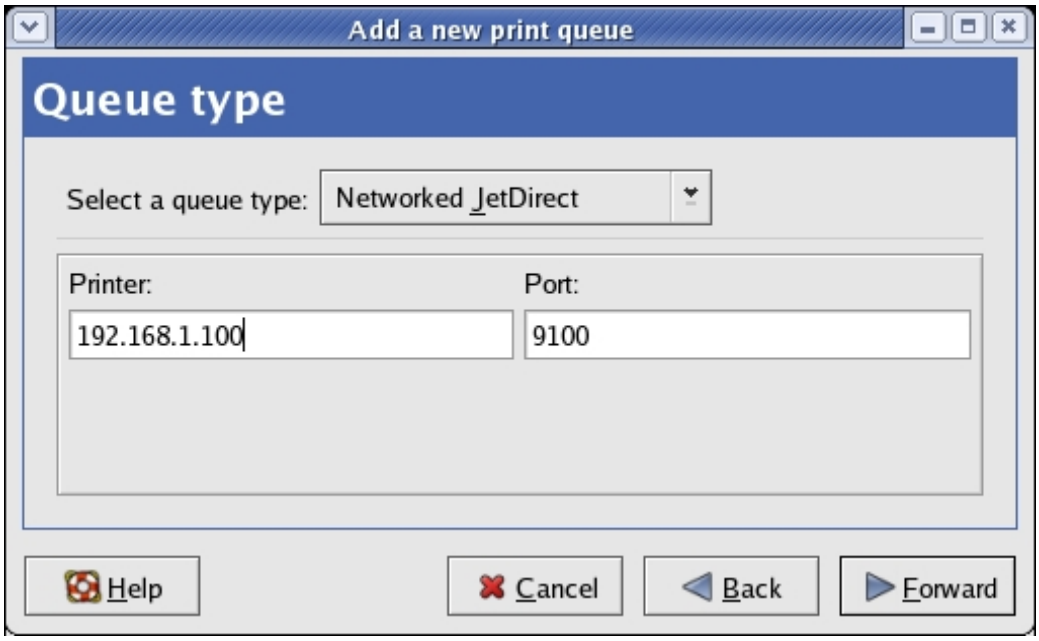

C. **Networked Windows (SMB):**

i. Click on the **Specify** button to specify SMB server Authentication.

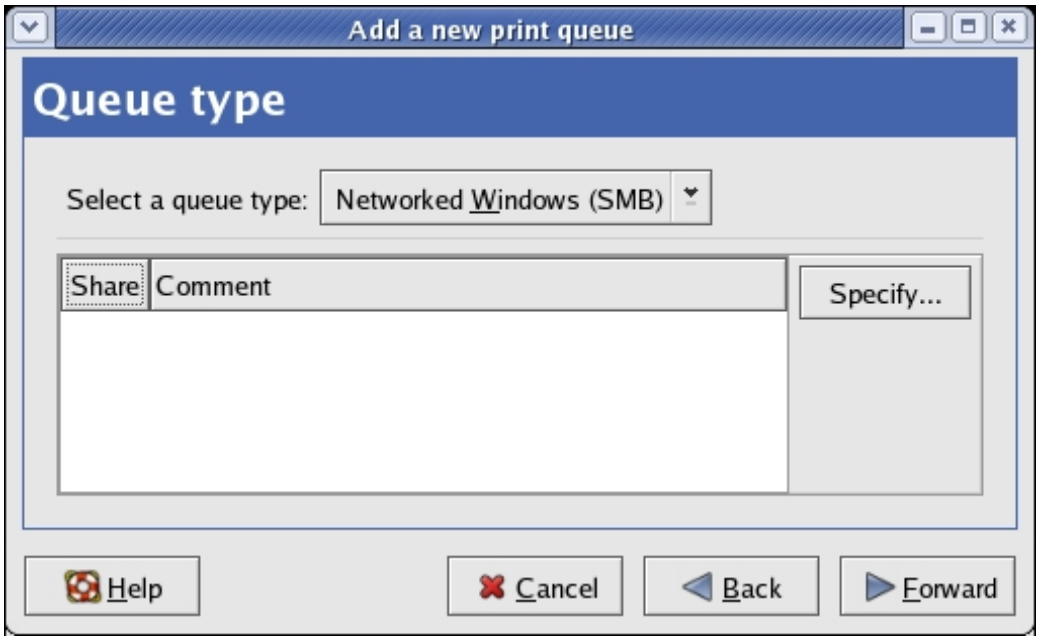

ii. Fill in the Workgroup, Host Name, User name and Password in **Authentication** window and then click on the **OK** button.

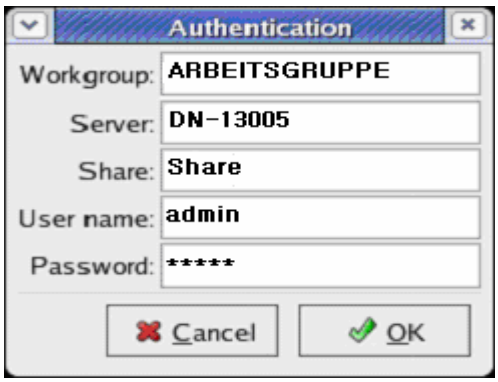

iii. Click on the **Forward** button.

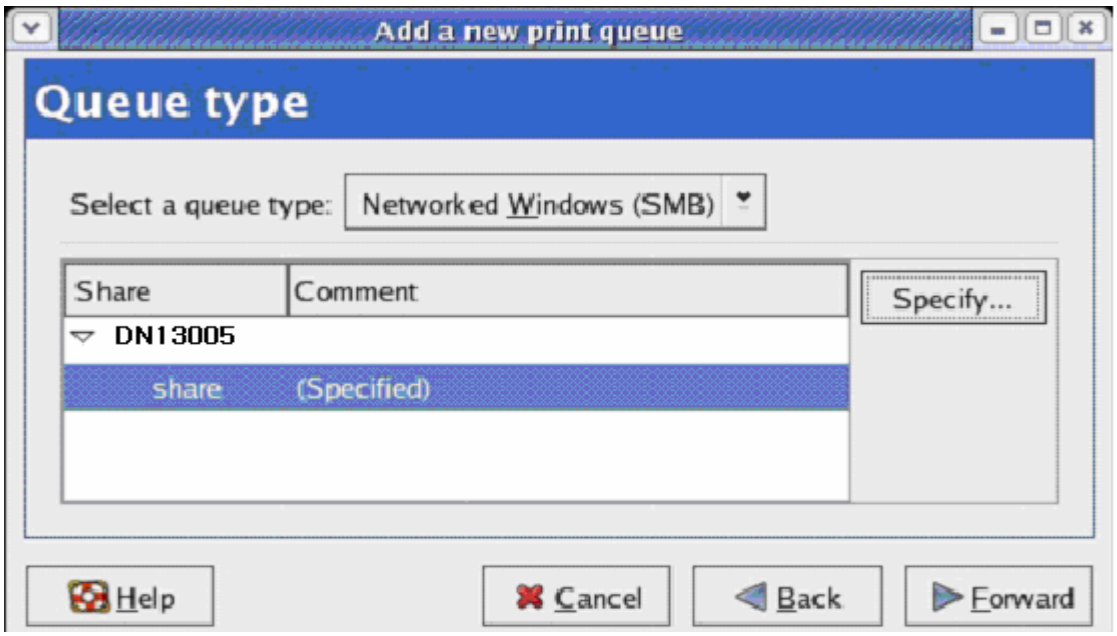

D. **Networked CUPS (IPP):** Fill in MFP server's IP address and printer name then click the **Forward** button. *Example:* If your MFP server's IP address is 192.168.1.100 and its printer name is **psc 1300 ser**. You can type IP in **Server** box as 192.168.1.100 and printer name in **Path** box as **psc 1300 ser**.

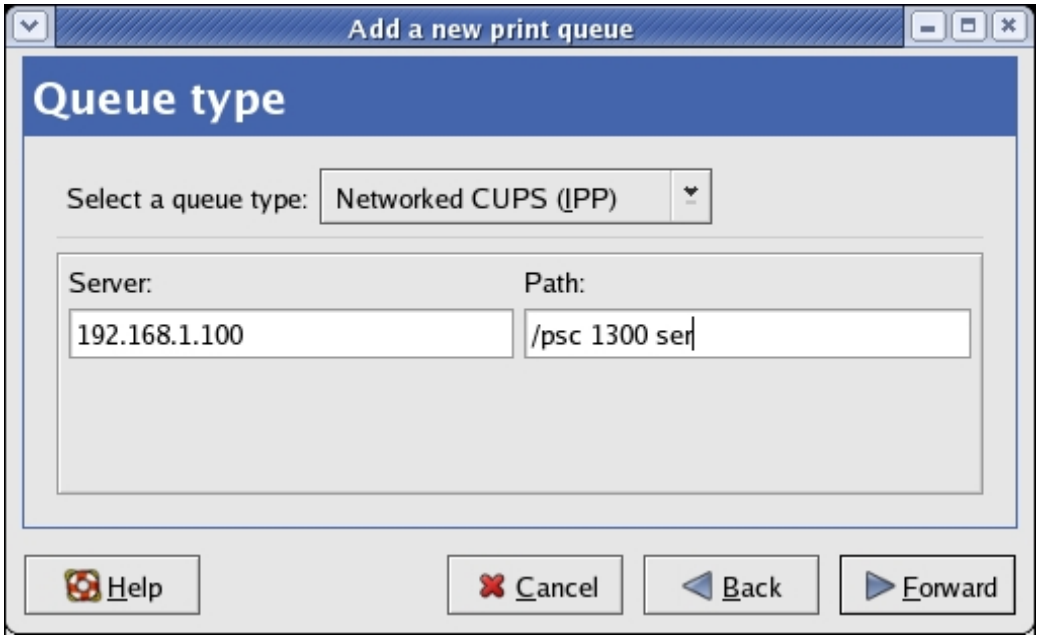

7. Select your printer driver. Click on the **Forward** button. Windows will display the **Finish, and create the new print queue** folder.

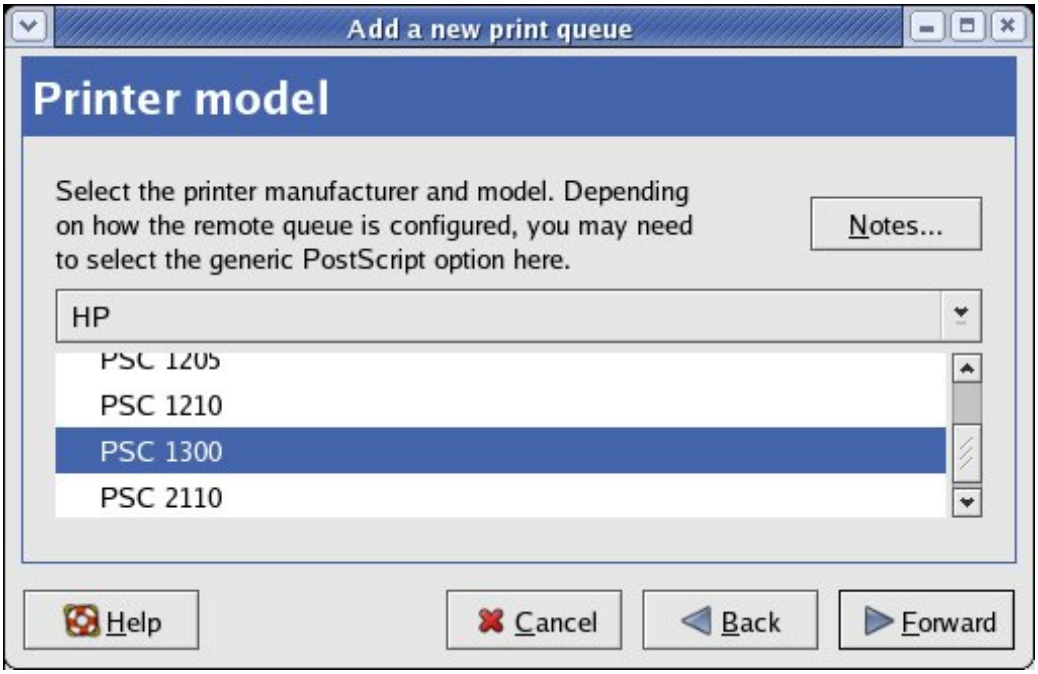

8. Click **Finish** button.

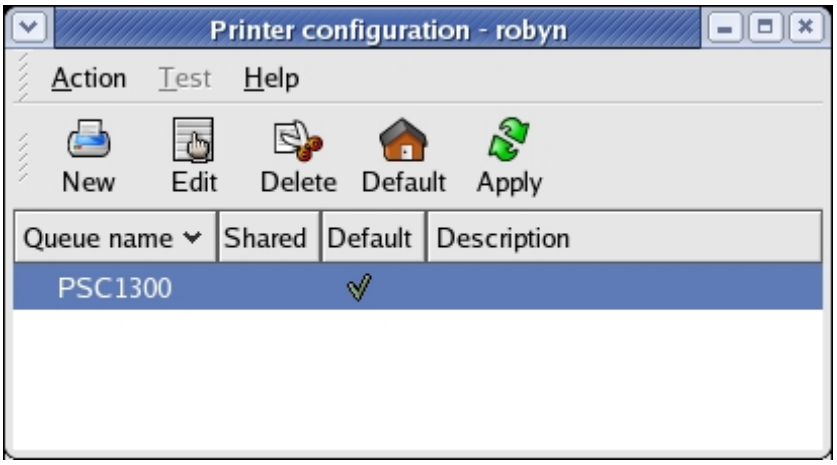
Printer configuration - robyn
Action
Test
Help
New
Edit
Delete
Default
Apply
Queue name
Shared
Default
Description
PSC1300

Chapter6 File Server Function

This chapter describes the file server function of Digitus DN-13015 MFP server which allows USB storage devices to be shared across a network by using SMB: NetBIOS over TCP/IP and FTP protocol.

6.1 Preliminary

1. This product supports a file format of FAT12/16/32. It will not support a drive formatted by NTFS, etc.

2. Digitus technology is not responsible for the loss or corruption of data in memory devices, including hard disk; Digitus is not responsible for the leak, manipulation, loss, or corruption of data in memory devices connected to MFP server after unauthorized access.

3. In order to use the USB Mass Storage device connected to the MFP server, the SMB protocol or FTP protocol must be set up.

4. This product does not support to magnet optical drive devices such as CD/DVD.

5. This product allows shared two USB storage devices over the network in Windows through the USB ports.

6. This product does not support the USB devices through USB hub.

6.2 Storage Names

The local drives of the two storages in USB1 port and USB2 port are named as USB*x*_D*x*P*x*, where USB*x* represents the USB*x* port, D*x* represents the the *x*-th Disk and P*x* represents the *x*-th partition.

6.3 Connecting USB Mass Storage to the Server

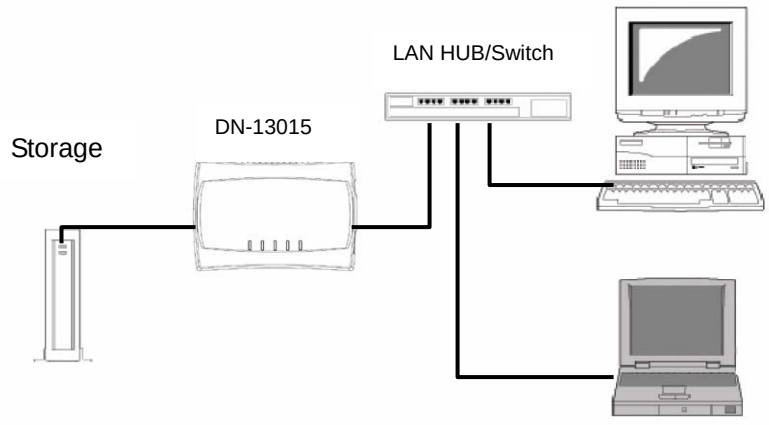

6.4 Supported Codepages

- What is codepage?

Used by the system to encode and interpret string characters. Codepage formats are not the same for each language. Some languages, such as Japanese have multibyte characters, while others, such as English and German, need only one byte to represent each character.

- Filename Encoding of FAT File System

This is known as an 8.3 file name, a short file name using codepage encoding. The FAT file system also supports file names that can be up to 255 characters long. This is known as a long file name using Unicode (UTF-16) encoding.

- When do you need to configure codepage?

MFP Server supports Windows codepages. If users want to communicate files using FTP client tool or SMB on Windows 98/Me/2000 with Digitus DN-13015 MFP server, they have to set their MFP server codepage to be same as the codepage that their Windows PC is using.

1. FTP

2. SMB on Windows 98/Me/2000

- Configuring Digitus DN-13015 Codepages

Users can use the following methods to set MFP server codepage.

A. Using Control Center

1. Start Control Center and Auto-searching MFP server window will appear.

2. If the tool finds MFP servers in your local area network, then you have to select a MFP server from the server list.

3. Double click the highlight list and type the server's administrator (default: *admin*) and password (default: *admin*).

4. After you login successfully, setting **General Configuration** dialog appears.

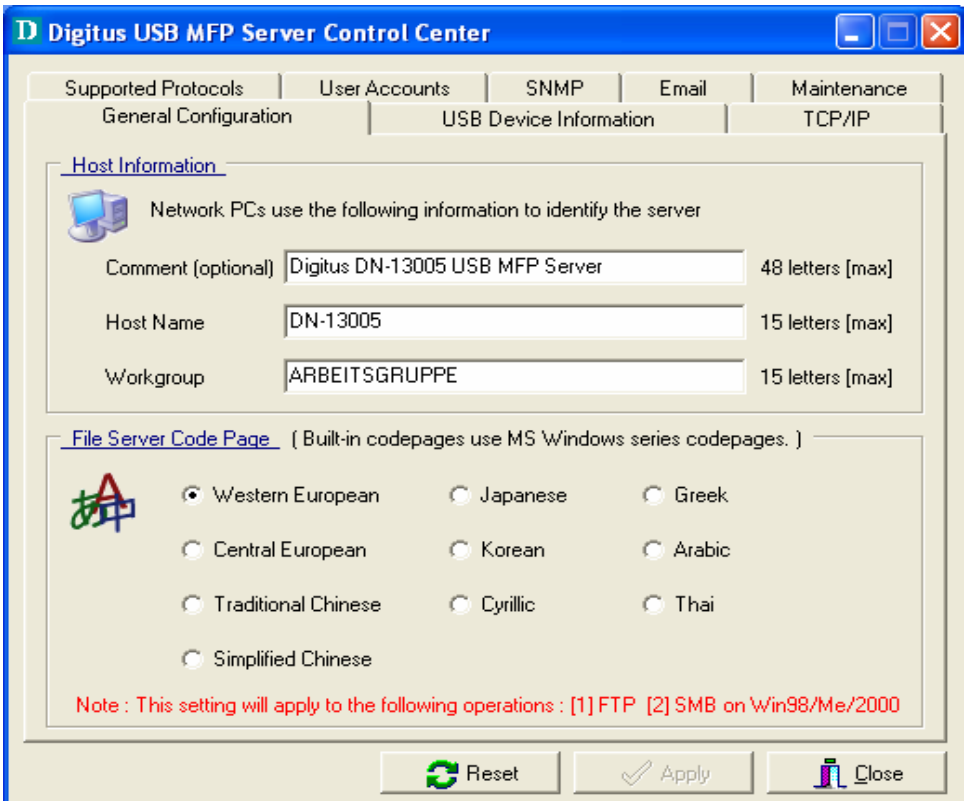

5. Select your codepage form **File Server Codepage** box and click **Apply**.

B. Using Server's Web Pages

1. Go to the web page, click **CONFIG**
2. Login your administrator (default: *admin*) and password (default: *admin*).
3. After you login successfully, setting **General Configuration** dialog appears.

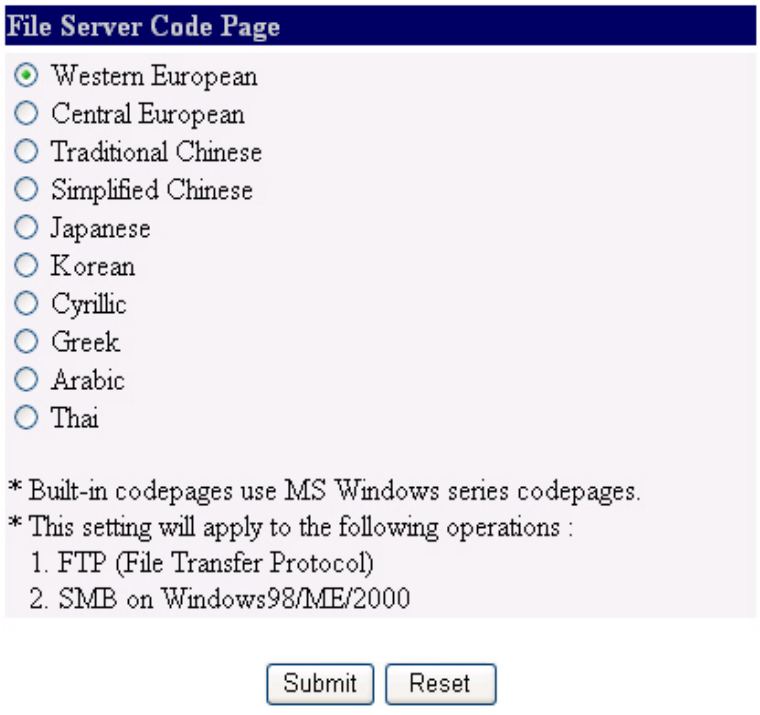

4. Select your codepage form **File Server Codepage** box and click **Apply**.

6.5 Adding Your USB Mass Storages to Network with Security

You can use the following protocols to share your USB Mass Storages with user level security in network:

- SMB/CIFS: NetBIOS over TCP/IP
- FTP

The protocols are shown in **Supported Protocols** box of MFP Control Center or server's web pages.

6.5.1 Setting up File Server Using Control Center

1. Start Digitus DN-13015 MFP Server Control Center and Auto-searching MFP server window will appear.

2. If the tool finds MFP servers in your local area network, then you have to select a MFP server from the server list.

3. Double click the highlight list and type the server's administrator (default: *admin*) and password (default: *admin*).

4. After you login successfully, click **Supported Protocols**.

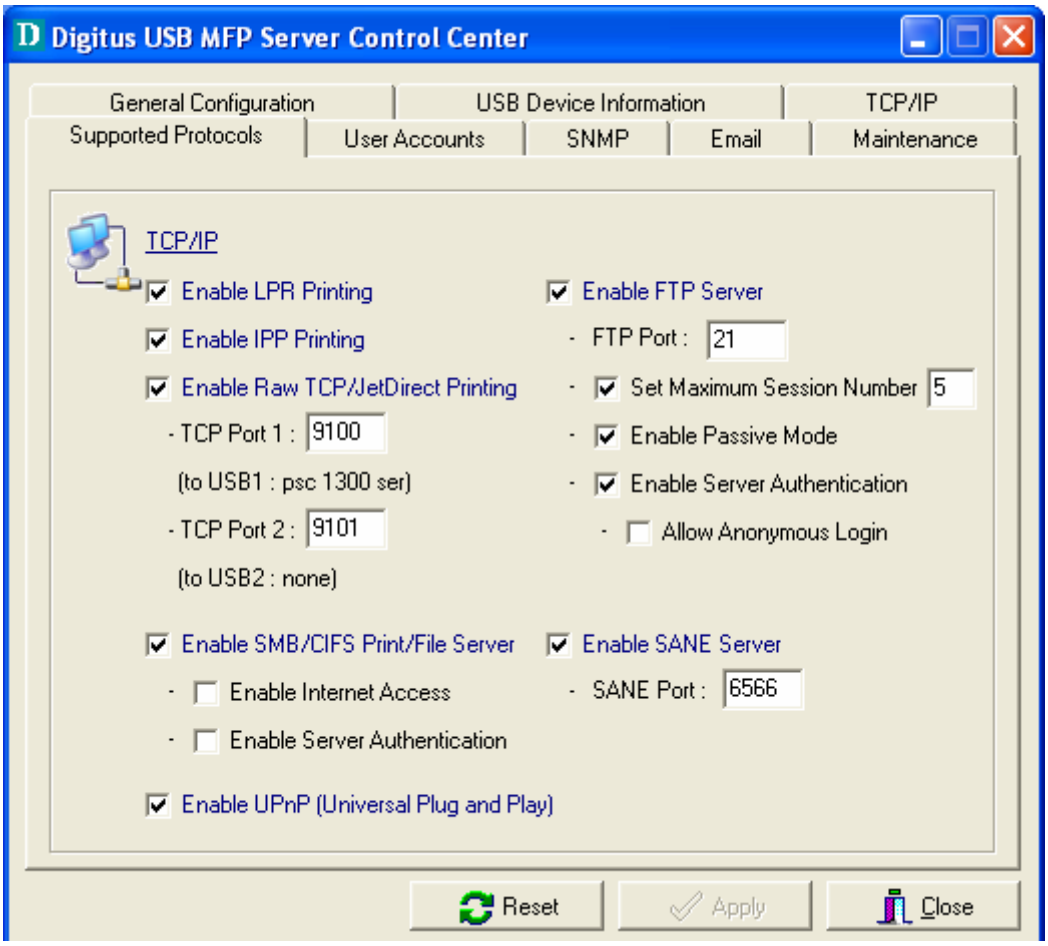

5. Set up File Server Configuration:

   A. Set SMB/CIFS Print/File Server

   - **Enable SMB/CIFS Print/File Server**: select the item, if you want to support SMB/CIFS print/File server.
   - **Enable Internet Access**: clear the item, if you do not allow that users can access your SMB/CIFS server via Internet. If you select the item, you allow Internet users can access your storage using the SMB/CIFS protocol.
   - **Enable Server Authentication:** select the item, if you want to share your storage with user level security which requires user name and password to login. If you clear the item, your storage will be shared without security.

   B. Set FTP Server:

   - **Enable FTP Server:** select the item, if you want to support FTP server.
   - **FTP port**: type the desired FTP port. The default value is 21.
   - **Maximum Session Number:** select the item and fill in desired

number.

- **Enable Passive Mode:** select the item, if you want to allow that your FTP server can accept passive mode command.

- **Enable Server Authentication:** select the item, if you want to share your storage with user level security which requires user name and password to login. If you clear the item, your storage will be shared without security.

- **Allow Anonymous Login:** select the item, if you want to allow the user "anonymous" to login your FTP server with read-only permission and server will not check the password. If you clear the item, your FTP server will not support anonymous login function.

6.5.2 Setting up File Server Using Web Pages

1. Go to the web page, click **CONFIG**

2. Login your administrator (default: *admin*) and password (default: *admin*).

3. After you login successfully, click **Supported Protocols**.

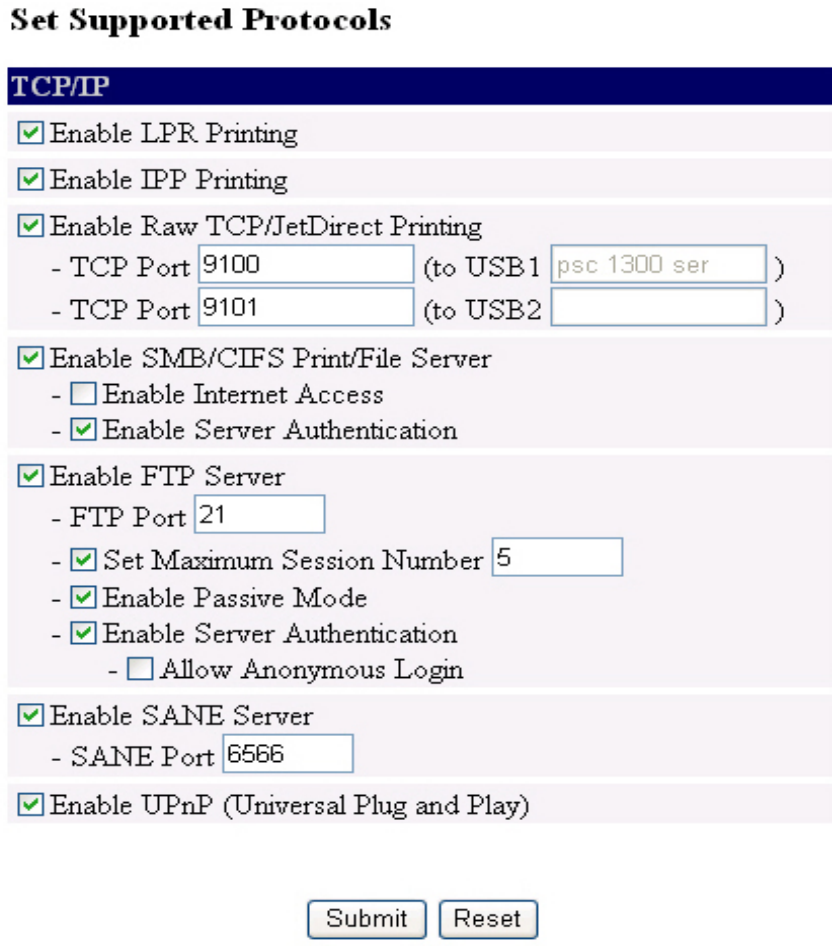
Set Supported Protocols
TCP/IP
Enable LPR Printing
Enable IPP Printing
Enable Raw TCP/JetDirect Printing
- TCP Port 9100 (to USB1 psc 1300 ser)
- TCP Port 9101 (to USB2)
Enable SMB/CIFS Print/File Server
- Enable Internet Access
- Enable Server Authentication
Enable FTP Server
- FTP Port 21
- Set Maximum Session Number 5
- Enable Passive Mode
- Enable Server Authentication
- Allow Anonymous Login
Enable SANE Server
- SANE Port 6566
Enable UPnP (Universal Plug and Play)
Submit
Reset

4. Set up File Server Configuration:

   A. Set SMB/CIFS Print/File Server

- **Enable SMB/CIFS Print/File Server**: select the item, if you want to support SMB/CIFS print/File server.

- **Enable Internet Access**: clear the item, if you do not allow that users can access your SMB/CIFS server via Internet. If you select the item, you allow Internet users can access your storage using the SMB/CIFS protocol.

- **Enable Server Authentication:** select the item, if you want to share your storage or printer with user level security which requires user name and password to login. If you clear the item, your storage will be shared without security.

B. Set FTP Server:

- **Enable FTP Server:** select the item, if you want to support FTP server.

- **FTP port**: type the desired FTP port. The default value is 21.

- **Maximum Session Number:** select the item and fill in desired number.

- **Enable Passive Mode:** select the item, if you want to allow that your FTP server can accept passive mode command.

- **Enable Server Authentication:** select the item, if you want to share your storage with user level security which requires user name and password to login. If you clear the item, your storage will be shared without security.

- **Allow Anonymous Login:** select the item, if you want to allow the user "anonymous" to login your FTP server with read-only permission and server will not check the password. If you clear the item, your FTP server will not support anonymous login function.

6.5.3 Use Shared Storages by SMB/CIFS Method for Windows

1. Connect a USB storage device to this product.

2. Select **My Network Places**

3. Click **Display the Computers of Workgroup**

4. Double click **Microsoft Windows Network** icon.

5. Double click the **Workgroup** that MFP server belongs to. The default Workgroup name is "*ARBEITSGRUPPE"*. You can refer to Control Center or the Server's web pages to get it. You will see that the MFP server will be displayed

as the default Host Name "*DN-13015*" or the Host Name that you have set.

6. If you can not find Workgroup name of MFP server in Microsoft Windows Network, you can select **Search for Computer…** in **My Network Places** and type the hostname of MFP server (For example, default Host Name *"DN-13015" or server's IP address*) to find it.

7. Double click this Host Name icon.

8. If you clear **Enable SMB/CIFS Print/File Server Authentication** in **Supported Protocols**, you login to the SMB server without requiring authentication; otherwise you have to type user name and password to login to the server. You can add user name and password in **User Account** box by MFP control center or server's Web page.

   ✍ **Note:**
   If you use SMB on Windows 98 SE/ME, you must login to your Windows 98 SE/ME using the same user name as in server's ***User Account****.*

9. The shared folders will be listed as USB1_DxPx, and USB2_DxPx where Dx represents the x-th disk and Px represents the x-th partition with respect to USB1 port and USB2 port.

10. Perform Open, Paste, Remove or Copy the files to the shared folders.

6.5.4 Use Shared Storage by FTP Methods for Windows

A. Use Microsoft IE to the shared USB Mass Storages

1. Open Microsoft IE

2. In **Web Address List**, type command: "ftp://server's *Host Name*" or "ftp://*server's IP address"*. If you have changed the default FTP port : 21 to the new value, you have to add the new port number in the tail of command as *"ftp://server's Host Name: ftp port" or* "ftp://server's *IP address: ftp port*".

3. If you set **Enable Server Authentication in FTP server protocol settings** you have to type user name and password to login to the server; if you set **Allow Anonymous Login**, you can use the user name "anonymous" to login with Read-only permission. If you clear server authentication, you do not need username or password to login to the server. You can add user name and password in **User Account** box by MFP control center or server's Web page.

4. The shared folders will be listed in IE.

5. Perform Paste, Remove or Copy the files to the shared folders.

B. Use Microsoft Dos's FTP client

1. Type Dos command as “ftp”

2. Type “*open server’s Host Name*” or “*open server’s IP address*”. If you have changed the default FTP port : 21 to the new value, you have to add the new port number in the tail of command as “*open server’s Host Name ftp port”* or “*open server’s IP address ftp port*” .

3. If you set **Enable Server Authentication in FTP server protocol settings** you have to type user name and password to login to the server; if you set **Allow Anonymous Login**, you can use the user name “anonymous” to login with Read-only permission. If you clear server authentication, you do not need username or password to login server. You can add user name and password in **User Account** box by MFP control center or server’s Web page.

4. Perform FTP commands to use this FTP server.

Chapter7 Scan Server Function

This chapter explains how to use the scan server function of this product. The scan server function enables a USB scanner of HP all-in-one series, connected to this product, to be shared as a network scanner. The scan server function is available in any platform that can use SANE client.

7.1 Connecting HP All-in-one MFP to the Server

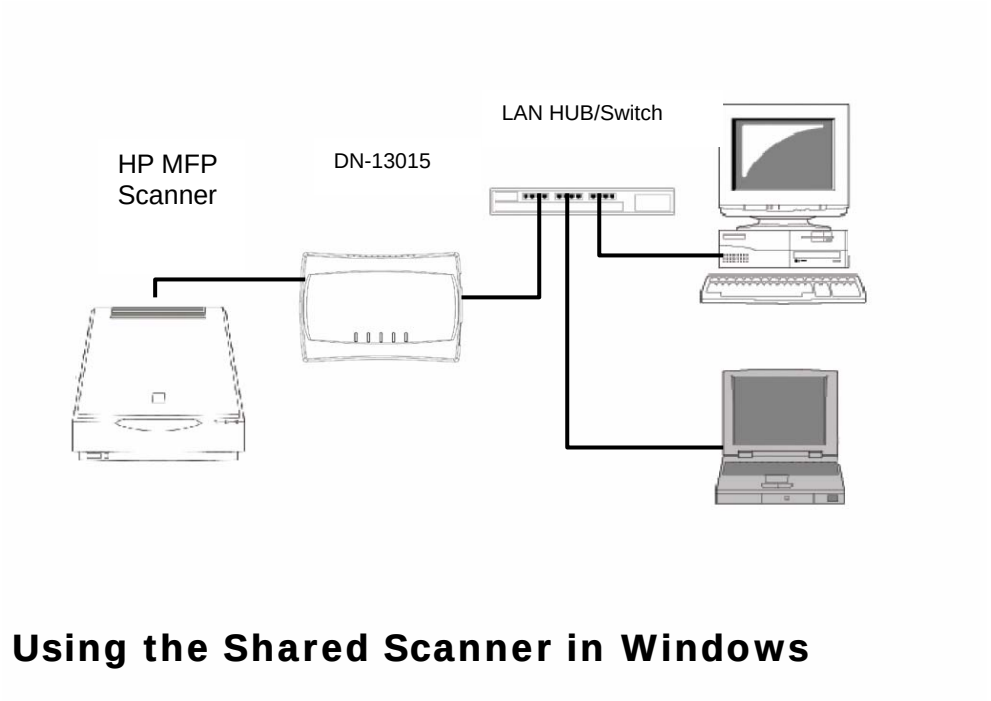

7.2 Using the Shared Scanner in Windows

7.2.1 Using Control Center

1. Start MFP Server Control Center, select your MFP server, and click Digitus Network Scanner.

2. Select your scanner for USB1 port or USB2 port.

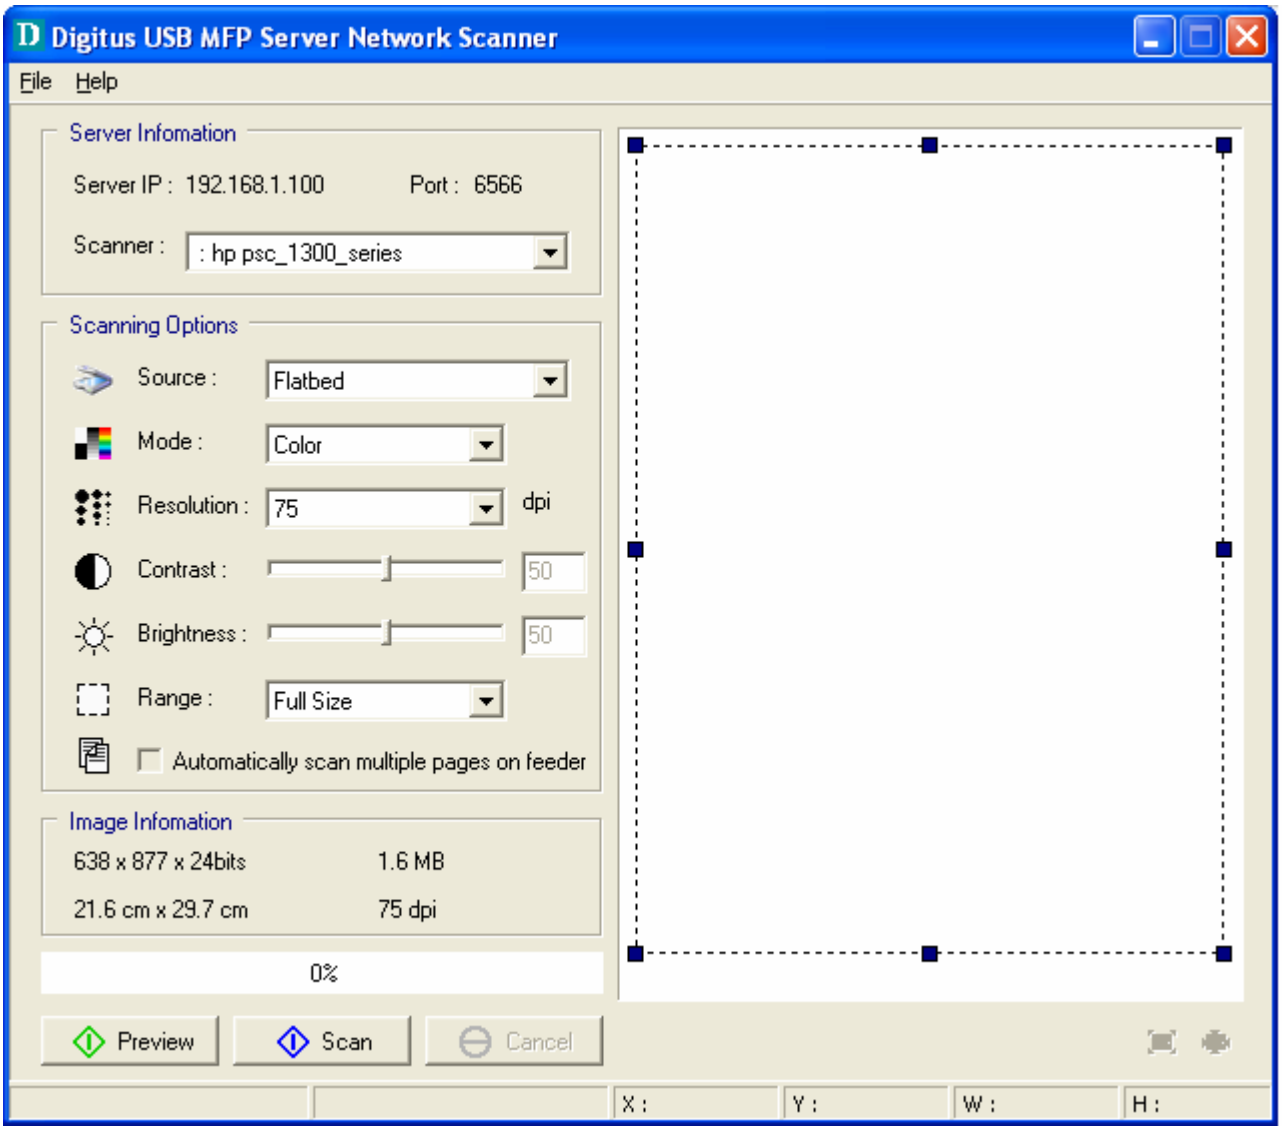

3. Set the options. The options are defined as follows:

   - **Source**: choose flatbed scanning or scrolledbed scanning
   - **Mode**: choose lineart (black/white), Gray and color mode
   - **Resolution**: choose the image resolution
   - **Contrast**: tune the contrast of the image
   - **Brightness**: tune brightness of the image
   - **Range**: define the scanning range of the image

   Note: Not all the MFP scanners support the options above. In such a case, the options will show as gray color and not accessible.

4. Click **Preview** button.

5. Adjust the window size to be scanned.

6. Click **Scan** button.

7. Save as your images to the file.

7.2.2 Using Windows Applications

Prior to using scanning functions in Windows applications such as MS Word, Photoshop ...etc, you have to install network scanner's TWAIN driver in advance. When you install MFP Server Control Center tool, it will also install this TWAIN driver.

Example: Using Photoshop

1. Start **Photoshop**, click **File ->Import->Digitus DN-13015 Network Scanner**

2. Select a server's IP address or type a server IP address in **Server Information** box. You can click **Search Server** button to search existing MFP servers in your network.

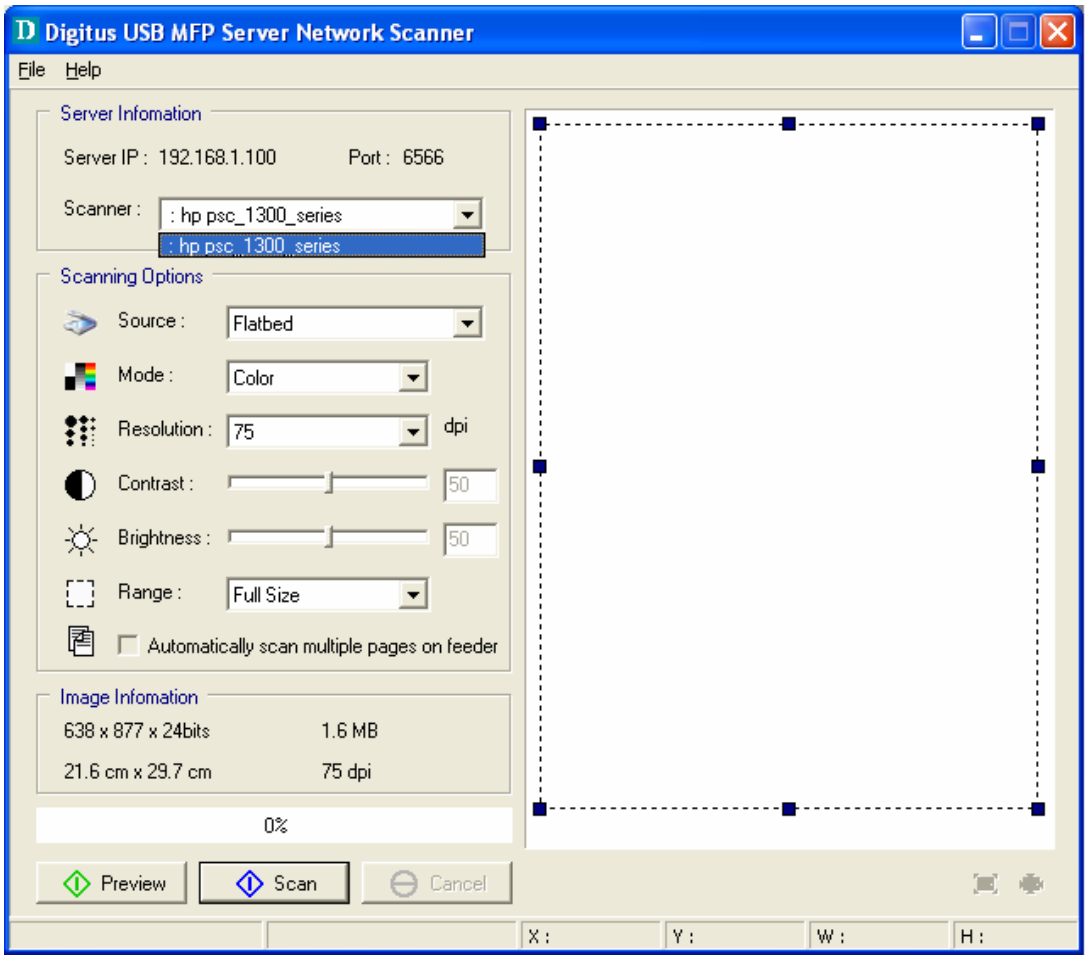

3. Click **Connect to Network Scanner** button in **Server Information** box.

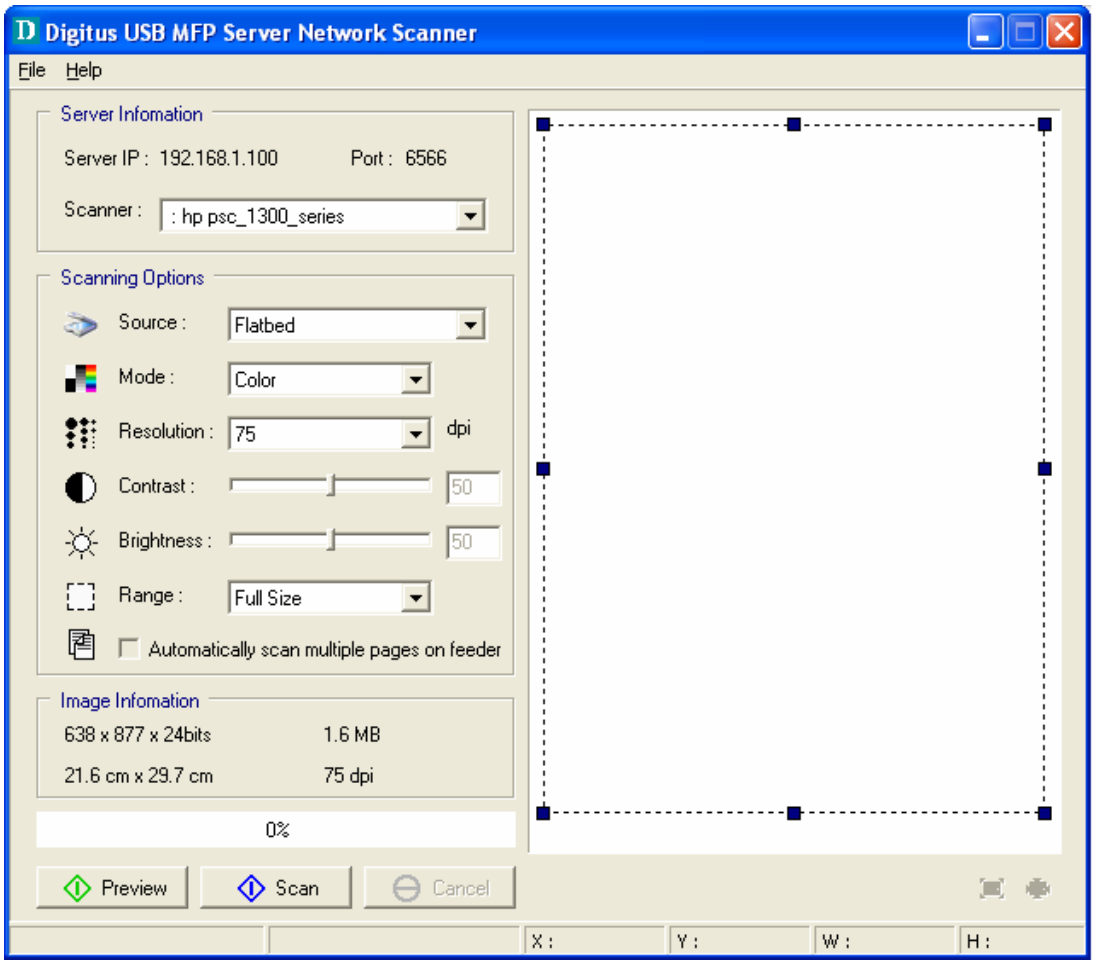

4. Select your scanner in **Server Information** box.

5. Click **Preview** button.

6. Adjust the window size to be scanned.

7. Click **Scan** button.

7.3 Using the Shared Scanner in Linux

7.3.1 Using XSane in Redhat Linux

1. Download SANE-Backends from http://www.sane-project.org.

2. Download and install SANE-frontends: XSane (UNIX binary) from http://www.xsane.org.

3. Edit *\etc\sane.d\net.conf* and put the IP address of the MFP server where the scanner is connected into one line, e.g: *192.168.1.100*.

4. To start the application, select **Main Menu** button (on the Panel)-> **Applications->Grphics -> Scanning**.

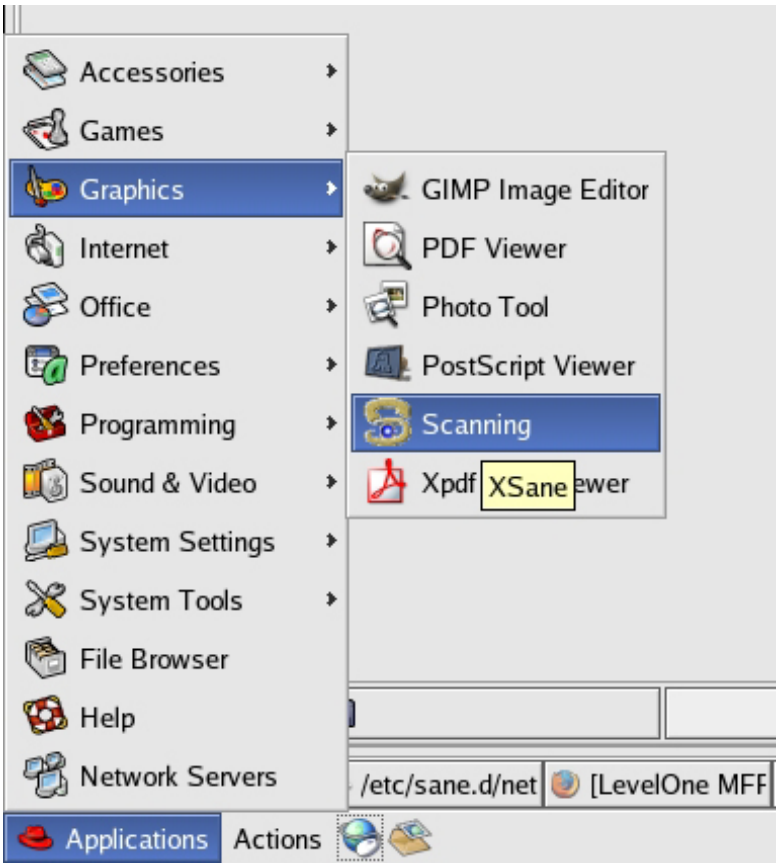

5. Perform scan function.

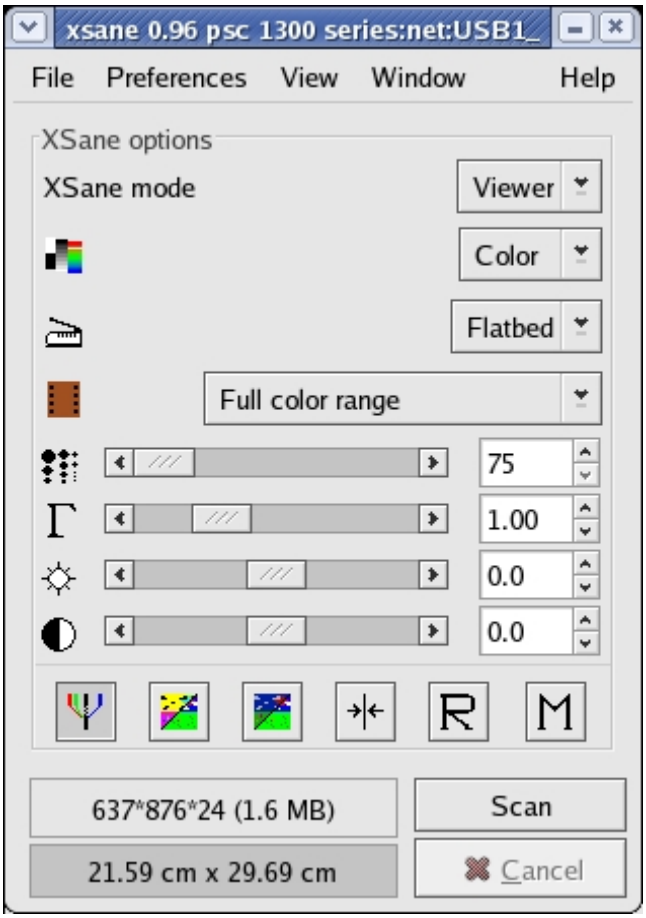

Chapter8 Control Center

This chapter describes how to use MFP Server Control Center in your Windows.

8.1 Installing Control Center

1. Click **Install Product** button.

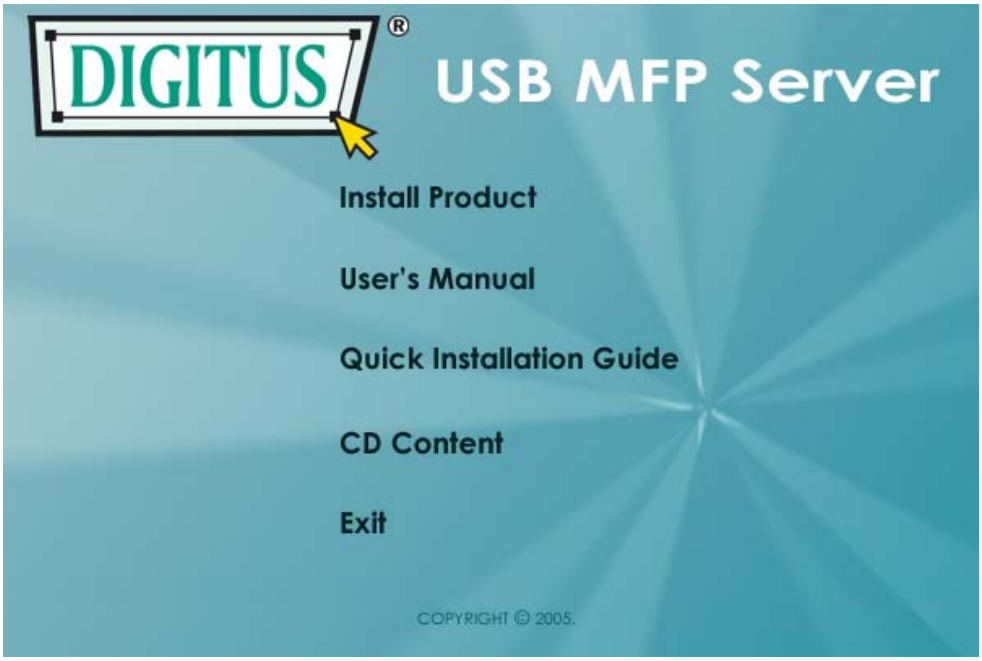

2. Click **Next**, if you see **Next** button in installation windows.

3. Click **Finish.**

8.2 Using Control Center

8.2.1 Use Tools of Control Center

You can use the following tools to help you using the MFP server:

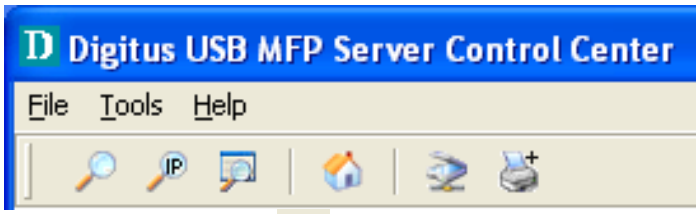

- *Auto Search* : renew to auto search the existing MFP servers in network
- *IP Search* : search the MFP server by IP address
- *Refresh* : refresh the highlight list's server status
- *Go to web* : go to web pages of the highlight list's server

- *Network Scanning* : perform network scanner function of the highlight list's server
- *Add Printer* : perform add printer function of the highlight list's server

8.2.2 Display Server's Status

You can start MFP Server Control Center and select your MFP server to see the server status which includes Host Information, TCP/IP, USB Devices Status and Supported Protocols.

8.2.3 Set up Server's Configuration

- **General Configuration**

  - **Set Host Information:** You have to set some information for networking using SMB protocol:
    - ☑ *Comment:* optionally set to describe the server
    - ☑ *Host Name:* the name to represent the server for Windows networking using SMB/CIFS protocol
    - ☑ *Workgroup:* the SMB/CIFS workgroup name that the server belongs to.
  - **File Server Codepage:** If users want to communicate files using FTP client tool or SMB on Windows 98 SE/Me/2000 with the Server, they have to set their MFP server codepage to be same as the codepage that their Windows PC is using. Generally, the criteria of choosing codepage are based on your Windows codepage. For example, if your Windows codepage is Traditional Chinese, you have to select Traditional Chinese (Big5) in server. Please refer to Chapter 6 File Server Function.

- **USB Device Information:** You can set printer names and display some information of USB mass storages and scanners. Please refer to Chapter 4, Chapter 6 and Chapter 7.

- **TCP/IP:** You have to set the server's TCP/IP configuration to connect TCP/IP network. Please see Chapter 3 Basic Installation for more details.

- **Supported Protocols:** The server supports the following TCP/IP protocols:

  - **TCP/IP**
    - ☑ *Enable LPR (Line Printer Remote) Printing:* select or clear **Enable LPR Printing** support. It is enabled in Factory Default.
    - ☑ *Enable IPP Printing:* select or clear **Enable IPP Printing** support. It is enabled in Factory Default.
    - ☑ *Enable Raw TCP Printing*: select or clear **Enable Raw TCP Printing** support. It is enabled in Factory Default and users may set the protocol's TCP ports as following boxes:
      - *TCP Port 1:* set TCP port for the printer of USB1 port (default: 9100)
      - *TCP Port 2*: set TCP port for the printer of USB2 port (default: 9101)

☑ *Enable SMB/CIFS Print/File Server:* select or clear **Enable SMB/CIFS Print/File Server** support. It is enabled in Factory Default.

- *Enable Internet Access:* select or clear **Enable Internet Access** support. If you clear the item, you do not allow that users can access your SMB/CIFS server via Internet. If you select the item, you allow Internet users can access your storage using the SMB/CIFS protocol.
- *Enable Server Authentication:* select or clear **Enable Server Authentication** support. Select the item, if you want to share your storage or printer with user level security which requires user name and password to login. If you clear the item, your storage will be shared without security.

☑ *Enable FTP Server:* select or clear **Enable FTP Server** support. It is enabled in Factory Default and users may set some parameters as follows:

- *FTP Port:* type an integer number *to* set FTP server's TCP port (default: 21)
- *Set Maximum Session Number*: select or clear **Set Maximum Session Number** support. You can limit the FTP session number by selecting the support and type an integer to set the allowable maximum session number. If you clear the support, it means that FTP server will have not any limitation in session number.
- *Set Passive Mode:* select or clear **Set Passive Mode** support that FTP server can accept passive mode.
- *Enable Server Authentication:* select or clear **Enable Server Authentication** support. If you select the support, you need to type user name and password to login to the server. If you clear the support, you do not need user name and password to enter the server.
- *Allow Anonymous Login:* select the item, if you want to allow the user "anonymous" to login to your FTP server with Read-Only permission and FTP server will not check the password. If you clear the item, your FTP server will not support anonymous login function.

☑ *Enable SANE (Scanner Access Now Easy) Server:* select or clear **Enable SANE Server** support. It is enabled in Factory Default and users may set the TCP port as follows:

- *SANE Port:* set SANE server's TCP port (default: 6566)

☑ *Enable UPnP (Universal Plug and Play):* select or clear **Enable UPnP** support. It is enabled in Factory Default.

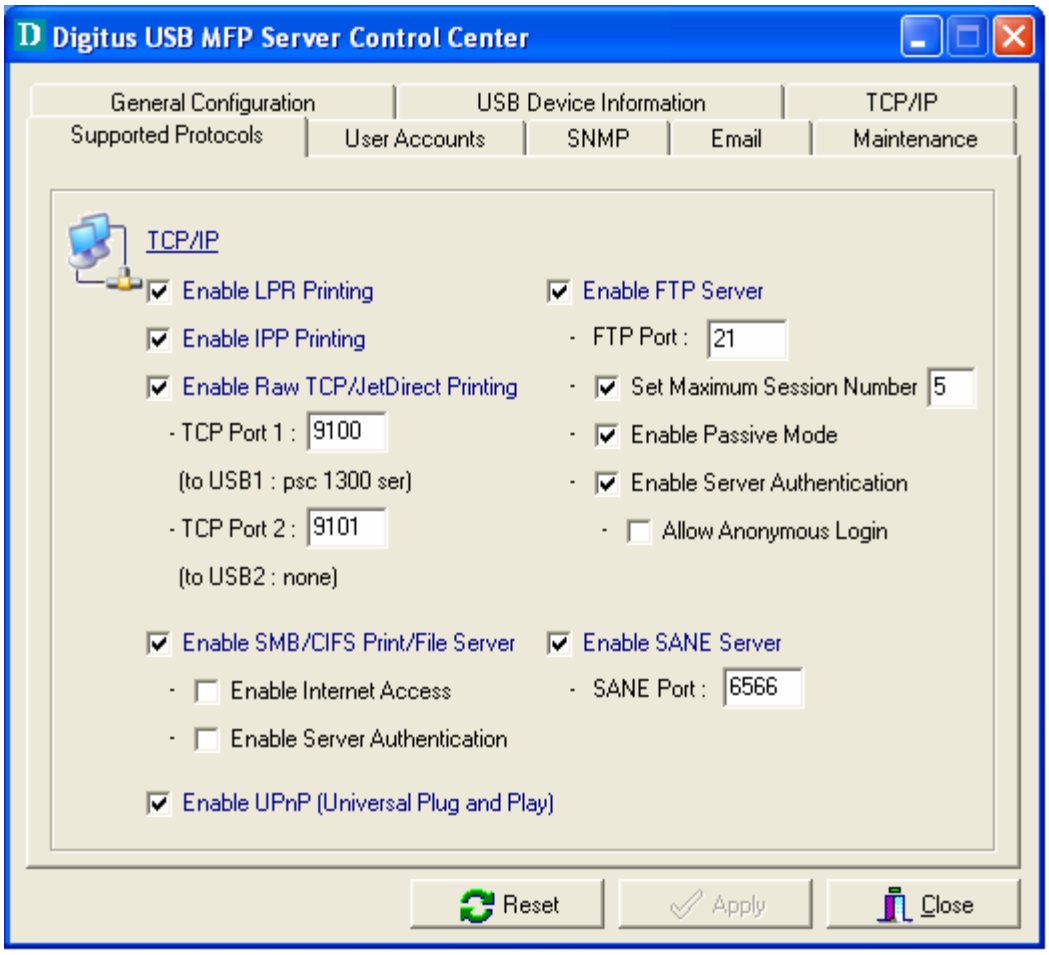

- **User Accounts:** You can change administrator name and password or add a user account for SMB/CIFS Print/File server and FTP File server. If you forgot administrator name and password, you must to perform Restore Factory Default action by pressing Init button and plugging Power adaptor simultaneously. Please refer to Chapter 14 Restore Factory Default. Administrator owns the Read-Write Permission for File servers.

  - **Set Administrator**
    - ☑ *New Administrator:* type your desired administrator name.
    - ☑ *New Password:* type your desired password.
    - ☑ *Retype Password:* confirm your previous password typing.
  - **User Accounts list**
    - ☑ *User name:* add a new user account for accessing the storage attached to MFP server.
    - ☑ *Password*: set a password for added user.
    - ☑ *Permission*: select Read-Only or Read-Write permission to access File servers.
    - ☑ *Add:* click **Add** button, after entering the user name, corresponding password, and Permission selection. The account will take effect once shown in the blank below.
    - ☑ *Delete:* delete the existing user account.

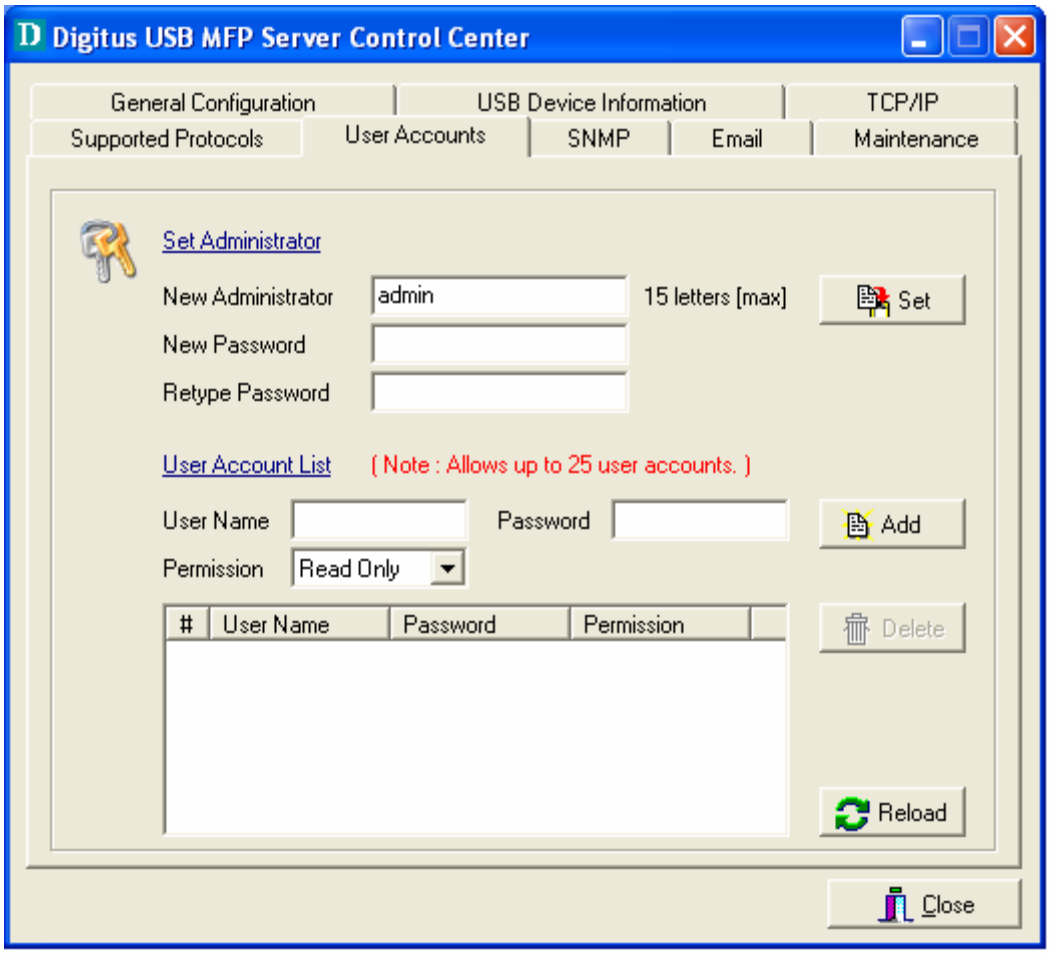

■ **SNMP:** You can set community and some parameters for SNMP server. Furthermore, you can enable SNMP v3 for more security.

◆ **Set SNMP Configuration**

☑ *Authentic Community:* set Community name of SNMP server.
☑ *Trap Community:* set Trap Community name for SNMP server to send trap packets.
☑ *Trap Address:* type an IP address to send the Trap packet.
☑ *SysContact:* type some letters for variable of *SysContact* that represents the name of system contact.
☑ *SysName:* type some letters for variable of *SysName* that represents the name of system.
☑ *SysLocation:* type some letters for variable of *SysLocation* that represents the location of system.
☑ *EnableAuthenTrap:* type 1 or 2 for the variable of *EnableAuthenTrap* that represents to enable (1) or disable (2) to send Trap packets receiving the wrong Community name.

◆ SNMP V3

☑ *Enable SNMP V3:* select or clear **Enable SnmpV3** support
☑ *User Security name:* set user security name of SNMP v3
☑ *Auth Password:* set authentication password of SNMP v3.
☑ *Privacy Password:* set privacy password of SNMP v3.

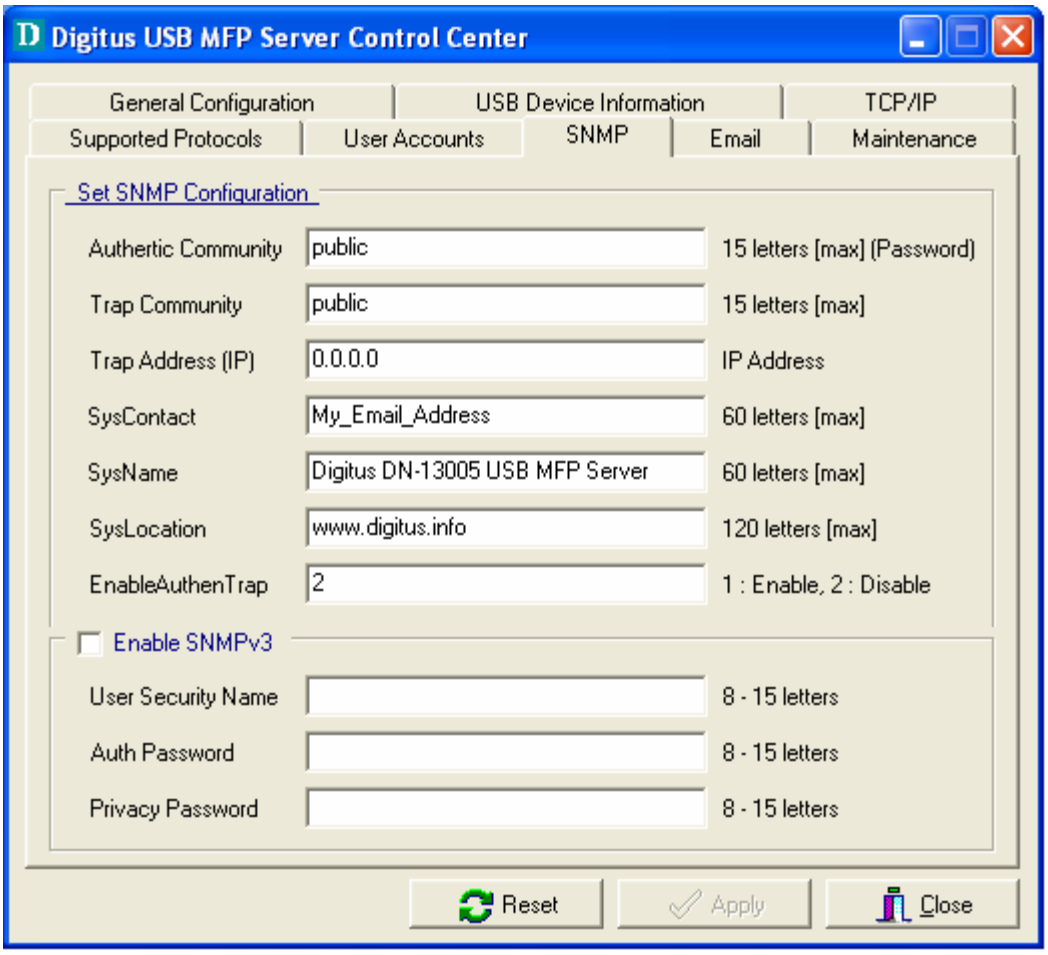

- **Email:** If you want to receive some alerting mail from the server, you have to enable SMTP Protocol, and set Email configuration. You can set new SMTP port number (default: 25).

  - **Set Email Configuration**
    - ☑ *SMTP Protocol:* select or clear **Enable** SMTP support
    - ☑ *SMTP Server Name:* type your SMTP server's Host Name or IP address.
    - ☑ *SMTP Port Number:* set new SMTP server's TCP port number (default: 25).
    - ☑ *Subject:* type the subject of the e-mail.
    - ☑ *From Address:* type the sender's e-mail address.
    - ☑ *To Address:* type an e-mail address to send that mail to a person.
    - ☑ *Cc:* stands for carbon copy; type an e-mail address to send that mail to a second person.
    - ☑ *SMTP Server requires authentication:* login to remote SMTP server which requires authentication.
    - ☑ *Account Name*: type account name for remote SMTP server.
    - ☑ *Password*: type account's password for remote SMTP server.

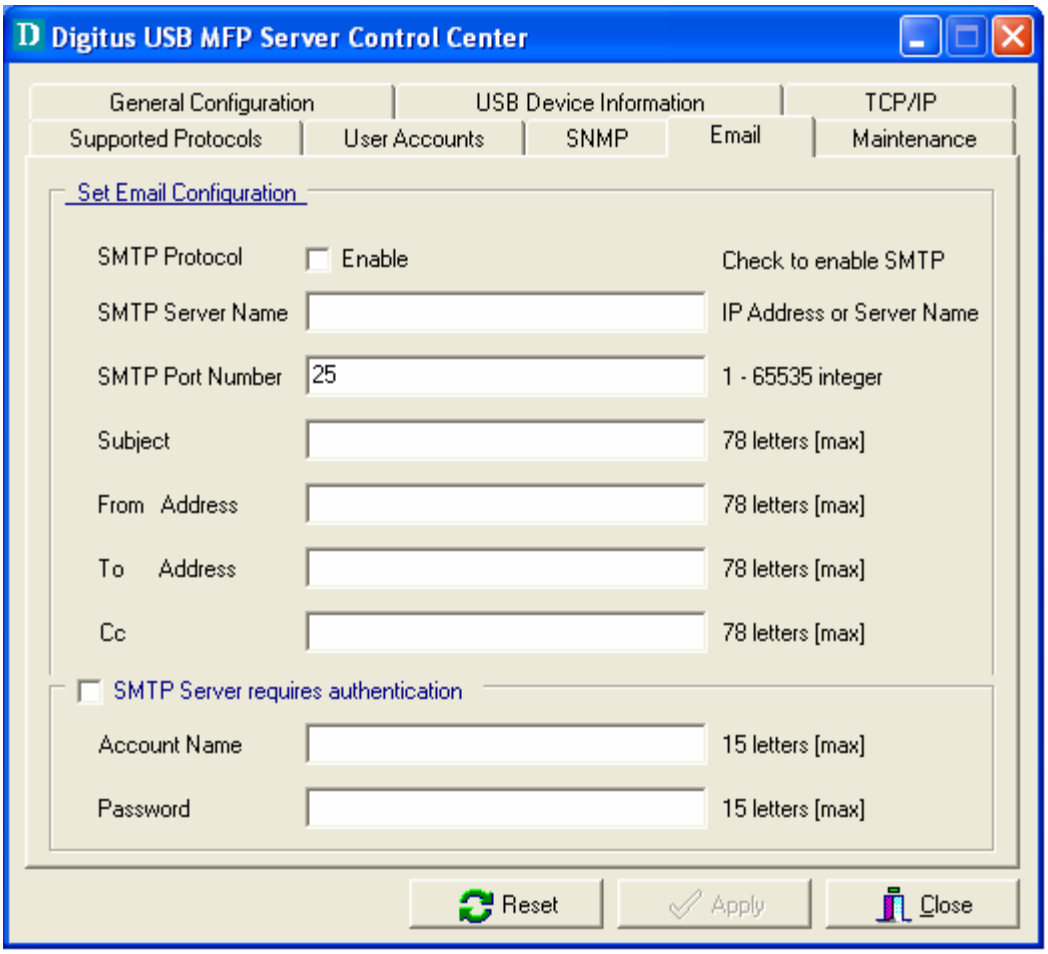

- **Maintenance:** If you want to restart server, restore factory default values of the server, download new firmware file from product's public website and upgrade new firmware, you can use the Maintenance tool.

  - **Restart Server:** click the button, the server will be restarted.
  - **Factory Default:** click the button, the server will restore factory default values.
  - **Download New Firmware:** click the button and you can download new firmware or user software from product's public website.
  - **Upgrade New Firmware:** click **Open** to find the system firmware file to be upgraded. Click **Upgrade** to do the real firmware upgrading task.

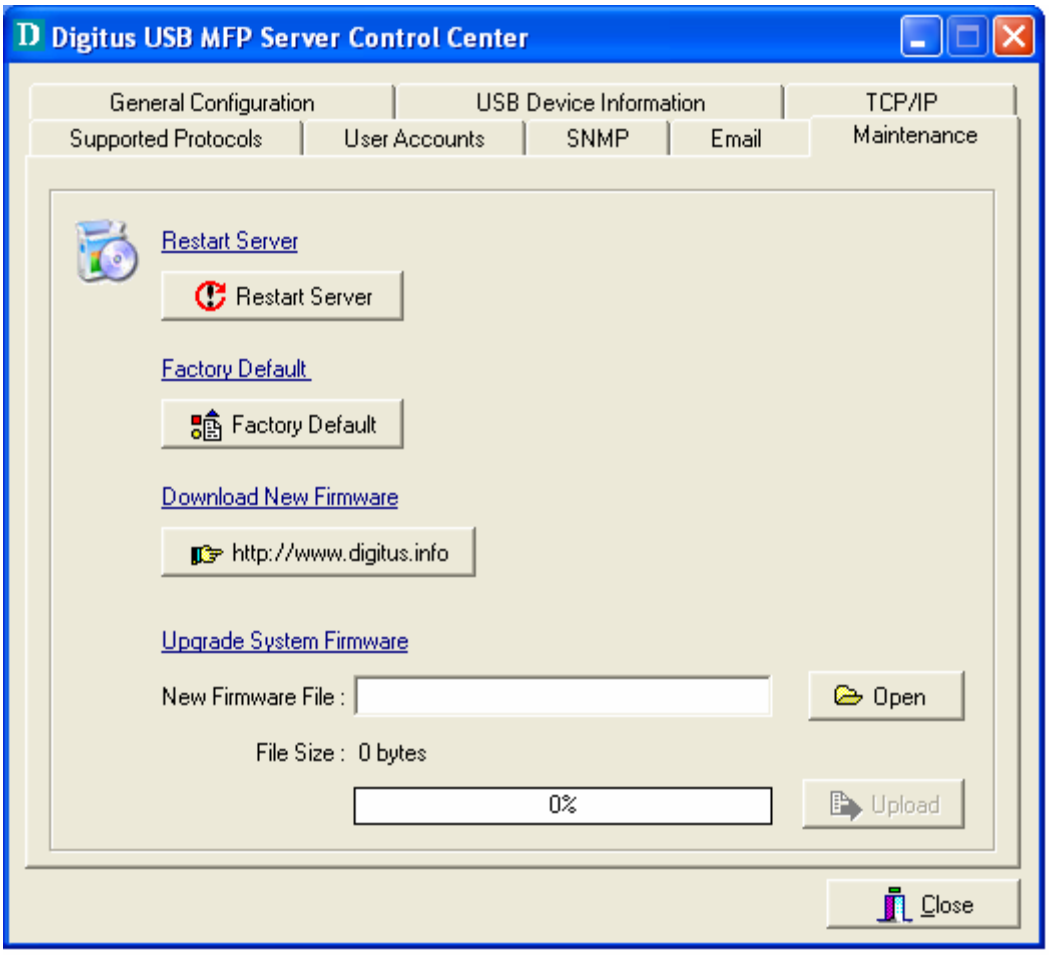
Digitus USB MFP Server Control Center
General Configuration
USB Device Information
TCP/IP
Supported Protocols
User Accounts
SNMP
Email
Maintenance
Restart Server
Restart Server
Factory Default
Factory Default
Download New Firmware
http://www.digitus.info
Upgrade System Firmware
New Firmware File :
Open
File Size : 0 bytes
0%
Upload
Close

Chapter9 Server's Web Pages

9.1 Introduction

The Server runs the daemon of http server, *httpd* on TCP port: 80. Users may use the web pages to see the server's system status and configure the server.

9.2 Using Server's Web Pages

9.2.1 Display Server Status

You can see the status of Host Information, TCP/IP and USB devices.

9.2.2 Set up Server Configuration

To set up the server configuration, the system will request user to enter administrator (default: *admin*) and password (default: *admin*) to login.

- **General Configuration**

  - **Set Host Information:** You have to set some information for networking using SMB protocol:
    - ☑ *Comment:* optionally set to describe the server
    - ☑ *Host Name:* the name to represent the server for Windows networking using SMB protocol
    - ☑ *Workgroup:* the SMB workgroup name that the server belongs to.
  - **File Server Codepage:** if users want to communicate files using FTP client tool or SMB on Windows 98 SE/Me/2000 with Digitus DN-13015 MFP server, they have to set their MFP server codepage to be same as the codepage that their Windows PC is using. Generally, the criteria of choosing codepage are based on your Windows codepage. For example, if your Windows codepage is Traditional Chinese, you have to select Traditional Chinese (Big5) in server. Please refer to Chapter 6 File Server Function.

- **USB Device Information:** You can set printer names and display some information of USB mass storages and scanners. Please refer to Chapter 4, Chapter 6 and Chapter 7.

- **TCP/IP:** You have to set the server's TCP/IP configuration to connect TCP/IP network. Please see Chapter 3 Basic Installation for more details.

- **Supported Protocols:** The server supports the following TCP/IP protocols:

  - **TCP/IP**
    - ☑ *Enable LPR (Line Printer Remote) Printing:* select or clear **Enable LPR Printing** support. It is enabled in Factory Default.
    - ☑ *Enable IPP Printing:* select or clear **Enable IPP Printing** support. It is enabled in Factory Default.
    - ☑ *Enable Raw TCP Printing*: select or clear **Enable Raw TCP Printing** support. It is enabled in Factory Default and users may set the protocol's TCP ports as following boxes:
      - *TCP Port 1:* set TCP port for the printer of USB1 port (default: 9100)
      - *TCP Port 2*: set TCP port for the printer of USB2 port (default: 9101)
    - ☑ *Enable SMB/CIFS Print/File Server:* select or clear **Enable SMB/CIFS Print/File Server** support. It is enabled in Factory Default.
      - *Enable Internet Access:* select or clear **Enable Internet Access** support. If you clear the item, you do not allow that users can

access your SMB/CIFS server via Internet. If you select the item, you allow Internet users can access your storage using the SMB/CIFS protocol.

- *Enable Server Authentication:* select or clear **Enable Server Authentication** support. Select the item, if you want to share your storage or printer with user level security which requires user name and password to login. If you clear the item, your storage will be shared without security.

☑ *Enable FTP Server:* select or clear **Enable FTP Server** support. It is enabled in Factory Default and users may set some parameters as follows:

- *FTP Port:* type an integer number *to* set FTP server's TCP port (default: 21)
- *Set Maximum Session Number*: select or clear **Set Maximum Session Number** support. You can limit the FTP session number by selecting the support and type an integer to set the allowable maximum session number. If you clear the support, it means that FTP server will have not any limitation in session number.
- *Set Passive Mode:* select or clear **Set Passive Mode** support that FTP server can accept passive mode.
- *Enable Server Authentication:* select or clear **Enable Server Authentication** support. If you select the support, you need to type user name and password to login to the server. If you clear the support, you do not need user name and password to enter the server.
- *Allow Anonymous Login:* select the item, if you want to allow the user "anonymous" to login to your FTP server with Read-Only permission and FTP server will not check the password. If you clear the item, your FTP server will not support anonymous login function.

☑ *Enable SANE (Scanner Access Now Easy) Server:* select or clear **Enable SANE Server** support. It is enabled in Factory Default and users may set the TCP port as follows:

- *SANE Port:* set SANE server's TCP port (default: 6566)

☑ *Enable UPnP (Universal Plug and Play):* select or clear **Enable UPnP** support. It is enabled in Factory Default.

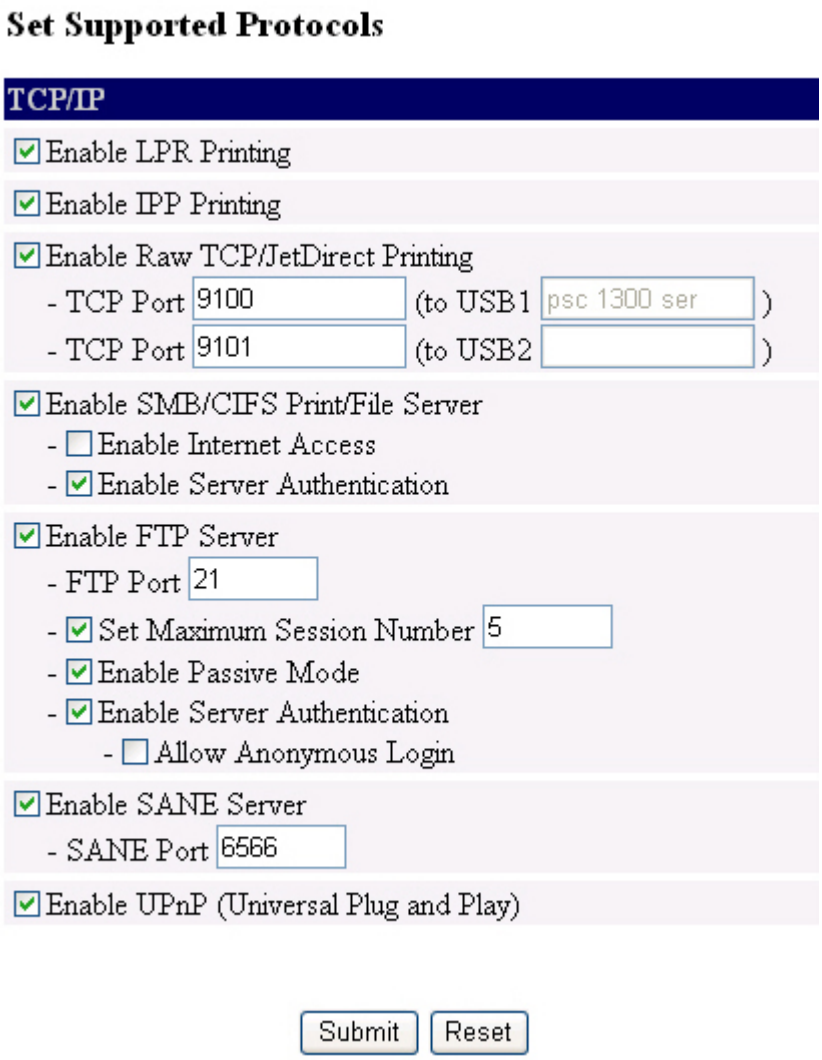
Set Supported Protocols
TCP/IP
Enable LPR Printing
Enable IPP Printing
Enable Raw TCP/JetDirect Printing
- TCP Port 9100 (to USB1 psc 1300 ser)
- TCP Port 9101 (to USB2)
Enable SMB/CIFS Print/File Server
- Enable Internet Access
- Enable Server Authentication
Enable FTP Server
- FTP Port 21
- Set Maximum Session Number 5
- Enable Passive Mode
- Enable Server Authentication
- Allow Anonymous Login
Enable SANE Server
- SANE Port 6566
Enable UPnP (Universal Plug and Play)
Submit
Reset

- **User Accounts:** You can change administrator name and password or add a user account for SMB/CIFS Print/File server and FTP File server. If you forgot administrator name and password, you must to perform Restore Factory Default action by pressing Init button and plugging Power adaptor simultaneously. Please refer to Chapter 14 Restore Factory Default. Administrator owns the Read-Write Permission for File servers.

  - **Set Administrator**
    - ☑ *New Administrator:* type your desired administrator name.
    - ☑ *New Password:* type your desired password.
    - ☑ *Retype Password:* confirm your previous password typing.
  - **User Accounts list**
    - ☑ *User name:* add a new user account for accessing the storage attached to MFP server.
    - ☑ *Password*: set a password for added user.
    - ☑ *Permission*: select Read-Only or Read-Write permission to access File servers.
    - ☑ *Add:* click **Add** button, after entering the user name, corresponding password, and Permission selection. The account will take effect once

shown in the blank below.

☑ *Delete:* delete the existing user account.

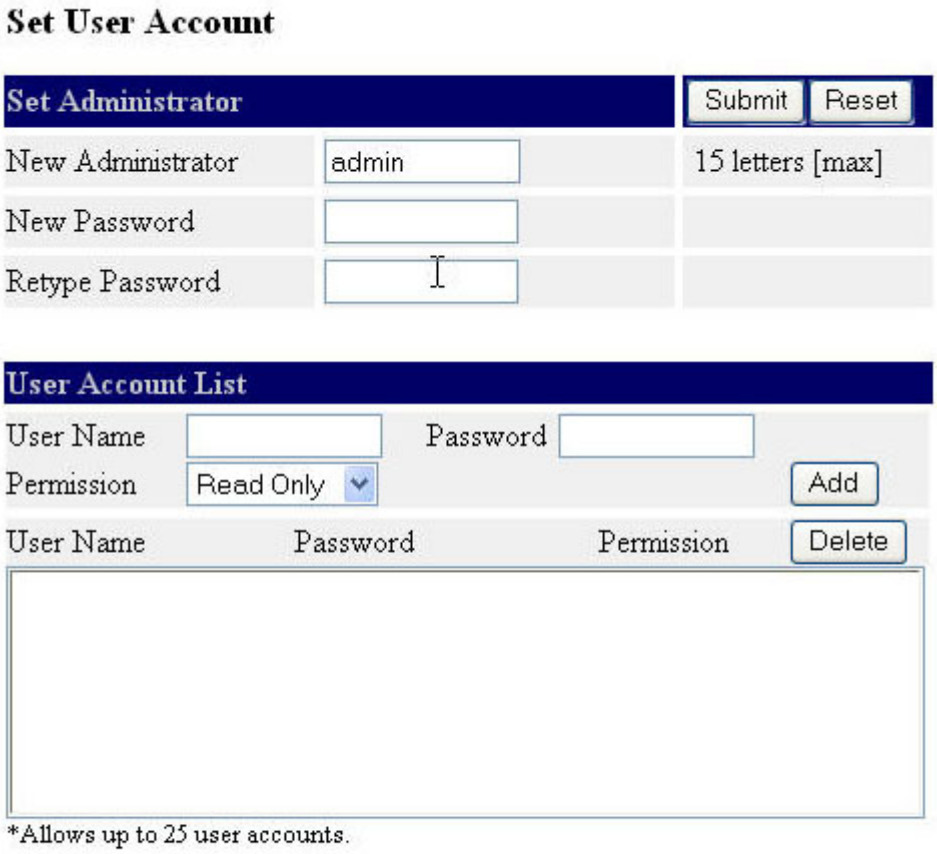

■ **SNMP:** You can set community and some parameters for SNMP server. Furthermore, you can enable SNMP v3 for more security.

- **Set SNMP Configuration**
  - ☑ *Authentic Community:* set Community name of SNMP server.
  - ☑ *Trap Community:* set Trap Community name for SNMP server to send trap packets.
  - ☑ *Trap Address:* type an IP address to send the Trap packet.
  - ☑ *SysContact:* type some letters for variable of *SysContact* that represents the name of system contact.
  - ☑ *SysName:* type some letters for variable of *SysName* that represents the name of system.
  - ☑ *SysLocation:* type some letters for variable of *SysLocation* that represents the location of system.
  - ☑ *EnableAuthenTrap:* type 1 or 2 for the variable of *EnableAuthenTrap* that represents to enable (1) or disable (2) to send Trap packets receiving the wrong Community name.
- SNMP V3
  - ☑ *Enable SNMP V3:* select or clear **Enable SnmpV3** support

☑ *User Security name:* set user security name of SNMP v3
☑ *Auth Password:* set authentication password of SNMP v3.
☑ *Privacy Password:* set privacy password of SNMP v3.

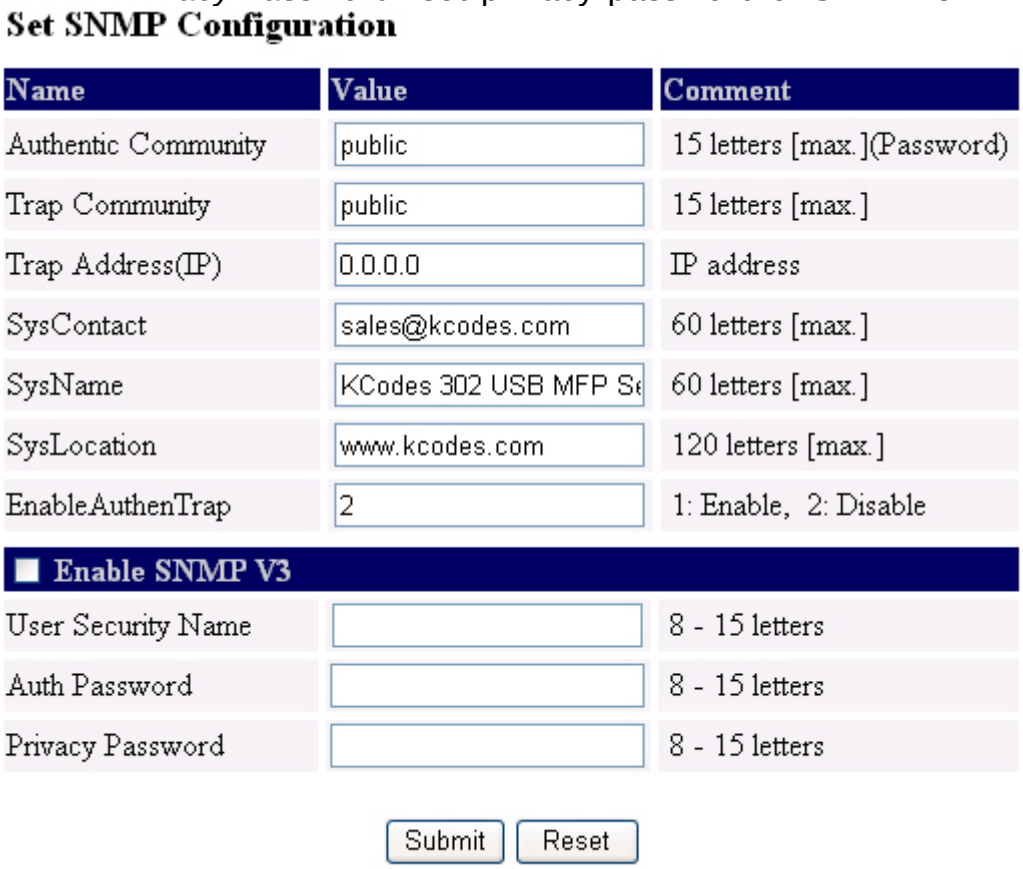

■ **Restart Server**: click the button, the server will be restarted.

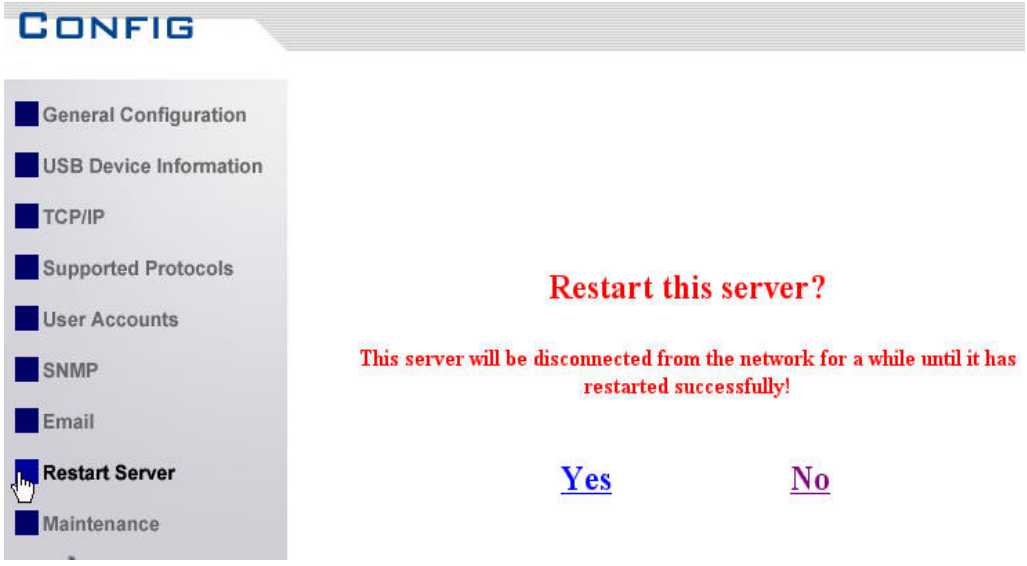

■ **Maintenance** If you want to restore factory default values of the server and upgrade new firmware, you can use the Maintenance tool.
☑ **Factory Default:** click the button, the server will restore factory default values.
☑ **Download New Firmware from Website:** click the button and you can download new firmware or user software from product's public website.
☑ **Upgrade New Firmware:** click **Open** to find the system firmware file to

be upgraded. Click **Upgrade** to do the real firmware upgrading task.

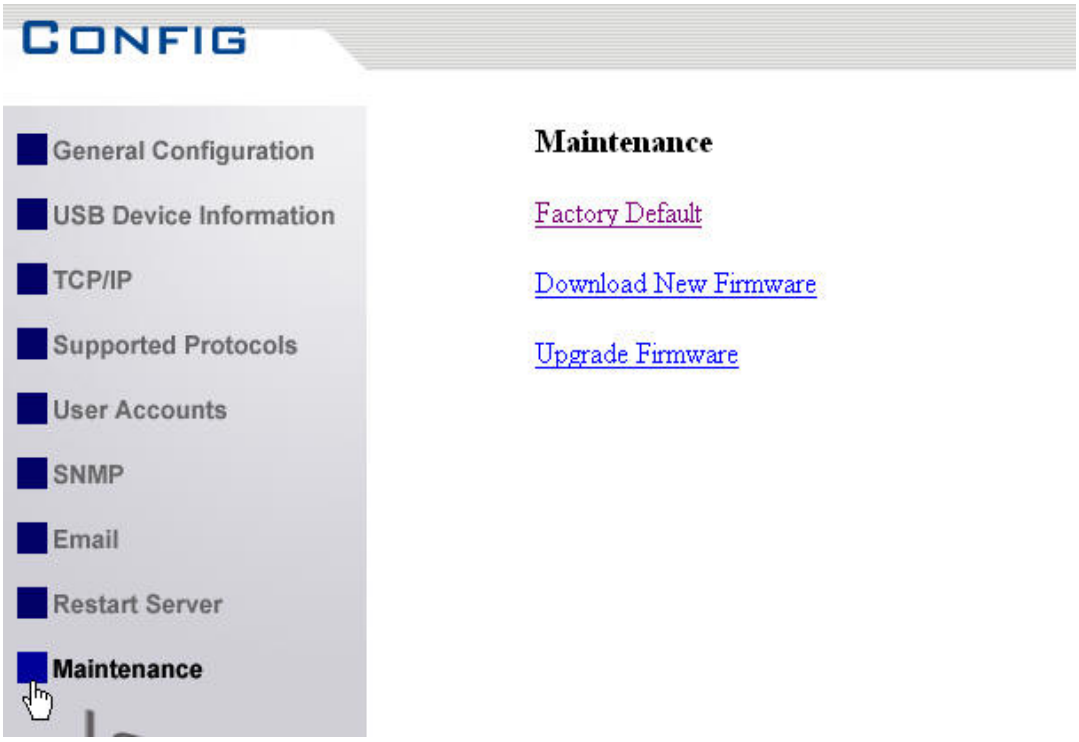

Chapter10 Email Alerting

This Server emails a notification to the user at these events:

1. *Adding or Removing a USB device.*
2. *System Error*.

Chapter11 SNMP

This Server runs an SNMP daemon supporting SNMP v1, v2c, and v3 protocols (Simple Network Management Protocol). Users can use SNMP client software such as HP OpenView to manage your Server. The Server supports all relevant parts of MIB-II and a private MIB. You can set value of some MIB variables from the Server's web pages or by using Control Center.

Chapter12 Troubleshooting

This chapter provides useful information to help you resolve difficulties you may experience with your Server. Fault symptoms, possible causes, and remedial actions are provided within a quick reference table. This Server's USB ports only support MFPs, printers, scanners, and mass storage.

12.1 LED Indicators

Indicators	Color/Behavior	Description
Power	Orange	Power On
	Not lit	Power off/System error
Link	Green	Network connected
	Not Lit	No physical connection to network
Status	Green blinking	Activity on network
	Not lit	No activity on network
USB1	Green	USB device connected
	Green blinking	Connected USB device error
	Not lit	No physical connection to USB device
USB2	Green	USB device connected
	Green blinking	Connected USB device error
	Not lit	No physical connection to USB device

USB Device Status

Devices	Status	Description
Printer	Ready	Printer is ready.
	Printing	Printer is printing.
	Out of paper	Printer is out of paper.
	Error	There are errors in network printing.
Mass Storage	Ready	Storage is ready.
	Error	There are errors in network File server.
Scanner	Ready	Scanner is ready.
	Flatbed Scanning	Flatbed of scanner is scanning.
	Scrollfed Scanning	Scrollfed of scanner is scanning.
	Error	There are errors in network scanning.

Chapter13 Restore Factory Defaults

You may restore the Server's default parameters by one of the following methods.

13.1 Using Server's Web Pages

1. Go to the Server's web page and click **CONFIG**
2. Login your administrator (default: *admin*) and password (default: *admin*).
3. **Click Maintenance**.

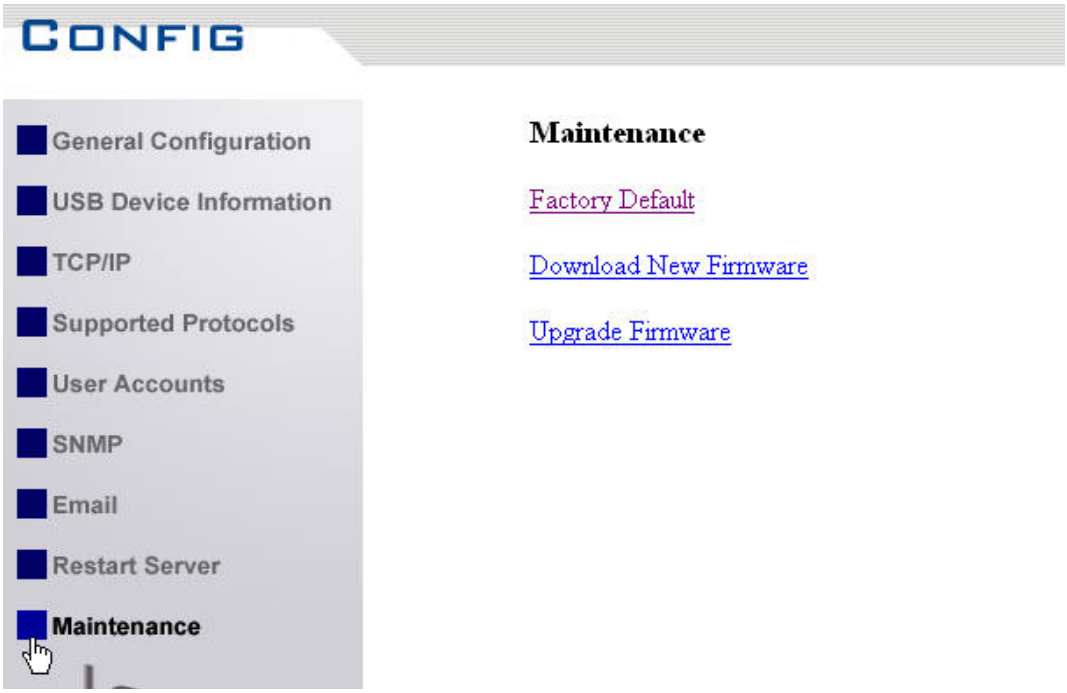

4. Click **Factory Default**.

5. Click **Yes** to confirm your action

13.2 Using Control Center

1. Start Control Center and Auto-searching MFP server window will appear.

2. If the tool finds MFP servers in your local area network, then you have to select a MFP server from the server list.

3. Double click the highlight list and type the server's administrator (default: *admin*) and password (default: *admin*).

4. After you login successfully, from the Server menu, select **Maintenance**. The **Maintenance** dialog appears.

5. Click **Factory Default.**

13.3 Using Init Button

Simultaneously press Init button and power on (plug the power adaptor line) the server until LED indicators of Power, USB1 and USB2 blink. After that, plug off the power adaptor and then plug on the power adapter to restart the server. Finally, the server will operate using the Factory Default values.

13.4 Default Parameters List

Host Information

- Comment (Optional): Digitus DN-13015 USB MFP Server
- Host Name: DN-13015
- Workgroup: ARBEITSGRUPPE
- Codepage of File Server: Western European

TCP / IP

- Automatically get IP using DHCP: enabled
  - Manual DNS: none

  DHCP Failed:
  - IP : 192.168.1.100
  - Subnet Mask: 255.255.255.0
- Static IP: disabled
  - IP: 192.168.1.100
  - Subnet Mask: 255.255.255.0
  - Gateway: none
  - DNS: none

Protocols

- IPP Printing: enabled
- LPR Printing: enabled
  - Queue Name (USB1): USB1_LQ
  - Queue Name (USB2): USB2_LQ
- Enable Raw TCP Printing/JetDirect

  - TCP Port (USB1): 9100
  - TCP Port (USB2): 9101
- SMB/CIFS Print/File Server: enabled
  - Internet Access: disabled
  - Server Authentication: disabled
- FTP Server: Enabled
  - FTP Port: 21
  - Passive Mode: enabled
  - Set Maximum Session Number: 5 (enabled)
  - Server Authentication: enabled
  - Allow Anonymous Login: disabled
- SANE Server: enabled
  - SANE Port: 6566
- Enable UPnP: enabled

SNMP

- Authentic Community: public
- Trap Community: public
- Trap Address: 0.0.0.0
- SysContact: My_Email_Address
- SysName: Digitus DN-13015 USB MFP Server
- SysLocation: www.digitus.info
- EnableAuthenTrap: 2 (disabled)
- SNMPv3: disabled

User Account

- Administrator:admin
- Password: admin

Chapter14 Upgrade New Firmware

This chapter describes how to upgrade your new firmware. You can use the following Procedures to upgrade new firmware

Procedure A: Using PC User Software

1. Open the Digitus DN-13015 MFP Server Control Center. It will automatically search the existing servers and display their status.

2. Select the server that you want to upgrade the firmware. Double click the selected server and enter Administrator Name and Password. Please note that the default values of Administrator and Password are *admin.*

3. Select the **Maintenance** button.

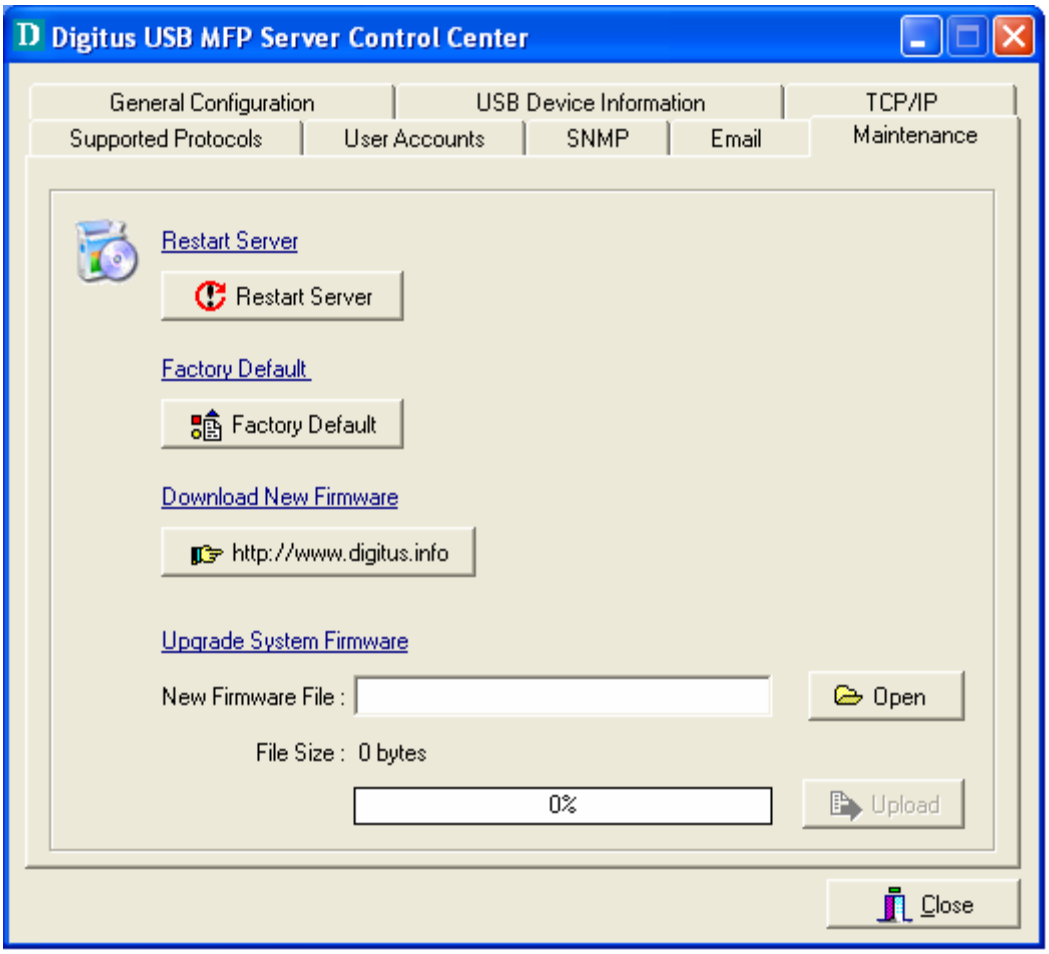

4. Click **Open** your new firmware file and click **Upgrade**.

5. Wait for 10 seconds for system reboot.

Procedure B: Using Server's Web Pages

1. Power on Digitus DN-13015. Suppose Digitus DN-13015 is in DHCP mode.

2. Check Digitus DN-13015's IP address

.

3. First, run Digitus DN-13015 control center. The control center will automatically search Digitus DN-13015 on the LAN. Then Digitus DN-13015's IP address will be shown in control center.

4. Run any web browser, like Microsoft Internet Explorer. Go to http://a.b.c.d to access Digitus DN-13015's home page, where a.b.c.d is Digitus DN-13015's IP address.

5. Click **CONFIG.**

6. Login Digitus DN-13015 with administrator "admin" and password "admin".

7. Click **Maintenance**.

8. Click **Upgrade Firmware**.

9. Click **Browse** button to choose the file of new Digitus DN-13015 firmware.

10. Click **Upload** button to start firmware upgrade.

11. Wait about 15 seconds for system reboot.

Procedure C: Using Init Button and TFTP Client to Upgrade Firmware in Emergency

1. Simultaneously press Init button and power on (plug the power adaptor line) the server until LED indicators of Power, USB1 and USB2 blink. ***Please note that after that, the servers will operate using the factory default values after restarting, i.e., your MFP server's configuration will recover to Factory Default values.***

2. Start the TFTP client Tool: *Image Burner*

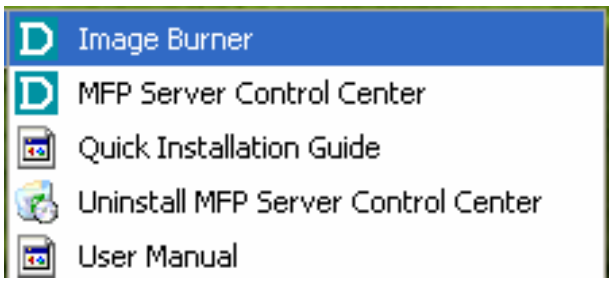

3. Type the server's Fallback IP address: 192.168.1.100 and click **Open Image** to open your new firmware. Please note that you must configure your PC's TCP/IP such that PC and server belong to the same LAN, i.e. PC's IP is 192.168.1.xxx and subnet mask is 255.255.255.0.

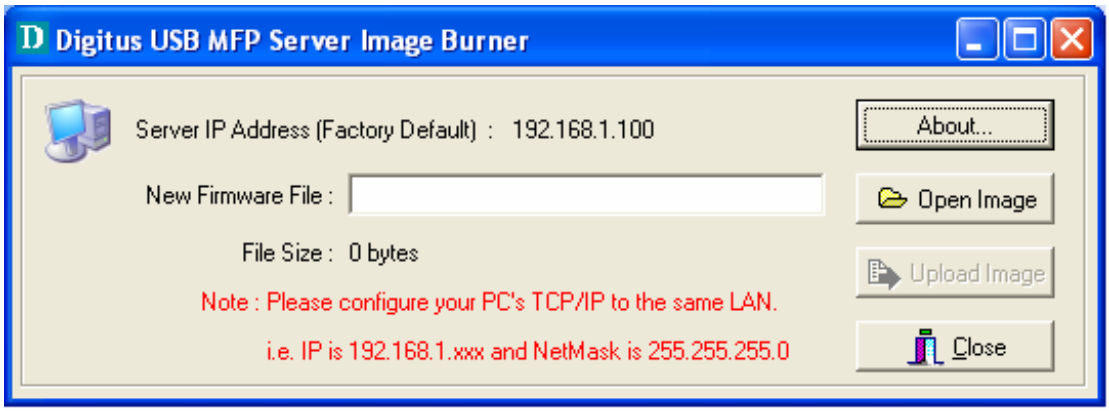
Digitus USB MFP Server Image Burner
Server IP Address (Factory Default) : 192.168.1.100
About...
New Firmware File :
Open Image
File Size : 0 bytes
Upload Image
Note : Please configure your PC's TCP/IP to the same LAN.
i.e. IP is 192.168.1.xxx and NetMask is 255.255.255.0
Close

4. Click **Upload Image**.
5. Wait for “Image Uploading” to finish and then click **Close**.
6. Plug-off power adapter and then plug-in the power adapter to restart server.

Chapter15 Init Button

The Init button is used for:

1. **Print Configuration Report:** Press **Init** button for exceeding 3 seconds and then the connected HP printer or PCL supported printer will print out the system configuration.

```
System Configuration

Host Infomation:
  Comments: Digitus DN-13005 USB MFP Server
  Server Name: DN-13005
  Workgroup Name: ARBEITSGRUPPE
  File Server Authentication: User Name/Password
  File Server Code Page: Western European

TCP/IP Status
  IP Address : 192.168.1.100
  Subnet Mask: 255.255.255.0
  Gateway    : 0.0.0.0
  DNS Server : 0.0.0.0
  DHCP Server: 0.0.0.0
  Lease Time : 0 (seconds)

Supported Protocol Status
  SMB Printing Protocol
    Path(USB1):\\DN-13005\psc 1300 ser
    Path(USB2): None
  LPR Printing Protocol
    IP Address: 192.168.1.100
    Queue Name(USB1): USB1_LQ
    Queue Name(USB2): None
  Raw TCP Printing Protocol
    TCP Port(USB1): 9100
    TCP Port(USB2): 9101
  Internet Printing Protocol
    URL(USB1): http://192.168.1.100/psc 1300 ser
    URL(USB2): None
  FTP File Server: enabled
    Passive Mode: on
    FTP Port: 21
  SANE Server: enabled
    SANE Port: 6566
  SMTP Protocol
    SMTP Server Name:
    Subject:
    Sender Address(From):
    Receiver Address(To):
    Cc:

USB Status
  USB1:
    Printer:
      - Name: psc 1300 ser
      - Model: hp psc 1300 series
      - Description:
    Scanner:
      - Name: hpaio:/usb/psc_1300_series?devic
      - Model: psc_1300_series
      - Description: multi-function peripheral
    Disk: none
  USB2:
    Printer: none
    Scanner: none
    Disk: none
```

2. **Maintenance**: Simultaneously press **Init** button and turn on (by plugging in the power adaptor) the Server until USB1 and USB2 LED indicators simultaneously blink. After that, the Server will do the following tasks:
   A. Perform a Factory Default of the MFP server, which will restore most of the parameters and settings to factory default values,
   B. Perform a TFTP server. You can upgrade new firmware using any TFTP client tool.

   Note: After performing the tasks mentioned above, you have to plug off the power adaptor and then power on the power adaptor to restart the Server.